



SERVICE MANUAL

Inverter Wall Mounted Single Split

Table of Contents

1.0 Inverter Single Split	1
1.1 Product line-up	1
1.2 Printed Circuit board (PCB) connector wiring diagram	2
1.3 Piping Length & Elevation	12
2.0 Function & Control	13
2.1 Temperature Control	13
2.2 Cooling and Heating Mode Operation	13
2.3 Fan Mode	14
2.4 Auto Mode	14
2.5 Cold Draft Prevention	15
2.6 Sleep Mode	15
2.7 ID-OD Communication	15
2.8 Thermistors in ARXN/RXN_L/M, RXB_B	16
2.9 Minimum Off Time Control	16
2.10 Auto Restart	17
2.11 Auto Random Restart	17
2.12 Four Way Valve Control	17
2.13 Outdoor Fan Control	18
2.14 Rotation Regulating Functions	18
2.15 Defrost Cycle	20
2.16 Indoor Coil Freeze Prevention	20
2.17 High Pressure Protection	20
2.18 Discharge Pipe Temperature Control	21
2.19 Oil Recovery Control (Applicable for ARXN/RXN_L)	21
2.20 Overall Current Control	22
3.0 Service Diagnosis	23
3.1 Error Indication from Indoor	23
3.2 Error Indication from Outdoor	24
3.3 Error code description for Inverter	27
4.0 Wiring Connection	54
5.0 Refrigerant Diagram	57
6.0 Appendix A	58

Safety Cautions

Cautions and Warnings

- Be sure to read the following safety cautions before conducting repair work.
- The caution items are classified into “⚠ **Warning**” and “⚠ **Caution**”. The “⚠ **Warning**” items are especially important since they can lead to death or serious injury if they are not followed closely. The “⚠ **Caution**” items can also lead to serious accidents under some conditions if they are not followed. Therefore, be sure to observe all the safety caution items described below.
- About the pictograms
 - △ This symbol indicates an item for which caution must be exercised.
The pictogram shows the item to which attention must be paid.
 - This symbol indicates a prohibited action.
The prohibited item or action is shown inside or near the symbol.
 - This symbol indicates an action that must be taken, or an instruction.
The instruction is shown inside or near the symbol.
- After the repair work is complete, be sure to conduct a test operation to ensure that the equipment operates normally, and explain the cautions for operating the product to the customer

Caution in Repair

 Warning	
Be sure to disconnect the power cable plug from the plug socket before disassembling the equipment for a repair. Working on the equipment that is connected to a power supply can cause an electrical shock. If it is necessary to supply power to the equipment to conduct the repair or inspecting the circuits, do not touch any electrically charged sections of the equipment.	
If the refrigerant gas discharges during the repair work, do not touch the discharging refrigerant gas. The refrigerant gas can cause frostbite.	
When disconnecting the suction or discharge pipe of the compressor at the welded section, release the refrigerant gas completely at a well-ventilated place first. If there is a gas remaining inside the compressor, the refrigerant gas or refrigerating machine oil discharges when the pipe is disconnected, and it can cause injury.	
If the refrigerant gas leaks during the repair work, ventilate the area. The refrigerant gas can generate toxic gases when it contacts flames.	
The step-up capacitor supplies high-voltage electricity to the electrical components of the outdoor unit. Be sure to discharge the capacitor completely before conducting repair work. A charged capacitor can cause an electrical shock.	
Do not start or stop the air conditioner operation by plugging or unplugging the power cable plug. Plugging or unplugging the power cable plug to operate the equipment can cause an electrical shock or fire.	

 Caution	
Do not repair the electrical components with wet hands. Working on the equipment with wet hands can cause an electrical shock.	
Do not clean the air conditioner by splashing water. Washing the unit with water can cause an electrical shock.	
Be sure to provide the grounding when repairing the equipment in a humid or wet place, to avoid electrical shocks.	
Be sure to turn off the power switch and unplug the power cable when cleaning the equipment. The internal fan rotates at a high speed, and cause injury.	
Do not tilt the unit when removing it. The water inside the unit can spill and wet the furniture and floor.	
Be sure to check that the refrigerating cycle section has cooled down sufficiently before conducting repair work. Working on the unit when the refrigerating cycle section is hot can cause burns.	
Use the welder in a well-ventilated place. Using the welder in an enclosed room can cause oxygen deficiency.	

Cautions Regarding Products after Repair

 Warning	
Be sure to use parts listed in the service parts list of the applicable model and appropriate tools to conduct repair work. Never attempt to modify the equipment. The use of inappropriate parts or tools can cause an electrical shock, excessive heat generation or fire.	
When relocating the equipment, make sure that the new installation site has sufficient strength to withstand the weight of the equipment. If the installation site does not have sufficient strength and if the installation work is not conducted securely, the equipment can fall and cause injury.	
Be sure to install the product correctly by using the provided standard installation frame. Incorrect use of the installation frame and improper installation can cause the equipment to fall, resulting in injury.	For integral units only
Be sure to install the product securely in the installation frame mounted on a window frame. If the unit is not securely mounted, it can fall and cause injury.	For integral units only
Be sure to use an exclusive power circuit for the equipment, and follow the technical standards related to the electrical equipment, the internal wiring regulations and the instruction manual for installation when conducting electrical work. Insufficient power circuit capacity and improper electrical work can cause an electrical shock or fire.	

 Warning	
Be sure to use the specified cable to connect between the indoor and outdoor units. Make the connections securely and route the cable properly so that there is no force pulling the cable at the connection terminals. Improper connections can cause excessive heat generation or fire.	
When connecting the cable between the indoor and outdoor units, make sure that the terminal cover does not lift off or dismount because of the cable. If the cover is not mounted properly, the terminal connection section can cause an electrical shock, excessive heat generation or fire.	
Do not damage or modify the power cable. Damaged or modified power cable can cause an electrical shock or fire. Placing heavy items on the power cable, and heating or pulling the power cable can damage the cable.	
Do not mix air or gas other than the specified refrigerant (R-410A) in the refrigerant system. If air enters the refrigerating system, an excessively high pressure results, causing equipment damage and injury.	
If the refrigerant gas leaks, be sure to locate the leak and repair it before charging the refrigerant. After charging refrigerant, make sure that there is no refrigerant leak. If the leak cannot be located and the repair work must be stopped, be sure to perform pump-down and close the service valve, to prevent the refrigerant gas from leaking into the room. The refrigerant gas itself is harmless, but it can generate toxic gases when it contacts flames, such as fan and other heaters, stoves and ranges.	
When replacing the coin battery in the remote controller, be sure to dispose of the old battery to prevent children from swallowing it. If a child swallows the coin battery, see a doctor immediately.	

 Caution	
Installation of a leakage breaker is necessary in some cases depending on the conditions of the installation site, to prevent electrical shocks.	
Do not install the equipment in a place where there is a possibility of combustible gas leaks. If a combustible gas leaks and remains around the unit, it can cause a fire.	
Be sure to install the packing and seal on the installation frame properly. If the packing and seal are not installed properly, water can enter the room and wet the furniture and floor.	For integral units only

Inspection after Repair

 Warning	
Check to make sure that the power cable plug is not dirty or loose, then insert the plug into a power outlet all the way. If the plug has dust or loose connection, it can cause an electrical shock or fire.	
If the power cable and lead wires have scratches or deteriorated, be sure to replace them. Damaged cable and wires can cause an electrical shock, excessive heat generation or fire.	
Do not use a joined power cable or extension cable, or share the same power outlet with other electrical appliances, since it can cause an electrical shock, excessive heat generation or fire.	

 Caution	
Check to see if the parts and wires are mounted and connected properly, and if the connections at the soldered or crimped terminals are secure. Improper installation and connections can cause excessive heat generation, fire or an electrical shock.	
If the installation platform or frame has corroded, replace it. Corroded installation platform or frame can cause the unit to fall, resulting in injury.	
Check the grounding, and repair it if the equipment is not properly grounded. Improper grounding can cause an electrical shock.	
Be sure to measure the insulation resistance after the repair, and make sure that the resistance is 1 Mohm or higher. Faulty insulation can cause an electrical shock.	
Be sure to check the drainage of the indoor unit after the repair. Faulty drainage can cause the water to enter the room and wet the furniture and floor.	

Using Icons

Icons are used to attract the attention of the reader to specific information. The meaning of each icon is described in the table below:

Using Icons List

Icon	Type of Information	Description
 Note:	Note	A “note” provides information that is not indispensable, but may nevertheless be valuable to the reader, such as tips and tricks.
 Caution	Caution	A “caution” is used when there is danger that the reader, through incorrect manipulation, may damage equipment, lose data, get an unexpected result or has to restart (part of) a procedure.
 Warning	Warning	A “warning” is used when there is danger of personal injury.
	Reference	A “reference” guides the reader to other places in this binder or in this manual, where he/she will find additional information on a specific topic.

1.0 Inverter Single Split

1.1 Product line-up

1.1.1 Indoor Unit

Nomenclature	Classification				
	Handset	PCB		Air Purification	Others
	BRC52A61	W_2_03C	W_2_04A	Saranet filter	Auto restart
FTXB50/60BV1B	x	x		x	x
FTXN25/35/50/60MV1	x		x	x	x
FTXN25/35/50/60MV1B	x		x	x	x
FTXN25/35/50/60MV1B9	x		x	x	x
ATXN25/35/50/60MV1B	x		x	x	x

1.1.2 Outdoor Unit


Nomenclature	Classification			
	Refrigerant control	Fin	Compressor	Others
	EXV	Hydrophilic (blue)	DC Inverter Swing	CE marking
RXB50/60BV1B	x	x	x	x
RXN25/35/50/60MV1	x	x	x	x
RXN25/35/50/60MV1B	x	x	x	x
RXN25/35/50/60MV1B9	x	x	x	x
ARXN25/35/50/60MV1B	x	x	x	x
RX50/60CGXV1	x	x	x	x

1.2 Printed Circuit board (PCB) connector wiring diagram

1.2.1 Indoor PCB: ATXN/FTXN25/35L/M


1.2.1.1 Main PCB

Item	Indication on PCB	Description
1	A1	Connector for fan motor
2	A2	Connector for swing motor
3	A3	Connector for fan motor feedback
4	A4	Fuse
5	A5	Varistor
6	A6	Connector for wired handset
7	A7	Connector for signal receiver PCB
8	A8	Connector for heat exchanger thermistor

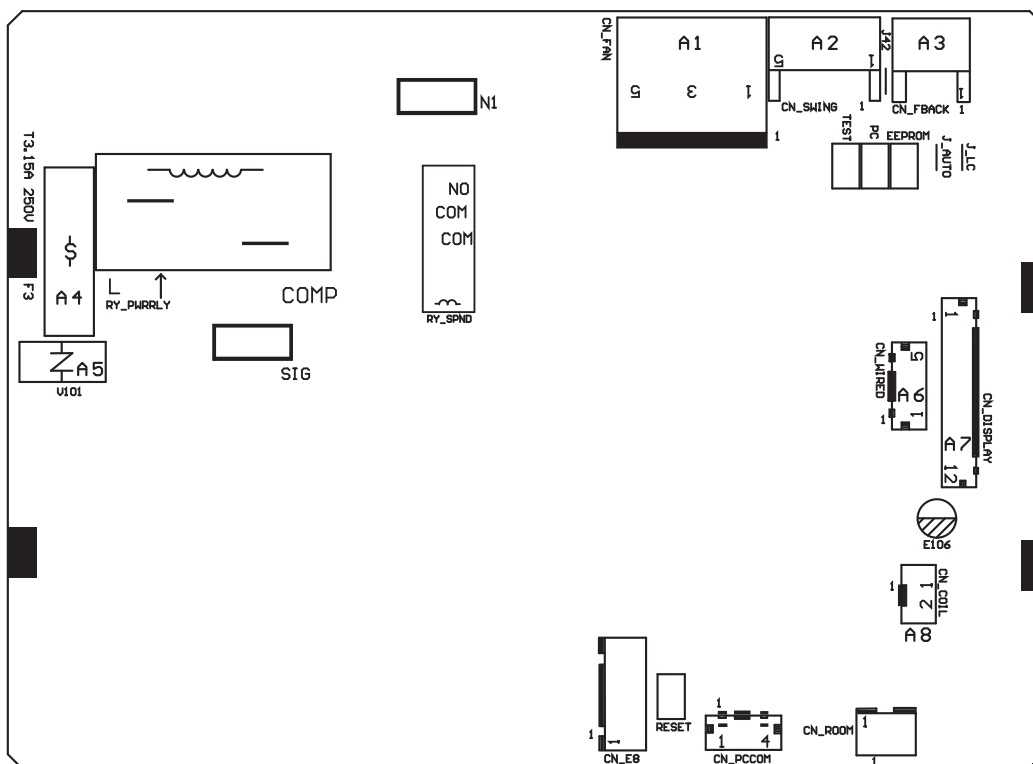

1.2.1.2 Signal board


Item	Indication on PCB	Description
1	A1	Operation ON/OFF switch
2	A2	Led for sleep (red)
3	A3	Led for timer (yellow)
4	A4	Led for operation
5	A5	Connector for control PCB

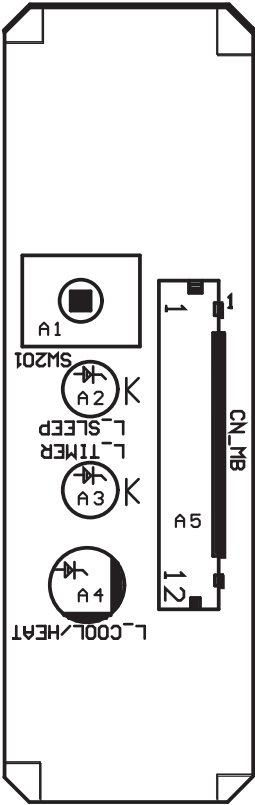

1.2.2 Indoor PCB: FTXB50/60B, ATXN/FTXN50/60L/M


1.2.2.1 Main PCB

Item	Indication on PCB	Description
1	A1	Connector for fan motor
2	A2	Connector for swing motor
3	A3	Connector for wired panel
4	A4	Connector for Signal Receiver PCB
5	A5	Connector for heat exchanger thermistor
6	A6	Varistor
7	A7	Fuse

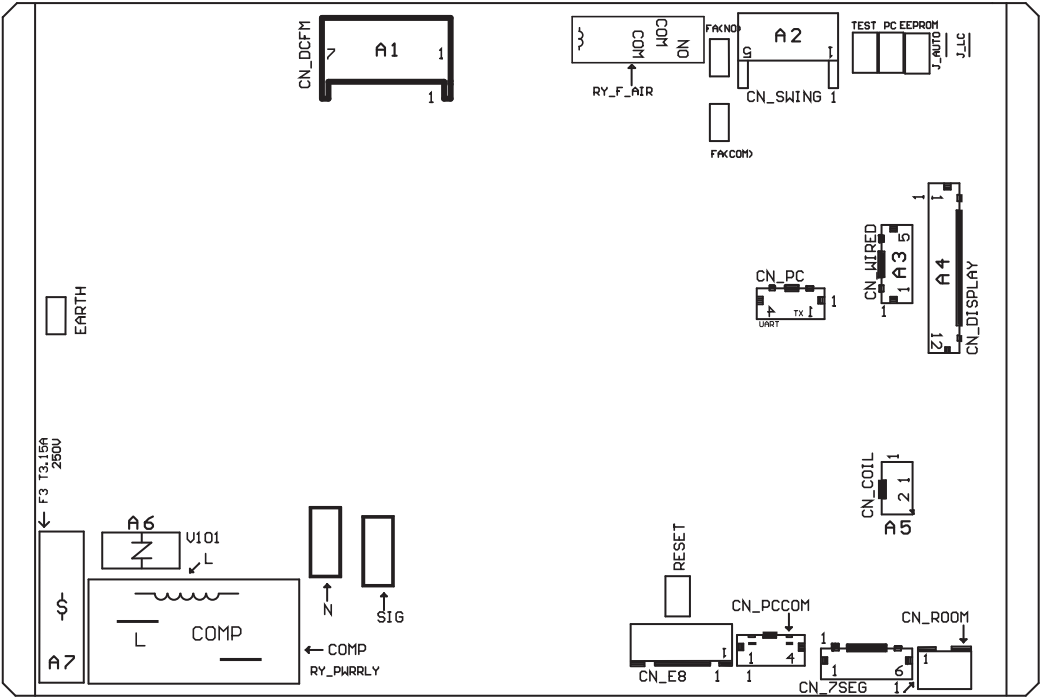

1.2.2.2 Signal board


Item	Indication on PCB	Description
1	A1	Connector for Control PCB
2	A2	LED for operation
3	A3	LED for timer (yellow)
4	A4	LED for sleep (red)
5	A5	Operation ON/OFF switch

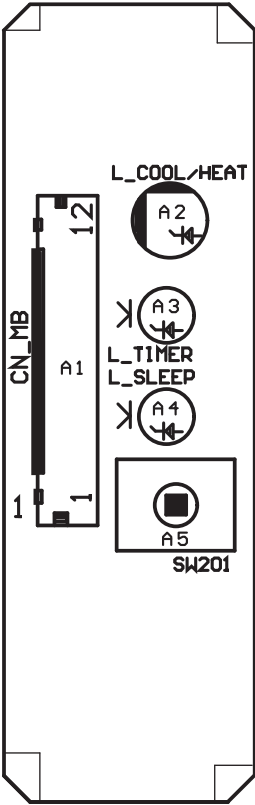

1.2.3 Outdoor PCB: ARXN/RXN25/35L/M


1.2.3.1 Filter PCB

Item	Indication on PCB	Description
1	S11	Connector for indoor PCB
2	FU3	Fuse (20A)
3	V2, V3	Varistor

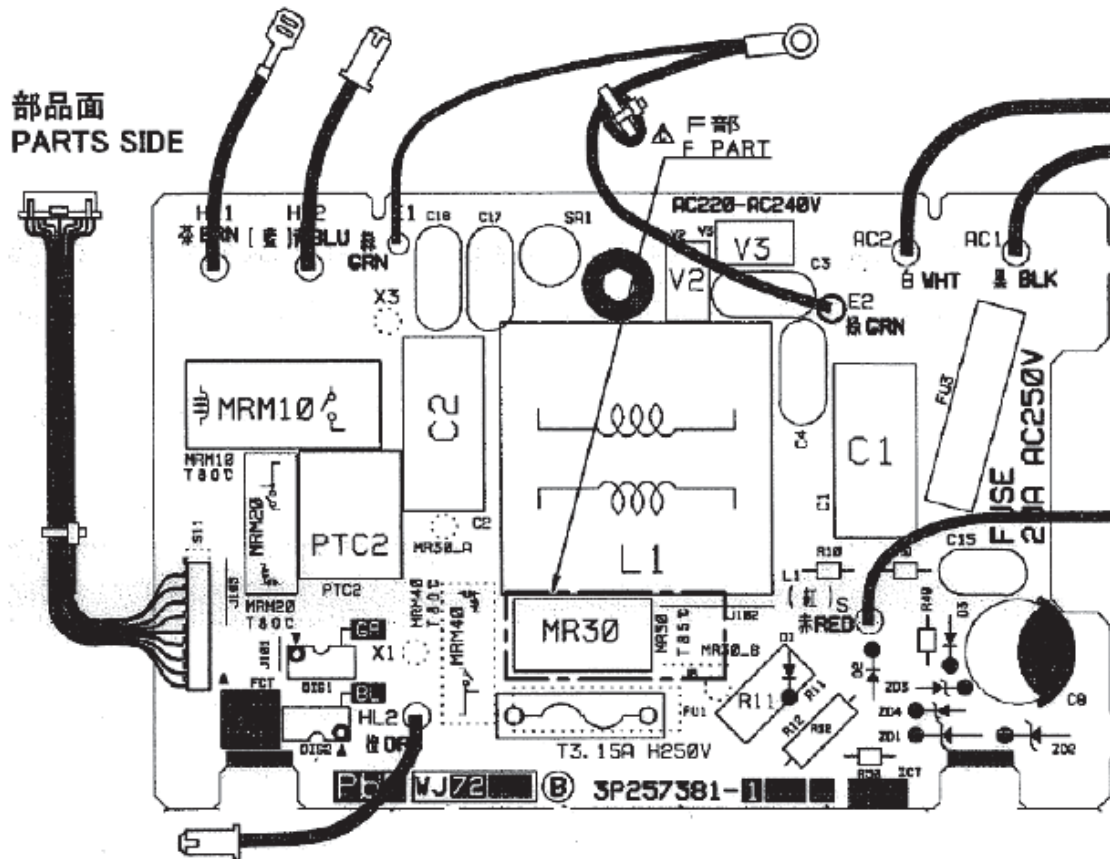

1.2.3.2 Main PCB


Item	Indication on PCB	Description
1	S10	Connector for filter PCB
2	S20	Connector for electronic expansion valve coil
3	S40	Connector for overload protector
4	S70	Connector for fan motor
5	S80	Connector for four way valve coil
6	S90	Connector for thermistors (outdoor temperature, outdoor heat exchanger, discharge pipe)
7	HL3, HN3	Connector for filter PCB
8	FU1, FU2	Fuse (3.15A)
9	LED A	Service monitor LED (green)
10	V1	Varistor

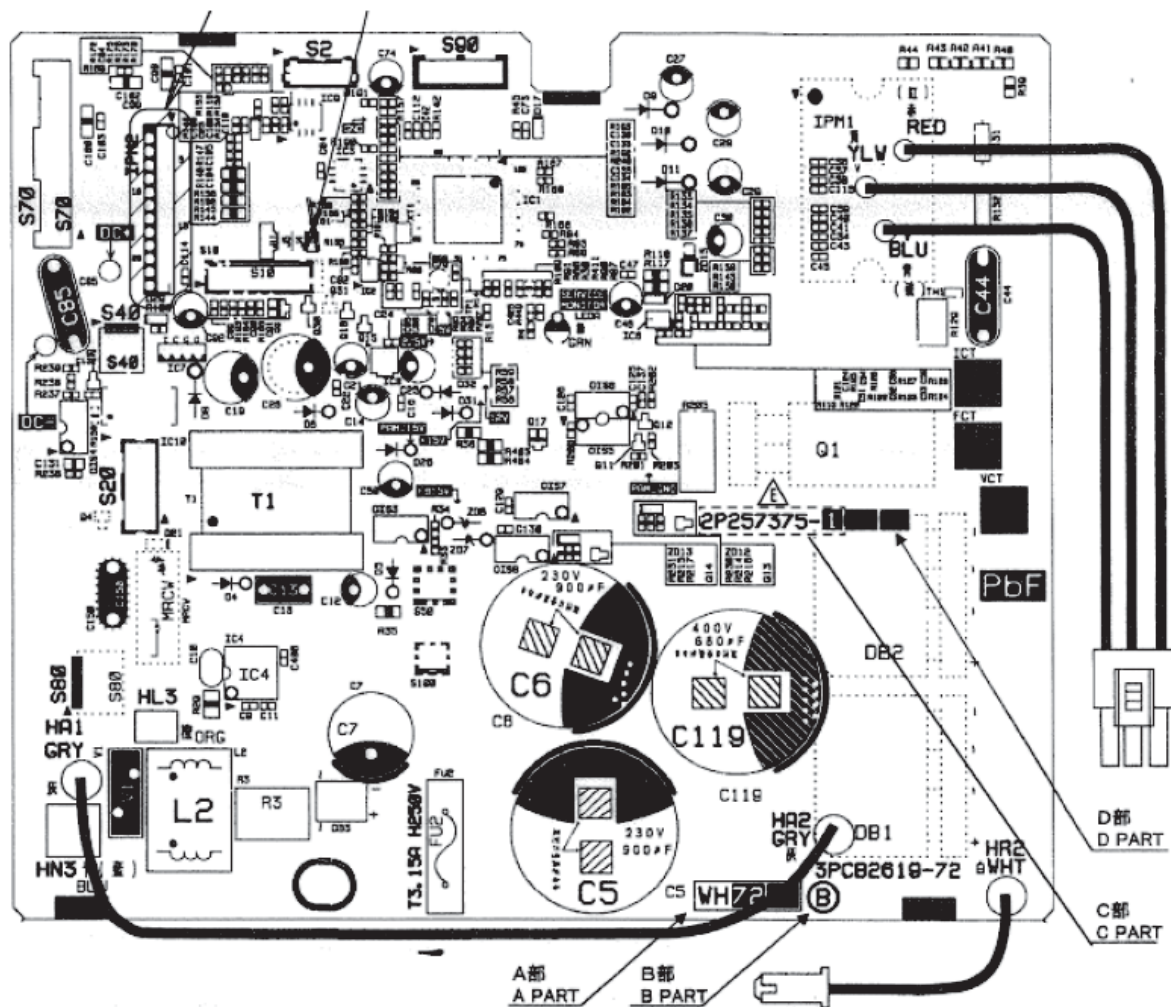

1.2.4 Outdoor PCB: RXB50/60B, ARXN/RXN50/60M

1.2.4.1 Filter PCB


Item	Indication on PCB	Description
1	S11	Connector for S10 on main PCB
2	HL1, HN1, S	Connector for terminal board
3	E1, E2	Terminal for earth wire
4	HL2, HN2	Connector for HL3 HN3 on main PCB
5	HL4, HN4	Connector for S12 on main PCB
6	FU1	Fuse (3.15A, 250V)
7	FU3	Fuse (30A, 250V)
8	V2, V3	Varistor

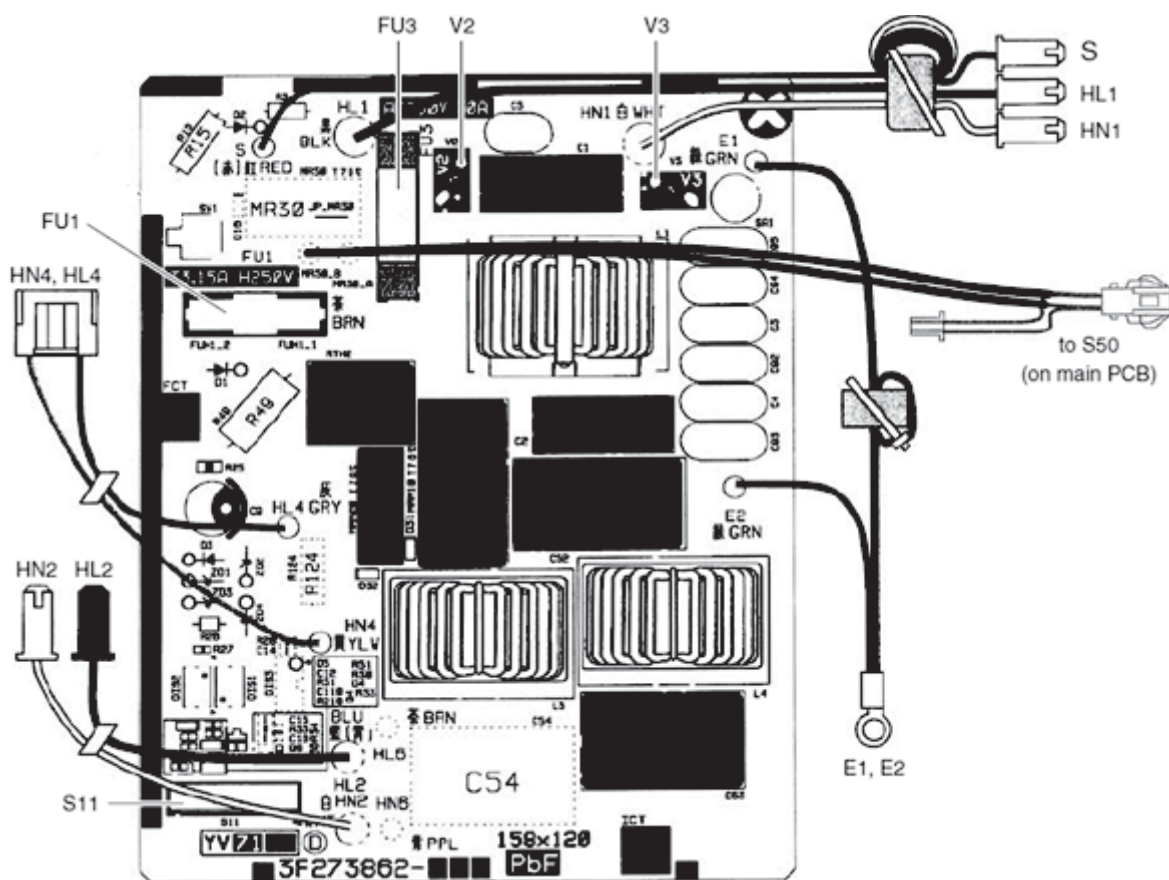

Filter PCB RXN50/60MV1B9

1.2.4.2 Main PCB


Item	Indication on PCB	Description
1	S10	Connector for S11 on filter PCB
2	S12	Connector for HL4 HN4 on filter PCB
3	S20	Connector for electronic expansion valve coil
4	S40	Connector for overload protector
5	S50	Connector for magnetic relay
6	S70	Connector for fan motor
7	S80	Connector for four way valve coil
8	S90	Connector for thermistors (outdoor temperature, outdoor heat exchanger, discharge pipe)
9	HL3, HN3	Connector for HL2 HN2 on filter PCB
10	U, V, W	Terminal for compressor
11	FU2	Fuse (3.15A, 250V)
12	LED A	LED for service monitor (green)
13	V1	Varistor

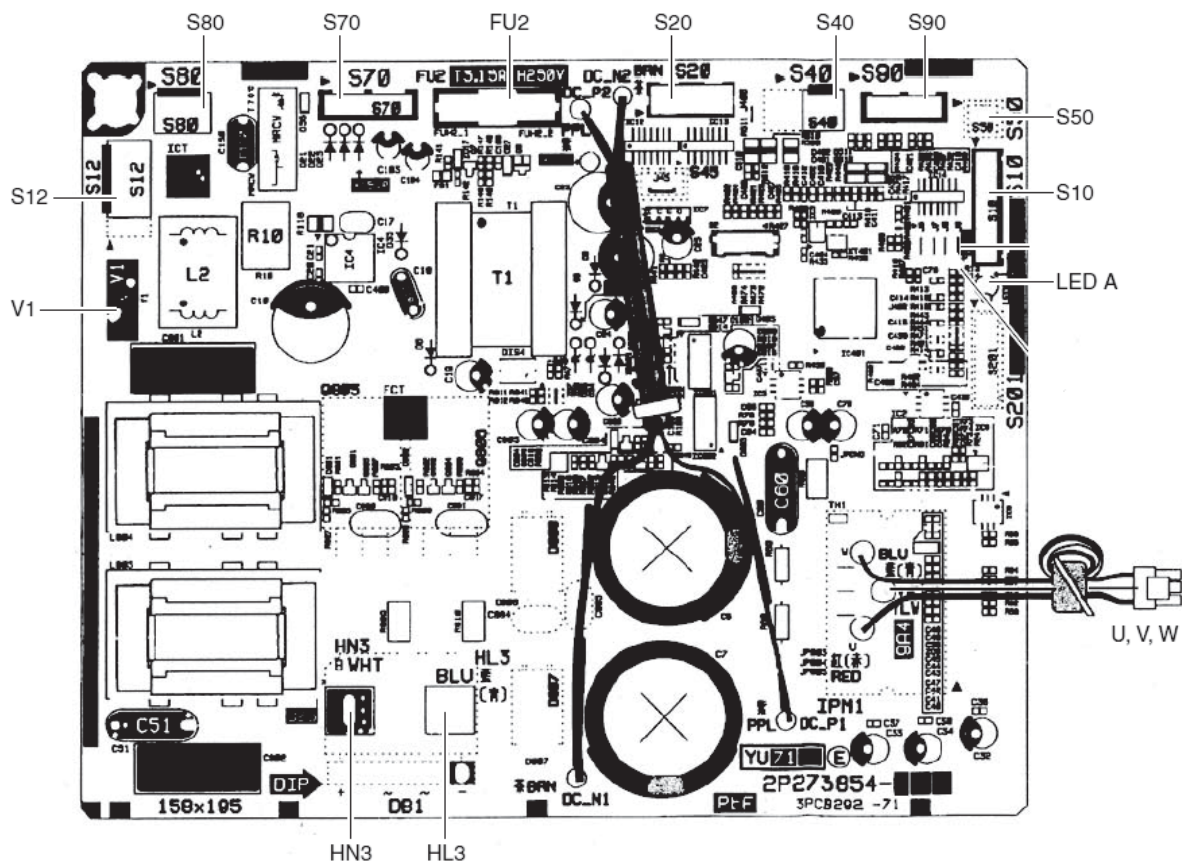

1.2.5 Outdoor PCB: ARXN/RXN50/60L


1.2.5.1 Main PCB

Item	Indication on PCB	Description
1	A1	Connector for IPM PCB
2	A2	Connector for heat sink thermistor
3	A3	Connector for thermistors (outdoor air, heat exchanger, discharge pipe)
4	A4	Connector for electronic expansion valve coil
5	A5, A6	Connector for display PCB
6	A7	Connector for four way valve coil
7	A8	Connector for fan motor
8	A9	Fuse
9	A10, A11, A12, A13	Varistor

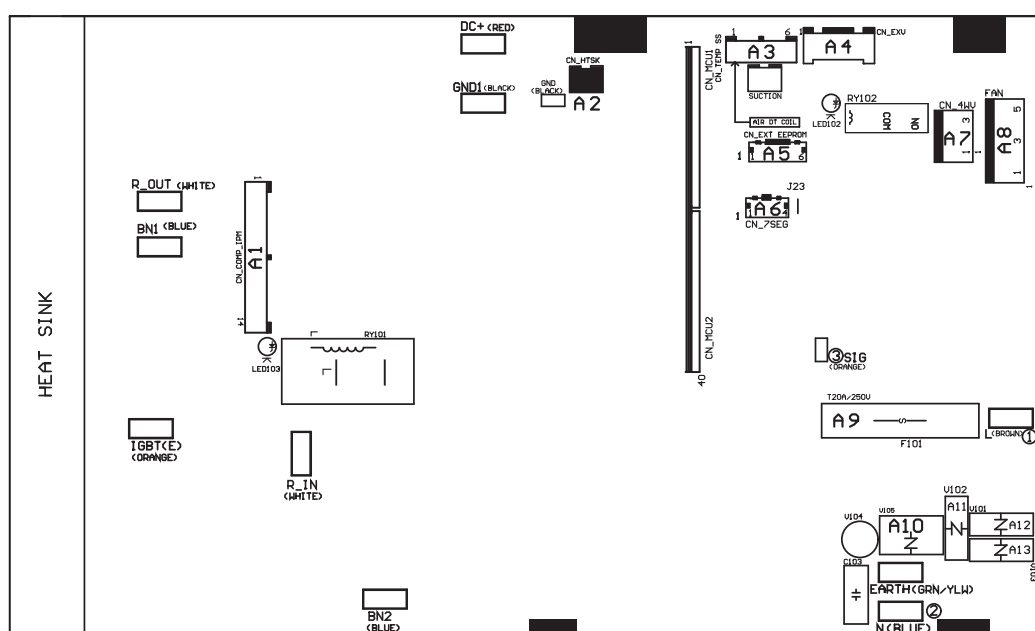


1.2.5.2 IPM board

Item	Indication on PCB	Description
1	A1, A2, A3	Connector to compressor

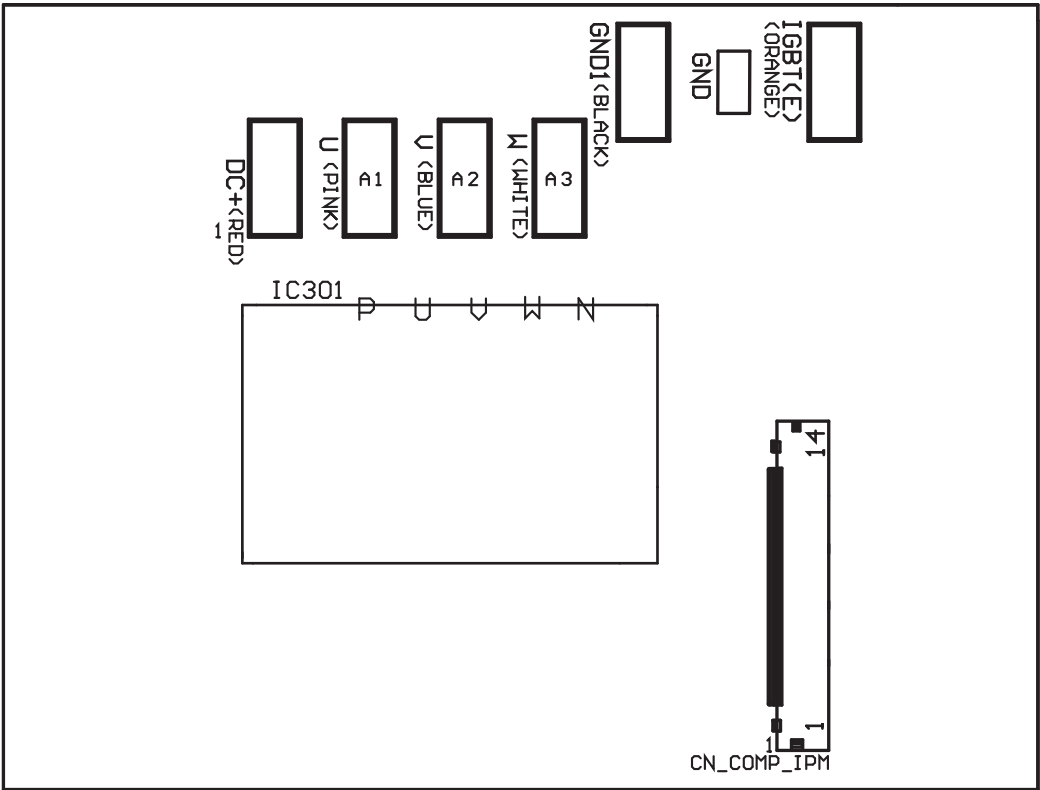

1.2.5.3 Display board

Item	Indication on PCB	Description
1	A1	Connector to control PCB
2	A2	7 segment display

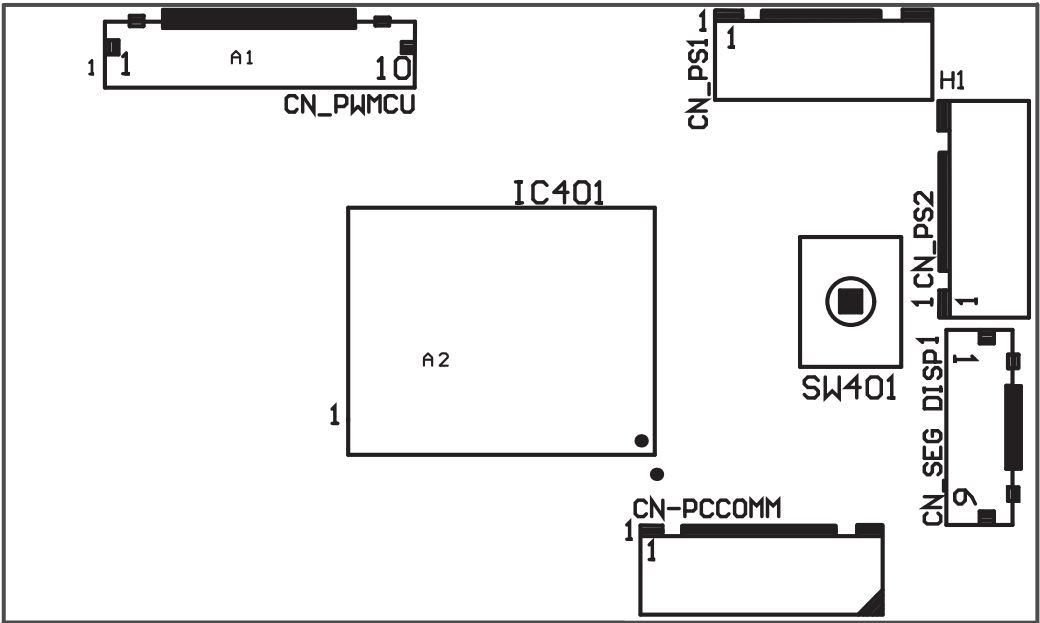


1.3 Piping Length & Elevation

Model	Max. total piping length (m)	Max. height difference (m)	Pre-charge for up to piping length (m)	Additional charge (g/m)
ARXN/RXN25M	20	10	7.5	20
ARXN/RXN35M	20	10	7.5	20
ARXN/RXN50M RXB50B RX50CG	30	10	7.5	20
ARXN/RXN60M RXB60B RX60CG	30	10	7.5	20

2.0 Function & Control

2.1 Temperature Control

Temperature detected by room temperature thermistor (either on the unit or on wired panel). Set temperature is select by user using wireless handset or wired handset.

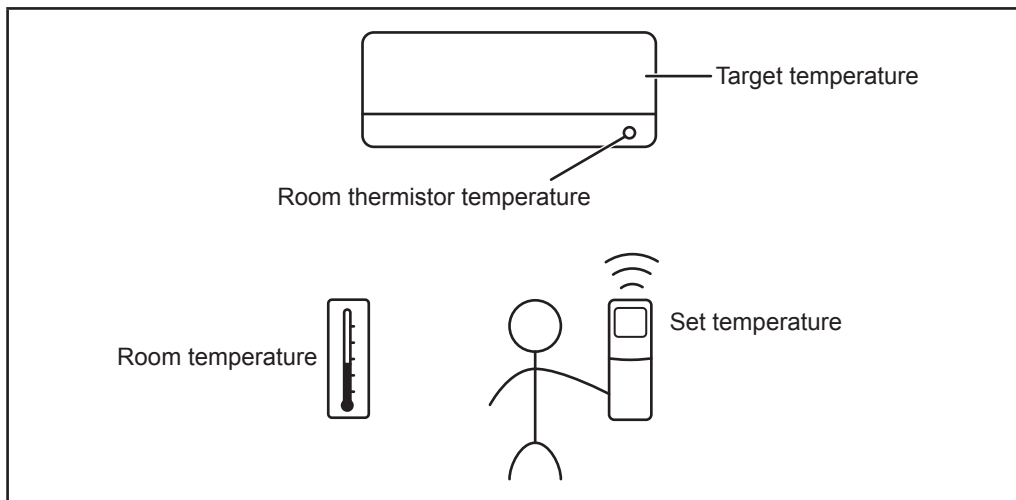

2.2 Cooling and Heating Mode Operation

The system has 5 operating modes. The mode selection is done from indoor using handset. The operating modes are:

- Cool
- Heat
- Fan
- Auto
- Dry

2.2.1 Cooling Mode

When $Tr \geq Ts + 1.5^{\circ}\text{C}$

- Compressor, Indoor Fan and Outdoor Fan ON.


When $Tr \leq Ts - 2^{\circ}\text{C}$

- Compressor and Outdoor Fan OFF. Indoor Fan remained ON.

Tr = Room Temperature

Ts = Set Temperature

When cooling load is too small and the room temperature still falling below compressor cut off point, compressor will stop.

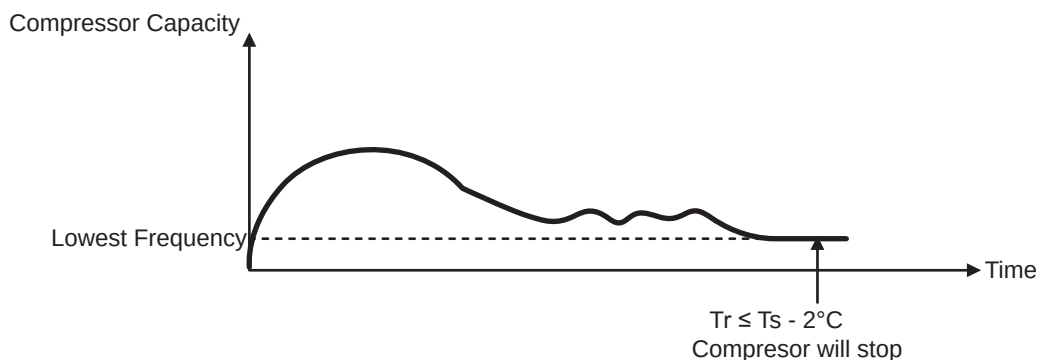

2.2.2 Heating Mode:

When $T_s > T_r - 1.0^\circ\text{C}$

- Compressor, Indoor Fan and Outdoor Fan ON.


When $T_s \leq T_r - 1.5^\circ\text{C}$

- Compressor and Outdoor Fan OFF. Indoor Fan remained ON.
- Indoor Fan off if indoor coil $\leq 20^\circ\text{C}$.

T_r = Room Temperature

T_s = Set Temperature

When heating load is too small, and the room temperature still rising above compressor cut off point, compressor will stop.

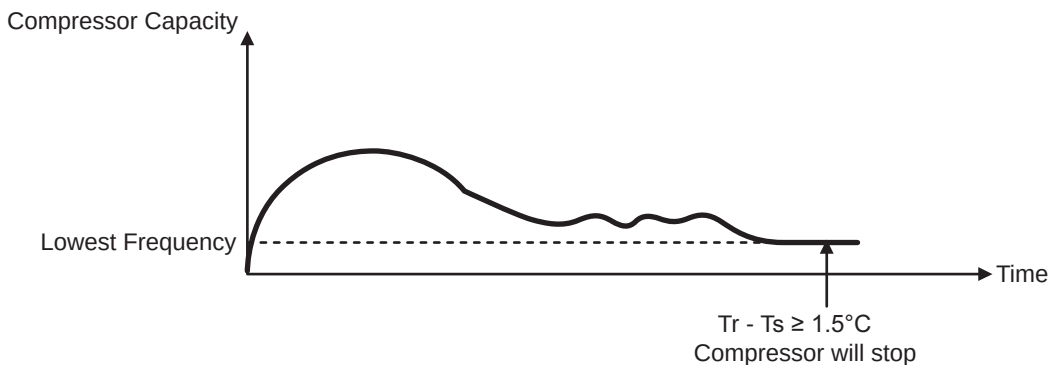

2.3 Fan Mode

- Compressor and Outdoor Fan OFF. Indoor Fan remained ON.
- Only High, Medium and Low fan speeds are allowed.
- When changing cool mode to fan mode, the compressor will stop and OD fan stops based on fan OFF control.
- Compressor only ON if the minimum stop time is > 3 minutes and the user change back to cool mode.
- Fan speed will maintain same as during fan mode.

2.4 Auto Mode

Automatic Cooling / Heating Function

When the automatic operation is selected with the remote controller, the microcomputer automatically determines the operation mode as cooling or heating according to the room temperature and the set temperature at start-up.

The unit automatically switches the operation mode to maintain the room temperature at the set temperature.

For heat pump only

Mode switching point:

- From Heating to Cooling
 $T_r \geq T_s + 2.5$
- From Cooling to Heating
 $T_r \leq T_s - 2.5$

During initial operation

- Cooling operation: $T_r > T_s$
- Heating operation: $T_r < T_s$

2.5 Cold Draft Prevention


During each thermal cut in cycle, the indoor fan speed will modulate according to the indoor coil temperature.

- If indoor coil temperature $> 36^\circ\text{C}$, indoor fan will run at user set fan speed.
- If indoor coil temperature $< 15^\circ\text{C}$, indoor fan will stop.
- If indoor coil temperature $15^\circ\text{C} < X < 36^\circ\text{C}$, the indoor fan will run at low speed

2.6 Sleep Mode

SLEEP Mode can be activated by pressing from the remote controller to keep the thermal comfort during sleeping.


SLEEP Mode continues operation at the target temperature for the first one hour, then automatically raises the target temperature slightly in the case of cooling, or lowers it slightly in the case of heating. This prevents excessive cooling in summer and excessive heating in winter to ensure comfortable sleeping conditions, and also conserves electricity.

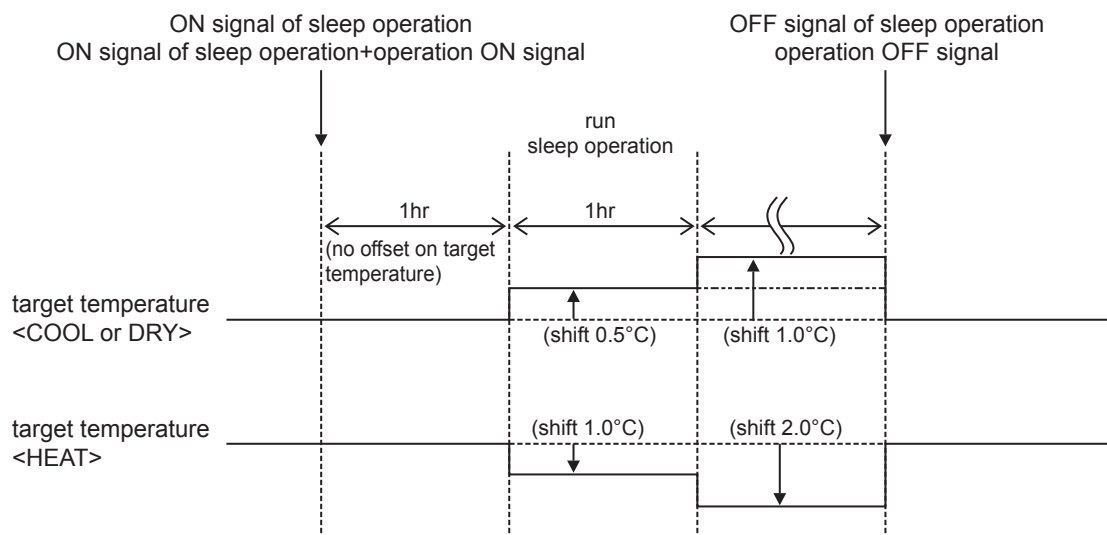

2.7 Indoor-Outdoor Communication


Master by outdoor unit.

Indoor controller board will transmit signal to outdoor controller board every 0.5s. Outdoor unit will response to indoor once the valid data is received.

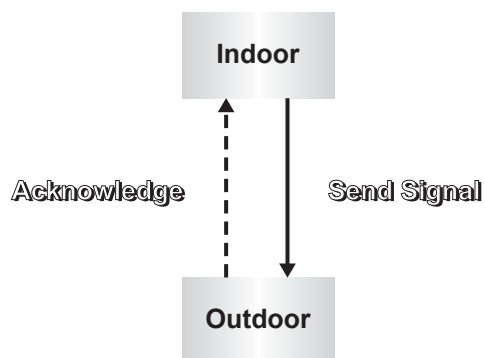

If the data communication line between indoor and outdoor disrupted for 15s continuously, compressor will stop, Outdoor fan stop with fan OFF timer. Indoor LED blinks error. If the communication resumes within 15s, error code is clear and compressor restarts after 3 minutes. If the communication does not resume after 15s, unit unable to restart and the error keep blinking.

2.8 Thermistors in ARXN/RXN_L/M, RXB_B

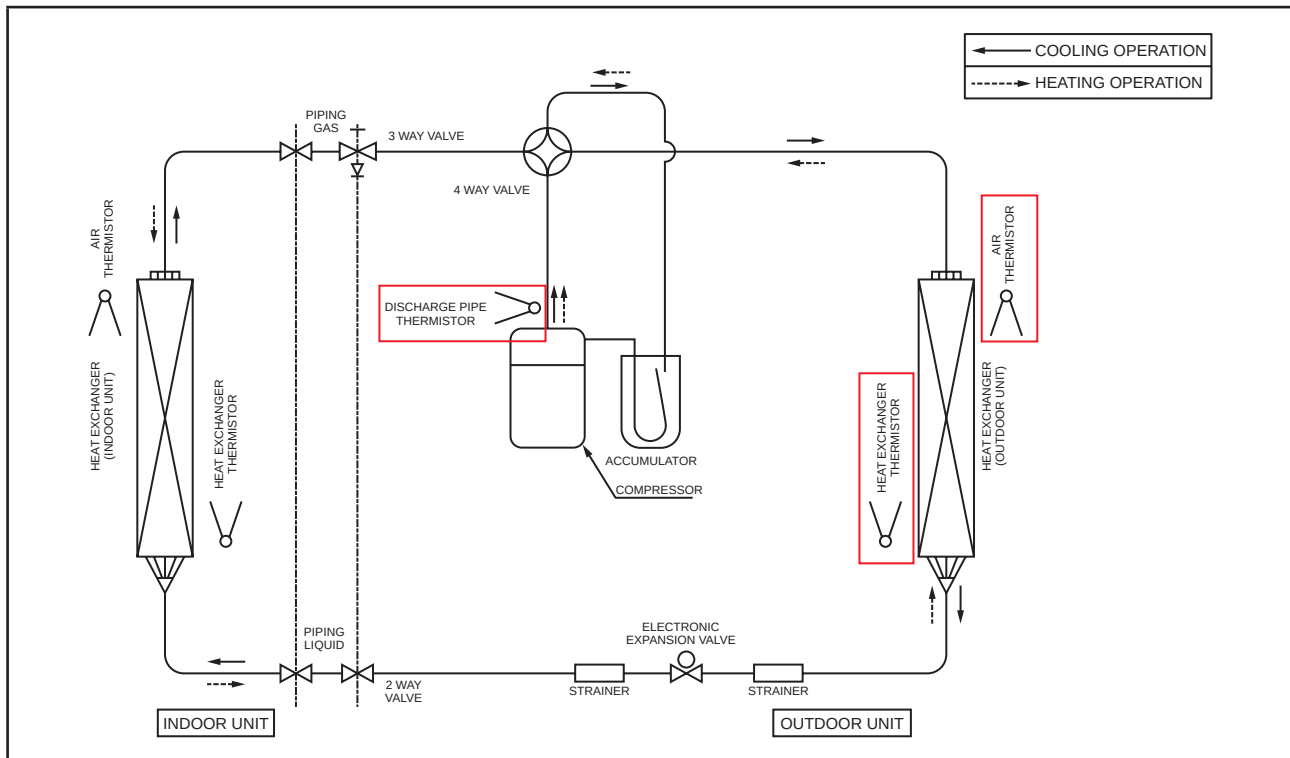

Functions of Thermistor

Thermistor	Functions
Discharge pipe	Used for discharge superheat (SH) & Electronic Expansion Valve (EXV) control.
Outdoor coil	Used for defrost control. Also used for inverter current protection control in Series II.
Outdoor air	Used for defrost & outdoor fan speed control. Also used for overall current protection & preheating operation control.
Heat sink	Used for capturing heat sink temperature. (Applicable for Daikin controller)
Suction pipe	Used for Electronic Expansion Valve (EXV) & suction pipe (SH) protection control in heating.

2.9 Minimum Off Time Control

To prevent frequent compressor ON/OFF & to allow pressure equalization

- The compressor will be on 3 minutes stand-by after turning OFF before it is allowed to turn ON.
- OD fan OFF delay to improve pressure equalization & to prevent refrigerant from entering into evaporator.

2.10 Auto Restart

Factory pre-set.

Allow unit to automatically resume the same operating mode it was in before a power failure.

2.11 Auto Random Restart

Unit restarts automatically in 64 different recovery timing patterns (within 180 seconds to 244 seconds) and operate based on the previous setting (operating mode, temperature setting and fan speed).

To disable the auto random restart function, kindly cut off the jumper J_AUTO as highlighted in attachment. Please be informed that after disable auto random restart, unit is not able to restart with last state memory after power resume from failure. Unit will revert to default setting as below:


Default setting

Unit: Off

Temperature: 24°C

Fan speed: High

Mode: Cooling

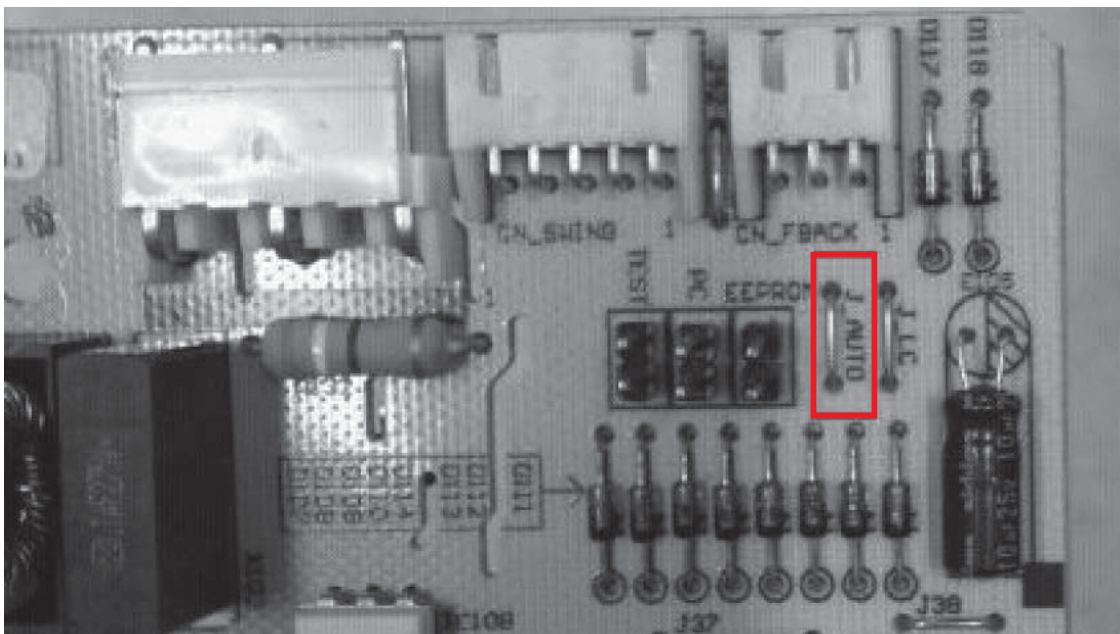

2.12 Four Way Valve Control

Change over switching is only carried out during operation.

OFF delayed is applied when the coil switches from ON to OFF.

Operating mode	4-way valve is
Heat, except for defrost	ON
Cool Dry Defrost	OFF

2.13 Outdoor Fan Control

Determine from


- Compressor target rotation: higher fan speed with higher rotation.
- Outdoor air temperature.

Cool mode: Higher fan speed with higher outdoor air temperature.

Heat mode: Higher fan speed with lower outdoor air temperature.

When compressor stops, fan OFF delay 30 seconds is carried out

2.14 Rotation Regulating Functions

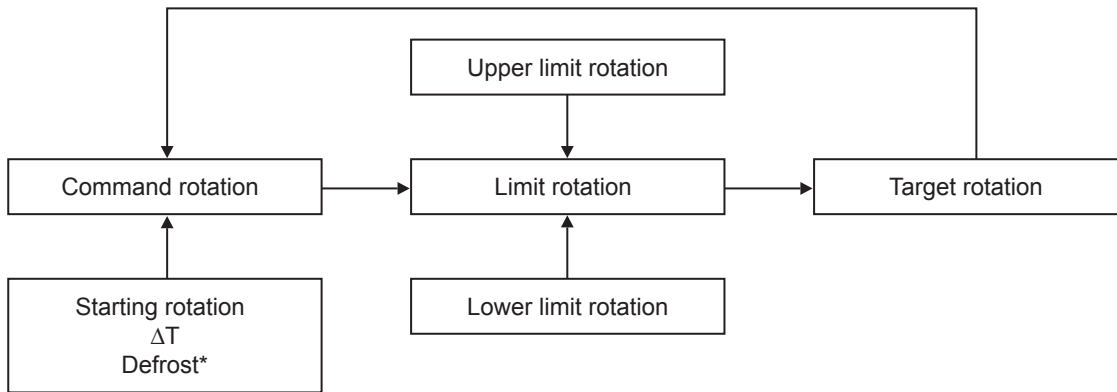

* Defrost control for heat pump model only

2.14.1 Starting Rotation


Starting Control

To avoid excessive oil discharge from compressor or to promote oil lubrication during startup.

To prevent liquid flood back to the compressor.

To limit starting current.

When compressor starts to rotate from OFF to ON, compressor rotation is set to run gradually to each upper limit at a specific timer setting.

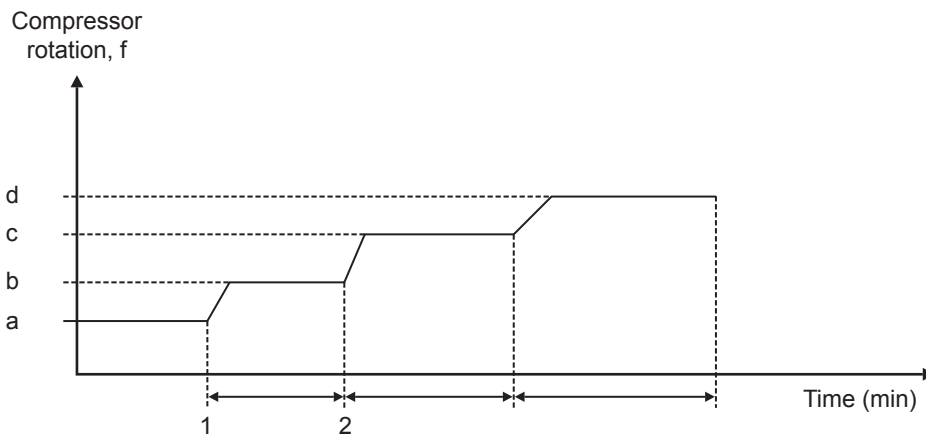

Model	a Hz (Time, s)	b Hz (Time, s)	c Hz (Time, s)	d Hz (Time, s)	Max Hz (Time, s)
ARXN/RXN25/35L/M	38 (60)	52 (120)	66 (120)	80 (120)	94 (120)
ARXN/RXN50/60_L RX50/60CG	35 (60)	55 (120)	75 (360)	-	-
ARXN/RXN50/60M RXB50/60B	38 (60)	52 (120)	66 (120)	80 (120)	94 (120)

2.14.2 Command Rotation


Cut in upon termination of Starting Control.

Achieve capacity control by controlling the compressor rotation based on:

- Temperature difference between set and room temperature, ΔT .
- Limit Rotation.
- Defrost control.

2.14.3 Fuzzy Control

Based on temperature difference, ΔT , current fan speed setting & current indoor operating mode at every 30 seconds interval.

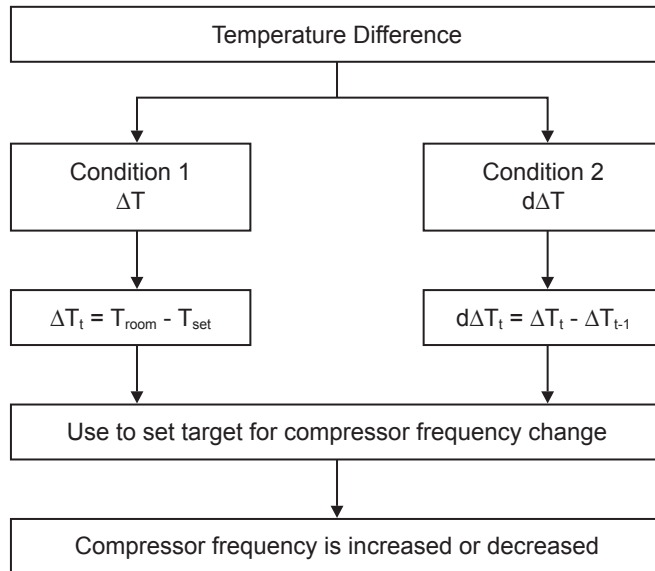

2.14.4 PI Control

Based on P control & I control.

P control: ΔT of each indoor is calculated at every sampling time of 20s and compressor rotation is adjusted according to the difference from the previously calculated rotation.

I control: if the operating frequency is not changed more than a certain fixed time:

- If $\Sigma \Delta T$ is small : lower frequency.
- If $\Sigma \Delta T$ is large : increase frequency.

2.14.5 Limit Rotation

Determine from

- Upper limit rotation

A minimum value was determined among the upper limits rotation, i.e. protection controls.

- Lower limit rotation

A maximum value was determined among the lower limits rotation, i.e. protection controls.

Generally, compressor rotation is controlled within 5 zones: stop, drop, keep, up and reset subjected to a particular operating temperature/current/pressure.

Zone	Control
Stop	Compressor is stopped when a certain limit reaches the stop zone for abnormality correction.
Drop	Frequency will be dropped with a timer setting.
Keep	Frequency is maintained at lower/upper limit.
Up	Frequency will be increased with a timer setting.
Reset	Frequency lower/upper limit is canceled and returned to command rotation.

2.15 Defrost Cycle

During defrost	All models
Compressor	ON
4-way valve	OFF
EXV in operation room	Fixed opening
Outdoor fan	OFF
Indoor fan	OFF

Condition for entering defrost

- Compressor minimum run time – 6 minutes OR
- Compressor accumulated run time of 45 minutes if Outdoor coil $< 3^{\circ}\text{C}$.

Condition for terminating defrost

- OD coil $> 12^{\circ}\text{C}$ or
- Total defrost timer of 650 seconds.

2.16 Indoor Coil Freeze Prevention

Only available in cooling mode.

When the indoor coil temperature $< 2^{\circ}\text{C}$, the compressor starts to drop the frequency.

This protection will cut in when:

- Indoor coil temperature $< 0^{\circ}\text{C}$ for more than 180s. Compressor will stop, OD fan stop after 30s and indoor fan can only run at lowest fan speed.


The unit can only be restarted after 3 minutes.

When the indoor coil temperature $> 13^{\circ}\text{C}$, the compressor frequency will be reset based on the OD ambient, room and set temperature.

2.17 High Pressure Protection

To prevent high pressure in the system.

Compressor operating frequency is adjusted based on upper limit of coil temperature.

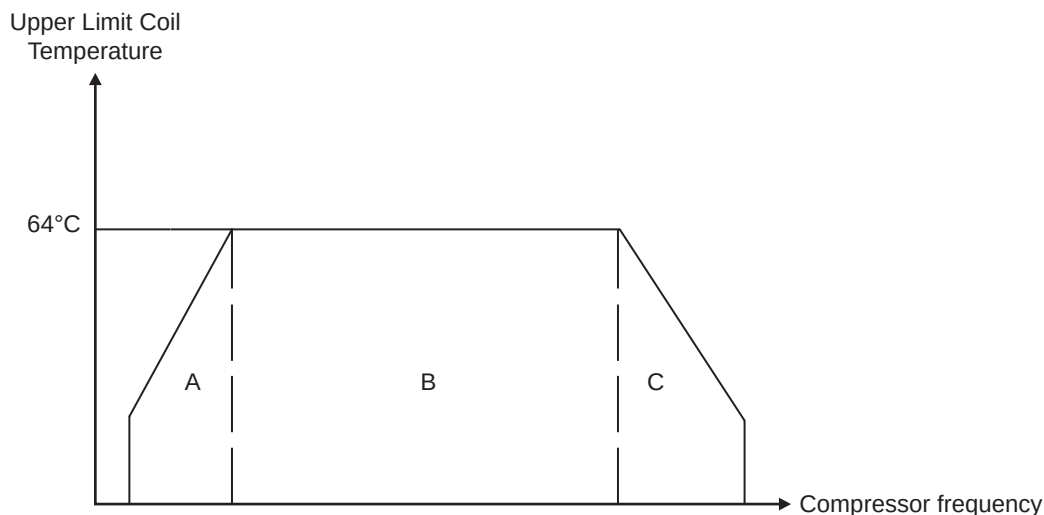

The compressor frequency is adjusted based on coil temperature:

- During cooling mode : outdoor coil temperature.
- During heating mode : indoor coil temperature.


This protection is activated when the coil temperature $> 64^{\circ}\text{C}$, the compressor stop and OD fan stop after 30s. The unit can only be restarted after 3 minutes.

2.18 Discharge Pipe Temperature Control

Used as a measure of the compressor's internal temperature.

Compressor frequency is control to keep this temperature from going up further when it rises above a certain level.

Discharge temperature

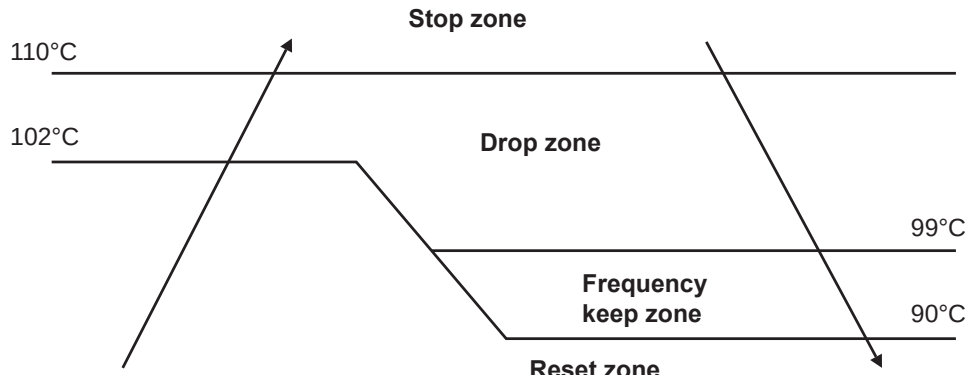

If compressor discharge temperature $> 102^{\circ}\text{C}$ for the first time, this control starts and set the current frequency as upper limit. At the same time, running frequency start to reduce by 1 step and so on, until temperature falls between 99°C and 90°C at the maintain zone.

This protection is activated when the compressor discharge temperature $> 110^{\circ}\text{C}$. The compressor will stop and considered trip.

If the compressor discharge temperature $< 90^{\circ}\text{C}$, the compressor frequency will be reset based on the OD ambient, set and room temperature.

2.19 Oil Recovery Control (Applicable for ARXN/RXN50/60L)

When the compressor operates for certain duration at low frequency, the oil level in the compressor may become low due to incomplete oil return.

To prevent damage to the compressor or compressor lock due to low oil level.

To promote refrigerant flow to carry the oil back to the compressor.


Entering condition:

- Compressor rotation < 35 Hz, at the end of a 20 minutes timer: set lower limit rotation to 35 Hz & EXV opening is fixed at current opening + 50 pulse. This control is reset when rotation > 35 Hz.

2.20 Overall Current Control

To monitor the overall current and to restrict the compressor upper limit rotation in order to prevent circuit breakers from exceeding the rated capacity.

Detected during compressor running.

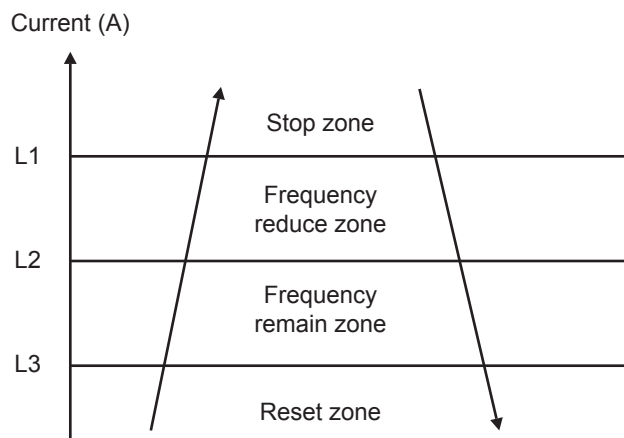

Model	L1
ARXN/RXN25/35L/M	14.0A
ARXN/RXN50/60_L	12.0A
ARXN/RXN50/60M RXB50/60B RX50/60CGXV1	16.5A

When the input current for running compressor exceeds L2, running frequency will be reduced by 1 step. If current still exceeds L2, frequency will be reduced by another 1 step until total current falls between L2 and L3.


This protection cut in when the input current exceeds L1 for 2 seconds. Compressor will stop and it is considered total current overload.

If input current < L3, the compressor frequency is reset based on the OD ambient, set and room temperature.


3.0 Service Diagnosis

3.1 Error Indication from Indoor

- When any error occurs, indoor LED display will keep blinking (green light)
- The blinking pattern does not indicate error details
- The error details need to retrieve from handset in error code form.(Refer 3.1.1)

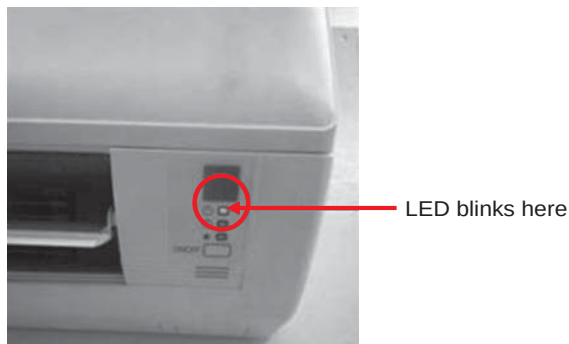


3.1.1 Error Code retrieved by wireless handset BRC52A61

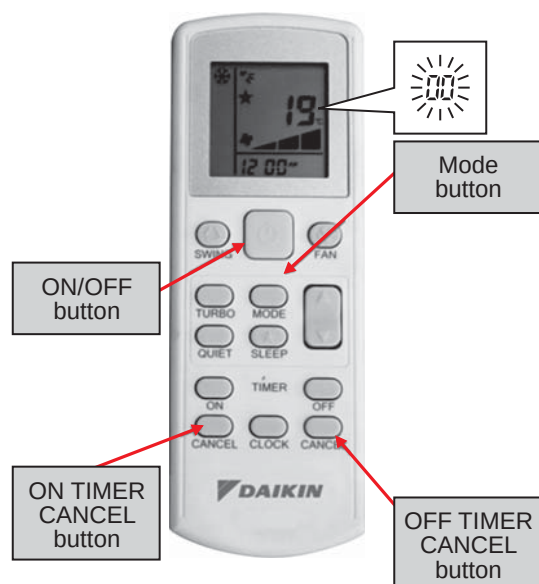

Operating Guide

1. Hold down ON TIMER CANCEL or OFF TIMER CANCEL for 5 seconds until "00" indication flashes on the handset temperature display section.
2. Then, press the same button repeatedly. A series of error code will appear until ID buzzer produces a long beep. The corresponding error code is indicated on the handset temperature display section.

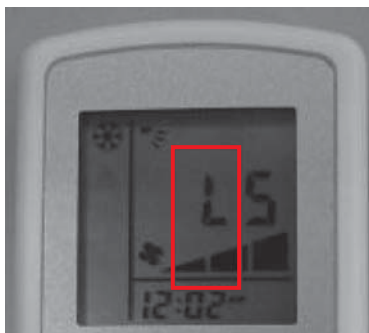

3. ID unit buzzer will produce a long beep if the handset error code matched with unit error.
4. A short and two consecutive beeps is not the unit error. For two consecutive beeps, it indicates either the alphabet or number is correct,
5. The code display will cancel itself if the button is not pressed for 1 minute.

3.1.2 Last State Error retrieved by wireless handset BRC52A61

Operating Guide


1. Remove battery from remote controller.
2. Replace battery again into remote controller.
3. Press Mode & ON/OFF buttons together.
4. The "E" will show at temperature section.
5. Press Mode button to 5:00.
6. Press Power On toward the indoor unit. Unit LED blinks two times indicate received signal.
7. ON hold fan button till screen become normal display.
8. Repeat the normal step to retrieve error. (by using remote controller step. Holding TIMER CANCEL...)
9. By using this method, the error shown will be Last State Error. (Previous error in this unit)

3.1.3 Error Code retrieved by wired handset BRC52A61

The error will show at the LCD display.

BRC51A61 can retrieve last state memory by:



- Press SLEEP & TIMER ACTIVE simultaneously for 5 seconds and the error will be flashed.

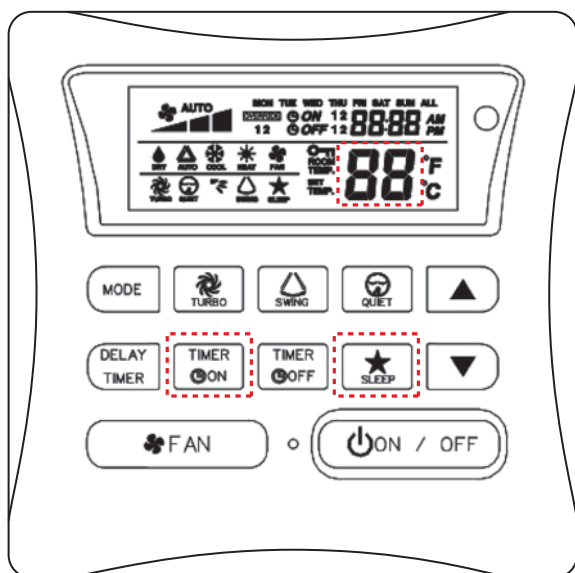

3.2 Error Indication from Outdoor

3.2.1 ARXN/RXN50/60L, RX50/60CGV1 -7 Segment Display

It is located inside outdoor unit control panel beside the terminal block. Control panel cover have to remove before access to the 7 segment display.

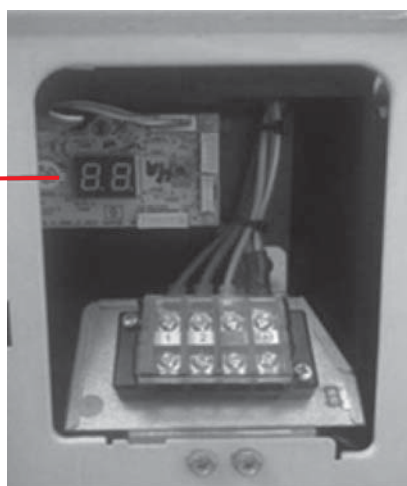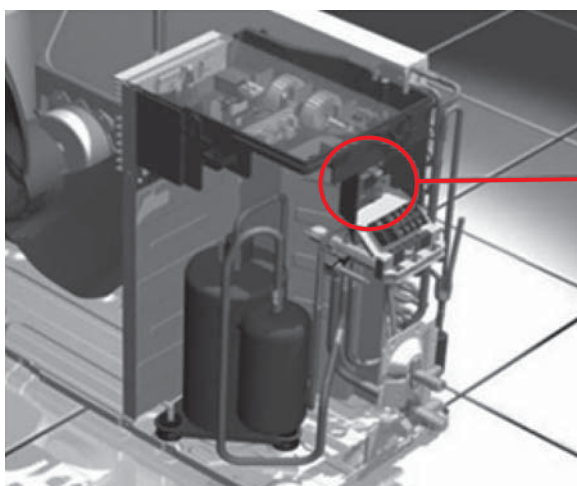

When there is no error, compressor running frequency is displayed.

When there is error, it flashes the error code as below:



Normal operation



Flashing Error Code

In addition, 7 segment also can be use to retrieve unit operating condition such as running current, DC voltage, ambient temperature, indoor air temperature, etc.

By pressing the tact switch, the 7 segment will start to flash from "00". Press again, it will show "01" and subsequent running number shows the parameter number.

Then, the 7 segment will flash again showing the parameter measurement.

When the 7 segment display is left untouched for 5 min, the display will light off (Dim).

Parameter Number	Parameter Description	Unit/Range
00	Compressor Actual Rotation	r/s
01	Compressor Target Rotation	r/s
02	DC Bus Voltage	VDC
03	Total Current (x10)	A
04	Outdoor Air Temperature	°C
05	Outdoor Heat Exchanger Temperature	°C
06	Compressor Discharge Temperature	°C
07	Outdoor Heatsink Temperature	°C
08	Indoor Air Temperature	°C
09	Indoor Heat Exchanger Temperature	°C
10	Electronic Expansion Valve Opening	Pulse
41	Target Discharge Temperature	°C

Error code description for Inverter

No.	ERROR CODE	ERROR DESCRIPTION	ARXN/RXN50/60L RX50/60CG	ARXN/RXN25/35L ARXN/RXN25/35M ARXN/RXN50/60M RXB50/60B
1	00	NORMAL	O	O
2	A1	INDOOR PCB ABNORMALITY	O	O
3	A5	ANTIFREEZE PROTECTION OR HIGH PRESSURE CONTROL	O	O
4	A6	INDOOR FAN MOTOR ABNORMALITY	O	O
5	C4	INDOOR HEAT EXCHANGER THERMISTOR ABNORMALITY	O	O
6	C9	INDOOR ROOM THERMISTOR ABNORMALITY	O	O
7	E1	OUTDOOR PCB ABNORMALITY	-	O
8	E5	COMPRESSOR OVERLOAD	O	O
9	E6	COMPRESSOR LOCK/START-UP ABNORMALITY	O	O
10	E7	OUTDOOR FAN MOTOR LOCK	O	O
11	E8	AC INPUT OVER CURRENT	O	O
12	EA	4 WAY VALVE ABNORMALITY	O	O
13	F3	DISCHARGE PIPE OVERHEAT	O	O
14	F6	HEAT EXCHANGER OVERHEAT	O	O
15	H0	COMPRESSOR SENSOR SYSTEM ABNORMAL	-	O
16	H6	POSITION SENSOR ABNORMAL (COMPRESSOR)	O	O
17	H8	AC CURRENT SENSOR ABNORMALITY	O	O
18	H9	OUTDOOR AIR THERMISTOR ABNORMALITY	O	O
19	J3	COMPRESSOR DISCHARGE PIPE THERMISTOR ABNORMALITY	O	O
20	J6	OUTDOOR HEAT EXCHANGER THERMISTOR ABNORMALITY	O	O
21	L3	ELECTRICAL BOX TEMPERATURE RISE (COMPRESSOR OFF)	O	O
22	L4	HEAT SINK OVERHEAT (COMPRESSOR ON)	O	O
23	L5	IPM ABNORMALITY	O	O
24	P4	HEAT SINK THERMISTOR ABNORMALITY	O	O
25	U0	INSUFFICIENT GAS	O	O
26	U2	DC VOLTAGE OUT OF RANGE	O	O
27	U4	COMMUNICATION ABNORMALITY	O	O
28	UA	INSTALLATION ABNORMALITY	O	O

Remark: O : Function
 - : No function

A1	
Description	INDOOR PCB ABNORMALITY
Supposed Cause	1. Faulty indoor PCB. 2. Faulty connector connection at indoor.
Troubleshooting	<pre>graph TD; A[Turn off unit.] --> B[Check indoor PCB connector conditions (including PCB to terminal block and all PCB wire connector).]; B --> C{Any sign of loose or abnormal.}; C -- Yes --> D[Connect correctly and operate again.]; C -- No --> E[Replace indoor PCB and operate again.];</pre> The troubleshooting flowchart for indoor PCB abnormality starts with turning off the unit. The next step is to check the indoor PCB connector conditions, including the PCB to terminal block and all PCB wire connectors. A decision is made based on whether there is any sign of loose or abnormal connection. If yes, the user is instructed to connect correctly and operate again. If no, the user is instructed to replace the indoor PCB and operate again.

A5	
Description	ANTIFREEZE PROTECTION OR HIGH PRESSURE CONTROL
Supposed Cause	1. Indoor air filter, heat exchanger block due to dust accumulation. 2. Indoor air short circuit. 3. Indoor coil thermistor faulty. 4. Indoor PCB faulty. 5. Fan blower dirty.
Troubleshooting	<pre> graph TD A[Check indoor air flow.] --> B{Any air short circuit?} B -- Yes --> C([Provide sufficient air passage.]) B -- No --> D[Check intake air filter.] D --> E{Is it very dirty?} E -- Yes --> F([Clean the air filter.]) E -- No --> G[Check the dust accumulate indoor coil.] G --> H{Is it very dirty?} H -- Yes --> I([Clean the indoor coil.]) H -- No --> J[Check fan blower condition.] J --> K{Is it very dirty?} K -- Yes --> L([Clean fan blower.]) K -- No --> M[Check indoor coil thermistor resistance.] M --> N{Does it conform to the thermistor resistance table?} N -- Yes --> O([Change indoor PCB.]) N -- No --> P([Change indoor thermistor.]) </pre> # Refer to thermistor resistance table.(Page 60, 6.1)

A6	
Description	INDOOR FAN MOTOR ABNORMALITY
Supposed Cause	1. Indoor fan motor winding short, or the motor lead wire broken. 2. Indoor PCB faulty.
Troubleshooting	<pre> graph TD A[Turn off power supply and rotate fan by hand.] --> B{Does it rotate?} B -- No --> C[Change fan motor.] B -- Yes --> D[Check fan motor connector condition.] D --> E{Does it connect properly?} E -- No --> F[Connect correctly.] E -- Yes --> G[Change PCB and turn on power.] G -- No --> H[Change fan motor.] </pre>

C4	
Description	INDOOR HEAT EXCHANGER THERMISTOR ABNORMALITY
Supposed Cause	1. Thermistor, connector faulty. 2. Indoor PCB faulty.
Troubleshooting	<pre> graph TD A[Check the thermistor connector condition.] --> B{Normal?} B -- No --> C[Correct the connection] B -- Yes --> D[Check thermistor resistance value.] D --> E{Normal?} E -- No --> F[Replace thermistor] E -- Yes --> G[Replace PCB.] </pre> # Refer thermistor resistance table.(Page 60, item 6.1) *Remark: Refer Thermistor resistance check procedure in Appendix A.(Page 59, item 6.1)

C9	
Description	INDOOR ROOM THERMISTOR ABNORMALITY
Supposed Cause	1. Thermistor, connector faulty. 2. Indoor PCB faulty.
Troubleshooting	<pre> graph TD A[Check the thermistor connector condition.] --> B{Normal?} B -- No --> C[Correct the connection] B -- Yes --> D[Check thermistor resistance value.] D --> E{Normal?} E -- No --> F[Replace thermistor] E -- Yes --> G[Replace PCB.] </pre> # Refer thermistor resistance table.(Page 60, item 6.1)

E1	
Description	OUTDOOR PCB ABNORMALITY
Supposed Cause	1. Micro Controller program run-away due to external factor such as Noise, Momentary voltage drop, Momentary power failure. 2. Damage of EEPROM. 3. Faulty outdoor unit PCB. 4. Broken hardness between PCB.
Troubleshooting	<pre> graph TD Start([Turn on the power again.]) --> Dec1{Error still occur?} Dec1 -- No --> Act1([Replace outdoor PCB.]) Dec1 -- Yes --> Act2[Check if the outdoor unit is grounded.] Act2 --> Dec2{Grounded?} Dec2 -- No --> Act3([Ground the system.]) Dec2 -- Yes --> Dec3{Is the harness broken?} Dec3 -- No --> Act4([Replace outdoor PCB.]) Dec3 -- Yes --> Act5([Replace the harness.]) </pre>

E5 (ARXN/RXN_M,RXB50/60B,ARXN/RXN25/35L)	
Description	COMPRESSOR OVERLOAD
Supposed Cause	1. Refrigerant Shortage. 2. 4 way valve malfunction. 3. Stop valve malfunction. 4. Outdoor unit PCB defective. 5. Water mixed in refrigerant. 6. Electronic expansion valve defective. 7. Disconnection of discharge pipe thermistor. 8. Faulty discharge pipe thermistor. 9. Disconnection of connector S40. 10. Electronic expansion valve or coil malfunction. 11. Disconnection of 2 terminals of OL.
Troubleshooting	<pre> graph TD Q1{Discharge pipe thermistor disconnected?} -- Yes --> A1[Insert thermistor in position.] Q1 -- No --> Q2{Thermistor resistance normal?} Q2 -- No --> A2[Replace thermistor.] Q2 -- Yes --> Q3{Connectors properly connected?} Q3 -- No --> A3[Connect back the connectors.] Q3 -- Yes --> B1[Disconnect connector S40 from PCB.] B1 --> B2[Check resistance of 2 terminals connector S40.] B2 --> Q4{0Ω?} Q4 -- Yes --> B3[Check electronic expansion.] B3 --> Q5{Malfunction?} Q5 -- Yes --> A4[Replace electronic expansion or the coil.] Q5 -- No --> B4[Check four way valve.] B4 --> Q6{Malfunction?} Q6 -- Yes --> A5[Replace four way valve or the coil. Replace outdoor PCB.] Q6 -- No --> B5[Check refrigerant line.] B5 --> Q7{Malfunction?} Q7 -- Yes --> A6[Refer refrigerant line check procedures.] Q7 -- No --> A7[Replace outdoor PCB.] Q4 -- No --> B6[Disconnect 2 terminals of OL.] B6 --> Q8{Resistance between 2 terminals is 0Ω?} Q8 -- No --> A8[Disconnect 2 terminals of OL.] Q8 -- Yes --> A9[Disconnect 2 terminals of OL.] </pre> *Remark: Please refer to Appendix A for Electronic expansion valve (page 60,item 6.2), four way valve (page 60,item 6.3) and refrigerant line checking procedures (page 62,item 6.4).

E5 (ARXN/RXN50/60L)	
Description	COMPRESSOR OVERLOAD
Supposed Cause	1. Refrigerant Shortage. 2. 4 way valve malfunction. 3. Electronic expansion valve defective. 4. Outdoor unit PCB defective. 5. Water mixed in refrigerant.
Troubleshooting	<pre> graph TD Start([Turn off unit. Disconnect compressor wire hardness (U.V.W) and check winding.]) --> Spec{Resistance follow spec?} Spec -- No --> Comp([Change compressor.]) Spec -- Yes --> Connect[Connect back wire and turn on unit.] Connect --> Stop{Compressor stop without running?} Stop -- Yes --> PCB1([Change outdoor PCB.]) Stop -- No --> Exp[Check electronic expansion. #Refer page 61 item 6.2] Exp --> MalExp{Malfunction?} MalExp -- Yes --> ReplExp([Replace electronic expansion or the coil.]) MalExp -- No --> Valve[Check four way valve. #Refer page 61 item 6.3] Valve --> MalValve{Malfunction?} MalValve -- Yes --> ReplValve([Replace four way valve or the coil. Replace outdoor PCB.]) MalValve -- No --> Line[Check refrigerant line. #Refer page 62 item 6.4] Line --> MalLine{Malfunction?} MalLine -- Yes --> RefLine([Refer refrigerant line check procedures.]) MalLine -- No --> ReplPCB2([Replace outdoor PCB.]) </pre> Turn off unit. Disconnect compressor wire hardness (U.V.W) and check winding. Resistance follow spec? No → Change compressor. #Compressor winding resistance 1.18Ω between all terminals at 20°C Yes → Connect back wire and turn on unit. Compressor stop without running? Yes → Change outdoor PCB. No → Check electronic expansion. #Refer page 61 item 6.2 Malfunction? Yes → Replace electronic expansion or the coil. No → Check four way valve. #Refer page 61 item 6.3 Malfunction? Yes → Replace four way valve or the coil. Replace outdoor PCB. No → Check refrigerant line. #Refer page 62 item 6.4 Malfunction? Yes → Refer refrigerant line check procedures. No → Replace outdoor PCB.

E6	
Description	COMPRESSOR LOCK/START-UP ABNORMALITY
Supposed Cause	1. Compressor locked. 2. Compressor harness disconnect.
Troubleshooting	<pre> graph TD A[Turn off power. Disconnect harnesses U, V and W.] --> B[Check with Inverter analyzer.] B --> C{Normal?} C -- No --> D[Correct power supply or replace outdoor unit PCB.] C -- Yes --> E[Turn off power and reconnect harnesses. Turn on power again and restart system.] E --> F{Emergency stop without compressor running?} F -- Yes --> G[Replace the compressor.] F -- No --> H{System shut down after errors repeated several times?} H -- No --> I[Check outdoor electronic expansion valve coil. Replace it as required.] H -- Yes --> J[Replace the compressor.] </pre> *Remark: Refer to Appendix A for Inverter analyzer check.(Page 63 item 6.5) Use Inverter checker 1225477 for ARXN/RXN25/35L/M Use Inverter analyzer RSURK0917C ARXN/RXN50/60M.

E7	
Description	OUTDOOR FAN MOTOR LOCK
Supposed Cause	1. Fan motor breakdown. 2. Harness or connector disconnected between fan motor and PCB or in poor contact. 3. Foreign matter stuck in fan. 4. Defective outdoor unit PCB.
Troubleshooting	<pre> graph TD A{Fan motor connector disconnected?} -- Yes --> B(Turn off power and reconnect connector.) A -- No --> C{Foreign matters in or around fan?} C -- Yes --> D(Remove foreign matters.) C -- No --> E(Turn on the power.) E --> F(Rotate the fan.) F --> G{Fan rotates smoothly?} G -- No --> H(Replace outdoor fan motor.) G -- Yes --> I(Check rotation pulse input on outdoor unit PCB.) I --> J{Pulse signal generated?} J -- No --> H J -- Yes --> K(Replace outdoor PCB.) </pre> *Remark: Refer Appendix A for rotation pulse check.(Page 64, item 6.6)

E8	
Description	AC INPUT OVER CURRENT
Supposed Cause	1. Over current due to compressor failure. 2. Over current due to defective outdoor unit PCB. 3. Over current due to defective power transistor. 4. Over current due to short-circuit.
Troubleshooting	<pre> graph TD A[Measure the input current.] --> B{Input current flowing above its stop level?} B -- No --> C([Replace the outdoor unit.]) B -- Yes --> D[Check outdoor fan motor, outdoor ambient temperature, refrigerant charge level] D --> E{Any abnormal?} E -- Yes --> F([Refer to the type of abnormality and conduct proper service.]) E -- No --> G[Turn off the power and disconnect the harness U, V and W.] G --> H[Check with the inverter checker.] H --> I{Compressor faulty?} I -- Yes --> J([Change Compressor.]) I -- No --> K([Change outdoor Control Box.]) </pre> *Remark: Refer to Appendix A for Inverter analyzer check. (Page 63 item 6.5) Use Inverter checker 1225477 for ARXN/RXN25/35L/M Use Inverter analyzer RSURK0917C ARXN/RXN50/60M.

EA	
Description	4 WAY VALVE ABNORMALITY
Supposed Cause	1. Thermistor defective. 2. 4 way valve defective. 3. Outdoor PCB defective. 4. Insufficient gas. 5. Foreign substance mixed in refrigerant. 6. Stop valve defective. 7. Disconnect of 4 way valve coil.
Troubleshooting	<pre> graph TD D1{Four way valve coil disconnected (loose)?} -- Yes --> A1[Correct the four way valve coil.] D1 -- No --> D2{Harness disconnected?} D2 -- Yes --> A2[Reconnect the harness.] D2 -- No --> B1[Check the continuity of the four way valve coil and harness.] B1 --> B2[Disconnect the harness from the connector.] B2 --> D3{Resistance between harnesses. within spec?} D3 -- No --> A3["Replace the four way valve coil. ARXN/RXN25/35L/M: 1000 ~ 2000 Ω ARXN/RXN50/60M: 560 Ω ± 56 Ω"] D3 -- Yes --> D4{Check the four way valve switching output.} D4 -- Malfunction --> A4[Replace the outdoor unit PCB.] D4 -- Functioning --> D5{Any thermistor disconnected?} D5 -- Yes --> A5[Reconnect the thermistor(s).] D5 -- No --> D6{Check the thermistors.} D6 -- Malfunction --> A6[Replace the defective thermistor(s).] D6 -- Functioning --> D7{Check the refrigerant line.} D7 -- Malfunction --> A7[Refer to the refrigerant line check procedure.] D7 -- Functioning --> A8[Replace the four way valve (defective or dust-clogged).] </pre> *Remark: Refer to Appendix A for thermistor resistance checking procedures.(Page 59 ,item 6.1) Refer to Appendix A for Four way valve performance checking procedures.(Page 61 ,item 6.2) Refer to Appendix A for Inverter unit refrigerant check procedures.(Page 62 ,item 6.4)

F3	
Description	DISCHARGE PIPE OVERHEAT
Supposed Cause	1. Refrigerant shortage. 2. Four way valve malfunctioning. 3. Discharge pipe thermistor defective. 4. Outdoor PCB defective. 5. Water mixed in the local piping. 6. EXV defective. 7. Stop Valve defective.
Troubleshooting	<pre> graph TD A{Check the thermistors.} -- Malfunction --> B(Replace the defective thermistor(s). * Discharge pipe thermistor * Outdoor heat exchanger thermistor * Outdoor temperature thermistor) A -- Functioning --> C{Check the electronic expansion valve.} C -- Malfunction --> D(Replace the electronic expansion valve or the coil.) C -- Functioning --> E{Check the refrigerant line.} E -- Malfunction --> F(Refer to the refrigerant line check procedure. * Refrigerant shortage * Four way valve * Water mixed * Stop valve) E -- Functioning --> G(Replace the outdoor unit PCB.) </pre> *Remark: Refer to Appendix A for thermistor resistance checking procedures. (Page 59, item 6.1) Refer to Appendix A for Electronic Expansion Valve (EXV) checking procedures. (Page 60, item 6.2) Refer to Appendix A for Inverter unit refrigerant check procedures. (Page 62, item 6.4)

F6	
Description	HEAT EXCHANGER OVERHEAT
Supposed Cause	1. The installation space is not large enough. 2. Faulty outdoor fan motor. 3. Faulty EXV. 4. Faulty outdoor heat exchanger thermistor. 5. Faulty stop valve. 6. Dirty heat exchanger. 7. Unit overcharge. 8. Defective outdoor unit PCB.
Troubleshooting	<pre> graph TD Start([Check the installation space.]) --> D1{Check the installation condition.} D1 -- Malfunction --> A1[Change the installation location or direction. Clean the outdoor heat exchanger.] D1 -- Functioning --> D2{Check the outdoor fan.} D2 -- Malfunction --> A2[Replace the outdoor fan motor. Reconnect the connector or fan motor lead wires.] D2 -- Functioning --> D3{Check the electronic expansion valve.} D3 -- Malfunction --> A3[Replace the electronic expansion valve or the coil. Replace the outdoor unit PCB.] D3 -- Functioning --> D4{Check the outdoor heat exchanger thermistor.} D4 -- Malfunction --> A4[Replace the outdoor heat exchanger thermistor.] D4 -- Functioning --> A5[Replace the outdoor unit PCB.] </pre> *Remark: Refer to Appendix A for thermistor resistance checking procedures. (Page 59, item 6.1) Refer to Appendix A for Electronic Expansion Valve (EXV) checking procedures. (Page 60, item 6.2) Refer to Appendix A for Inverter unit refrigerant check procedures. (Page 62, item 6.4) Refer to Appendix A for Installation condition check. (Page 65, item 6.7)

H0 (ARXN/RXN50/60L)	
Description	COMPRESSOR SENSOR SYSTEM ABNORMAL
Supposed Cause	1. Broken and disconnected harness. 2. Outdoor unit PCB defective. 3. Defective compressor.
Troubleshooting	<pre> graph TD A[Check reactor connection.] --> B{Any abnormal?} B -- Yes --> C[Connect back reactor.] B -- No --> D[Check reactor resistance.] D --> E{<10 Ω?} E -- No --> F[Change reactor.] E -- Yes --> G[Check compressor resistance.] G --> H{<10 Ω?} H -- No --> I[Change Compressor.] H -- Yes --> J[Change outdoor PCB.] </pre> # Disconnect the reactor wire and measure resistance between terminal.

H0 (ARXN/RXN25/35L/M)	
Description	COMPRESSOR SENSOR SYSTEM ABNORMAL
Supposed Cause	1. Broken and disconnected harness. 2. Outdoor unit PCB defective.
Troubleshooting	<pre> graph TD A[Check the harness S30.] --> B{Is the harness broken?} B -- Yes --> C[Replace the harness.] B -- No --> D[Turn off the power and turn it on again.] D --> E{Get restarted and error displayed again?} E -- No --> F[No problem. Keep on running.] E -- Yes --> G[Replace the PCB.] </pre>

H0 (ARXN/RXN50/60L/M)	
Description	COMPRESSOR SENSOR SYSTEM ABNORMAL
Supposed Cause	1. Broken and disconnected harness. 2. Outdoor unit PCB defective.
Troubleshooting	<pre> graph TD A[Check the relay harness for the compressor.] --> B{Is the harness broken?} B -- Yes --> C[Replace the harness.] B -- No --> D[Turn off the power and turn it on again.] D --> E{Restart operation and error displayed again?} E -- No --> F[No problem. Keep on running.] E -- Yes --> G[Replace the outdoor unit PCB.] </pre>

H6 (ARXN/RXN50/60L)	
Description	POSITION SENSOR ABNORMAL (COMPRESSOR)
Supposed Cause	1. Compressor relay cable disconnected. 2. Compressor itself defective. 3. Outdoor PCB defective. 4. Stop valve closed. 5. Input voltage out of specification.
Troubleshooting	<pre> graph TD A[Check for short circuit.] --> B{Normal?} B -- No --> C[Replace the outdoor unit PCB, outdoor unit fan.] B -- Yes --> D[Check the electrolytic capacitor voltage.] D --> E{Compressor harness connected as specified?} E -- No --> F[Reconnect as specified.] E -- Yes --> G[Turn off the power. Disconnect the harness U, V and W.] G --> H[Check with inverter checker.] </pre> *Remark: Refer to Appendix A for Inverter analyzer check. (Page 63, item 6.5)

H6 (RXN25/35L/M)	
Description	POSITION SENSOR ABNORMAL (COMPRESSOR)
Supposed Cause	1. Compressor relay cable disconnected. 2. Compressor itself defective. 3. Outdoor PCB defective. 4. Stop valve closed. 5. Input voltage out of specification.
Troubleshooting	<pre> graph TD A[Check for short circuit.] --> B{Normal?} B -- No --> C[Replace the outdoor unit PCB, outdoor unit fan.] B -- Yes --> D[Check the electrolytic capacitor voltage.] D --> E{DC320 ± 30 V?} E -- No --> F[Replace the outdoor unit PCB.] E -- Yes --> G{Electricals or compressor harnesses connected as specified?} G -- No --> H[Reconnect as specified.] G -- Yes --> I[Turn off the power. Disconnect the harness U, V and W.] I --> J[Check with inverter checker (*).] J --> K{Any LED off?} K -- Yes --> L[Correct the power supply or replace the outdoor unit PCB.] K -- No --> M[Replace the compressor.] </pre> * Inverter checker Part No.: 1225477 *Remark: Refer to Appendix A for Inverter analyzer check.(Page 63, item 6.5)

H6 (ARXN/RXN50/60M)	
Description	POSITION SENSOR ABNORMAL (COMPRESSOR)
Supposed Cause	1. Compressor relay cable disconnected. 2. Compressor itself defective. 3. Outdoor PCB defective. 4. Stop valve closed. 5. Input voltage out of specification.
Troubleshooting	<pre> graph TD A[Turn off the power.] --> B[Check the power supply voltage.] B --> C{Voltage as rated?} C -- No --> D[Correct the power supply.] C -- Yes --> E[Check stop valve.] E --> F{OK?} F -- No --> G[Replace the stop valve.] F -- Yes --> H[Check the short circuit of the diode bridge.] H --> I{Normal?} I -- No --> J[Replace the outdoor unit PCB.] I -- Yes --> K[Check the connection.] K --> L{Electrical components or compressor harnesses connected as specified?} L -- No --> M[Reconnect the electrical components or compressor harnesses as specified.] L -- Yes --> N[Turn on the power. Check the electrolytic capacitor voltage.] N --> O{320 = 50 VDC?} O -- No --> P[Replace the outdoor unit PCB.] O -- Yes --> Q[Turn off the power. Disconnect the harnesses U, V and W.] Q --> R[Check with the inverter analyzer.] R --> S{Any LED off?} S -- No --> T[Replace the compressor.] S -- Yes --> U[Correct the power supply or replace the outdoor unit PCB.] </pre> *Remark: Refer to Appendix A for Diode bridge short circuit check procedures. (Page 66, item 6.9) Refer to Appendix A for Inverter analyzer check. (Page 63, item 6.8)

H8	
Description	AC CURRENT SENSOR ABNORMALITY
Supposed Cause	1. Internal wiring broken. 2. Outdoor unit PCB defective.
Troubleshooting	Check compressor harness connection. ↓ Connection correct? ↓ Restart the system and check connector between main board and IPM board. ↓ Does it connect properly? ↓ Change outdoor PCB. No Reconnect it correctly. Yes ↓ No Reconnect it properly. Yes ↓ *Remark: This error is only applicable for model ARXN/RXN50/60L.

H9, J3, J6, P4	
Description	Thermistor or related abnormality H9: OUTDOOR AIR THERMISTOR ABNORMALITY J3: COMPRESSOR DISCHARGE PIPE THERMISTOR ABNORMALITY J6: OUTDOOR HEAT EXCHANGER THERMISTOR ABNORMALITY P4: HEAT SINK THERMISTOR ABNORMALITY
Supposed Cause	1. Disconnection of the connector for the thermistor. 2. Thermistor corresponding to the error code is defective. 3. Defective heat exchanger thermistor in the case of J3 error (outdoor heat exchanger thermistor in cooling operation, or indoor heat exchanger thermistor in heating operation). 4. Defective outdoor unit PCB.
Troubleshooting	<pre> graph TD Start([Turn on the power again.]) --> Decision1{Error displayed again on remote controller?} Decision1 -- No --> Action1([Reconnect the connectors or thermistors.]) Decision1 -- Yes --> Action2[Check the thermistor resistance value.] Action2 --> Decision2{Normal?} Decision2 -- No --> Action3([Replace the defective thermistor(s) of the following thermistors. * Outdoor temperature thermistor. * Discharge pipe thermistor. * Outdoor heat exchanger thermistor.]) Decision2 -- Yes --> Note1["J3 error: the discharge pipe temperature is lower than the heat exchanger temperature. Cooling: Outdoor heat exchanger temperature. Heating: Indoor heat exchanger temperature."] Note1 --> Action4[Check the indoor heat exchanger thermistor resistance value in the heating operation.] Action4 --> Decision3{Indoor heat exchanger thermistor functioning?} Decision3 -- No --> Action5([Replace the indoor heat exchanger thermistor.]) Decision3 -- Yes --> Action6([Replace the outdoor unit PCB.]) </pre> *Remark: Refer to Appendix A for thermistor resistance check procedures.(Page 59, item 6.1)

L3									
Description	ELECTRICAL BOX TEMPERATURE RISE (COMPRESSOR OFF)								
Supposed Cause	1. Fin temperature rise due to defective outdoor unit fan. 2. Fin temperature rise due to short circuit. 3. Fin thermistor defective. 4. Connector in poor contact. 5. Outdoor unit PCB defective.								
Troubleshooting	<pre> graph TD Start([Turn off the unit and turn on back after 20 mins.]) --> Error{Error again?} Error -- No --> Fan[Check outdoor fan.] Error -- Yes --> Resistor[Check heat sink thermistor resistance.] Fan --> FanFunc{Outdoor fan functioning?} FanFunc -- No --> FanMotor[Change outdoor fan motor.] FanFunc -- Yes --> Dirty{Heat sink dirty?} Dirty -- No --> Install[Check installation condition.] Dirty -- Yes --> Clean[Clean the heat sink.] Resistor --> ResNormal{Resistance normal?} ResNormal -- No --> ChangeThermistor[Change thermistor.] ResNormal -- Yes --> TempA{Heat sink temperature > A°C?} TempA -- No --> ChangePCB[Change outdoor PCB.] TempA -- Yes --> ChangeSink[Change heat sink or check outdoor fan condition.] </pre> <table border="1"> <thead> <tr> <th>Models</th><th>A°C</th></tr> </thead> <tbody> <tr> <td>RXB50/60B</td><td>80</td></tr> <tr> <td>ARXN/RXN25/35M</td><td>78</td></tr> <tr> <td>ARXN/RXN50/60M</td><td>122</td></tr> </tbody> </table> *Remark: Refer to Appendix A for thermistor resistance check procedures. (Page 59, item 6.1) Refer to Appendix A for outdoor fan system check. (Page 65, item 6.8) Refer to Appendix A for installation condition check. (Page 65, item 6.7)	Models	A°C	RXB50/60B	80	ARXN/RXN25/35M	78	ARXN/RXN50/60M	122
Models	A°C								
RXB50/60B	80								
ARXN/RXN25/35M	78								
ARXN/RXN50/60M	122								

L4

Description	Heat sink overheat								
Supposed Cause	1. Fin temperature rise due to short circuit. 2. Fin temperature rise due to defective outdoor unit fan. 3. Fin thermistor defective. 4. Connector in poor contact. 5. Outdoor unit PCB defective. 6. Silicon grease is not applied properly on the radiation fin after replacing outdoor unit PCB.								
Troubleshooting	Turn off the power and turn it on again to start the system. <pre> graph TD Start([Turn off the power and turn it on again to start the system.]) --> D1{Error displayed again?} D1 -- Yes --> D2{Has the PCB been replaced?} D2 -- Yes --> A1([Check if silicon grease is applied properly on the radiation fin. If not, apply the silicon grease.]) D2 -- No --> B1[Check the radiation fin temperature.] B1 --> D3{Above A°C?} D3 -- No --> A2([Replace the outdoor unit PCB.]) D3 -- Yes --> D1 D1 -- No --> D4{Check the outdoor fan.} D4 -- Malfunction --> A3([Replace the outdoor fan motor. Correct the connectors and fan motor leads. Replace the outdoor unit PCB.]) D4 -- Functioning --> D5{Radiation fin dirty?} D5 -- No --> A4([Check the installation condition.]) D5 -- Yes --> A5([Clean up the radiation fin.]) </pre> <table border="1" data-bbox="419 1417 1147 1579"> <thead> <tr> <th>Models</th><th>A°C</th></tr> </thead> <tbody> <tr> <td>ARXN/RXN50/60L</td><td>85</td></tr> <tr> <td>ARXN/RXN25/35M</td><td>93</td></tr> <tr> <td>ARXN/RXN50/60M,RXB50/60B</td><td>85</td></tr> </tbody> </table> *Remark: Refer to Appendix A for outdoor fan system check. (Page 65, item 6.8) Refer to Appendix A for installation condition check. (Page 65, item 6.7)	Models	A°C	ARXN/RXN50/60L	85	ARXN/RXN25/35M	93	ARXN/RXN50/60M,RXB50/60B	85
Models	A°C								
ARXN/RXN50/60L	85								
ARXN/RXN25/35M	93								
ARXN/RXN50/60M,RXB50/60B	85								

L5	
Description	IPM ABNORMALITY
Supposed Cause	1. Over current due to defective power transistor. 2. Over current due to wrong internal wiring. 3. Over current due to abnormal supply voltage. 4. Over current due to defective PCB. 5. Error detection due to defective PCB. 6. Over- current due to closed stop valve. 7. Over current due to compressor failure. 8. Over current due to poor installation condition. 9. Connection between main board and IPM board is not properly connect.
Troubleshooting	<pre> graph TD Start([Check the installation condition.]) --> StopValve{Stop valve fully open?} StopValve -- No --> OpenValve([Fully open the stop valve.]) StopValve -- Yes --> PowerOff[Turn off the power and turn it on again to start the system. See if the same error occurs.] PowerOff --> ErrorAgain{Error again?} ErrorAgain -- No --> Monitor[Monitor the power supply voltage and suction pressures, and other factors for a long term.] ErrorAgain -- Yes --> Disconnect[Turn off power and disconnect the harnesses U, V and W.] Disconnect --> Analyzer[Check with the inverter analyzer.] Analyzer --> LED{Any LED off?} LED -- Yes --> CorrectPower[Correct the power supply or replace the outdoor unit PCB.] LED -- No --> Reconnect[Turn off the power and reconnect the harnesses. Turn on the power again and start operation.] Reconnect --> Voltage[Check the power supply voltage.] Voltage --> VoltageRated{Voltage as rated?} VoltageRated -- No --> CorrectSupply[Correct the power supply.] VoltageRated -- Yes --> ReplaceComp[Replace the compressor.] </pre> *Remark: Refer to Appendix A for inverter analyzer check procedures.(Page 63, item 6.5) Refer to Appendix A for installation condition check. (Page 65, item 6.7)

U0	
Description	INSUFFICIENT GAS
Supposed Cause	1. Disconnection of the discharge pipe thermistor, indoor or outdoor heat exchanger, room or outdoor temperature thermistor. 2. Closed stop valve. 3. Refrigerant shortage (refrigerant leakage). 4. Poor compression performance of compressor. 5. Defective electronic expansion valve.
Troubleshooting	<pre> graph TD A[Check stop valve.] --> B{Stop valve closed?} B -- Yes --> C[Fully open stop valve.] B -- No --> D[Check indoor and outdoor coil thermistor.] D --> E{Thermistor in actual position?} E -- No --> F[Put the thermistor back to actual position.] E -- Yes --> G[Check the indoor coil, outdoor coil and discharge pipe thermistor resistance.] G --> H{Resistance normal?} H -- No --> I[Change thermistor.] H -- Yes --> J[Check EXV.] J --> K{EXV functioning?} K -- No --> L[Change EXV.] K -- Yes --> M[Check refrigerant charge level.] M --> N{Refrigerant charge sufficient?} N -- Yes --> O[Change outdoor PCB.] N -- No --> P[Check for leakage.] P --> Q{Any leakage?} Q -- Yes --> R[Repair the leak point.] Q -- No --> S[Add in refrigerant charge.] </pre> *Remark: Refer to Appendix A for thermistor resistance checking procedures.(Page 59, item 6.1) Refer to Appendix A for electronic expansion device checking procedures.(Page 60, item 6.2)


U2	
Description	DC VOLTAGE OUT OF RANGE
Supposed Cause	1. Power supply voltage is not as specified. 2. Defective DC voltage detection circuit. 3. Defective over-voltage detection circuit. 4. Defective PAM control part. 5. Disconnection of compressor harness 6. Short circuit inside the fan motor winding. 7. Noise. 8. Momentary drop of voltage. 9. Momentary power failure. 10. Defective outdoor unit PCB.
Troubleshooting	<pre> graph TD A[Check the power supply voltage.] --> B{Is the voltage fluctuation within ±10% from the rated value?} B -- No --> C[Correct the power supply.] B -- Yes --> D[Check the connection of the compressor harness.] D --> E{Loose or disconnected?} E -- Yes --> F[Reconnect the harness.] E -- No --> G{Does the outdoor fan rotate smoothly?} G -- No --> H[Replace the outdoor fan motor and the outdoor unit PCB.] G -- Yes --> I[Turn on the power.] I --- J["(Precaution before turning on the power again.) Make sure the power has been off for at least 30 seconds."] J --> K{System restarted? (Repeat a few times.)} K -- No --> L[Replace the outdoor unit PCB.] K -- Yes --> M["Disturbance factors * Noise * Power supply distortion"] M --> N[Check for such factors for a long term.] </pre>

U4	
Description	COMMUNICATION ABNORMALITY
Supposed Cause	1. Faulty outdoor unit PCB. 2. Faulty indoor unit PCB. 3. Indoor unit – outdoor unit signal transmission error due to wiring error. 4. Indoor unit – outdoor unit signal transmission error due to disturbed power supply waveform. 5. Indoor unit – Outdoor unit signal transmission error due to breaking of wire in the connection wires between the indoor and outdoor units.
Troubleshooting	<pre> graph TD A[Check the power supply voltage.] --> B{Is the voltage fluctuation within ±10% from the rated value?} B -- No --> C[Correct the power supply.] B -- Yes --> D[Check the indoor unit - outdoor unit connection wires.] D --> E{Is there any wiring error?} E -- Yes --> F[Correct the indoor unit - outdoor unit connection wires.] E -- No --> G[Check the voltage of the connection wires on the indoor terminal board between No. 1(L) and SIG, and between No. 2 (N) and SIG.] G --> H{Properly connected?} H -- Yes --> I[Replace the connection wires between the indoor unit and outdoor unit.] H -- No --> J[Check the LED A on the outdoor unit PCB.] J --> K{Is LED A blinking?} K -- No --> L[Diagnose the outdoor unit PCB.] K -- Yes --> M{Rotate the outdoor fan by hand. Does the outdoor fan rotate smoothly?} M -- No --> N[Replace the outdoor fan motor and the outdoor unit PCB.] M -- Yes --> O[Check the power supply waveform.] O --> P{Is there any disturbance?} P -- No --> Q[Replace the indoor unit PCB.] P -- Yes --> R[Locate the cause of the disturbance of the power supply waveform, and correct it.] </pre> #Refer section 5.0 Wiring Connection Diagram *Remark: Refer to Appendix A for power supply waveform check procedures.(Page 68, item 6.10)



UA	
Description	INSTALLATION ABNORMALITY
Supposed Cause	1. Wrong models interconnected. 2. Wrong indoor unit PCB mounted. 3. Indoor unit PCB defective. 4. Wrong outdoor unit PCB mounted or defective.
Troubleshooting	<pre>graph TD; A[Check the combination of the indoor and outdoor unit.] --> B{OK?}; B -- No --> C([Match the compatible models.]); B -- Yes --> D{Are the connecting wires connected properly?}; D -- No --> E([Correct the connection.]); D -- Yes --> F[Check the indoor and outdoor PCB part number.]; F --> G{Matched compatibly?}; G -- No --> H([Change for the correct PCB.]); G -- Yes --> I([Replace the indoor unit PCB (or the outdoor unit PCB).]);</pre> The troubleshooting flowchart for installation abnormalities (UA) follows these steps: - Check the combination of the indoor and outdoor unit. - Decision: OK? - If No: Match the compatible models. - If Yes: Proceed to the next step. - Decision: Are the connecting wires connected properly? - If No: Correct the connection. - If Yes: Proceed to the next step. - Check the indoor and outdoor PCB part number. - Decision: Matched compatibly? - If No: Change for the correct PCB. - If Yes: Replace the indoor unit PCB (or the outdoor unit PCB).

4.0 Wiring Connection



Model: ATXN/FTXN 25/35L/M / ARXN/RXN 25/35L/M

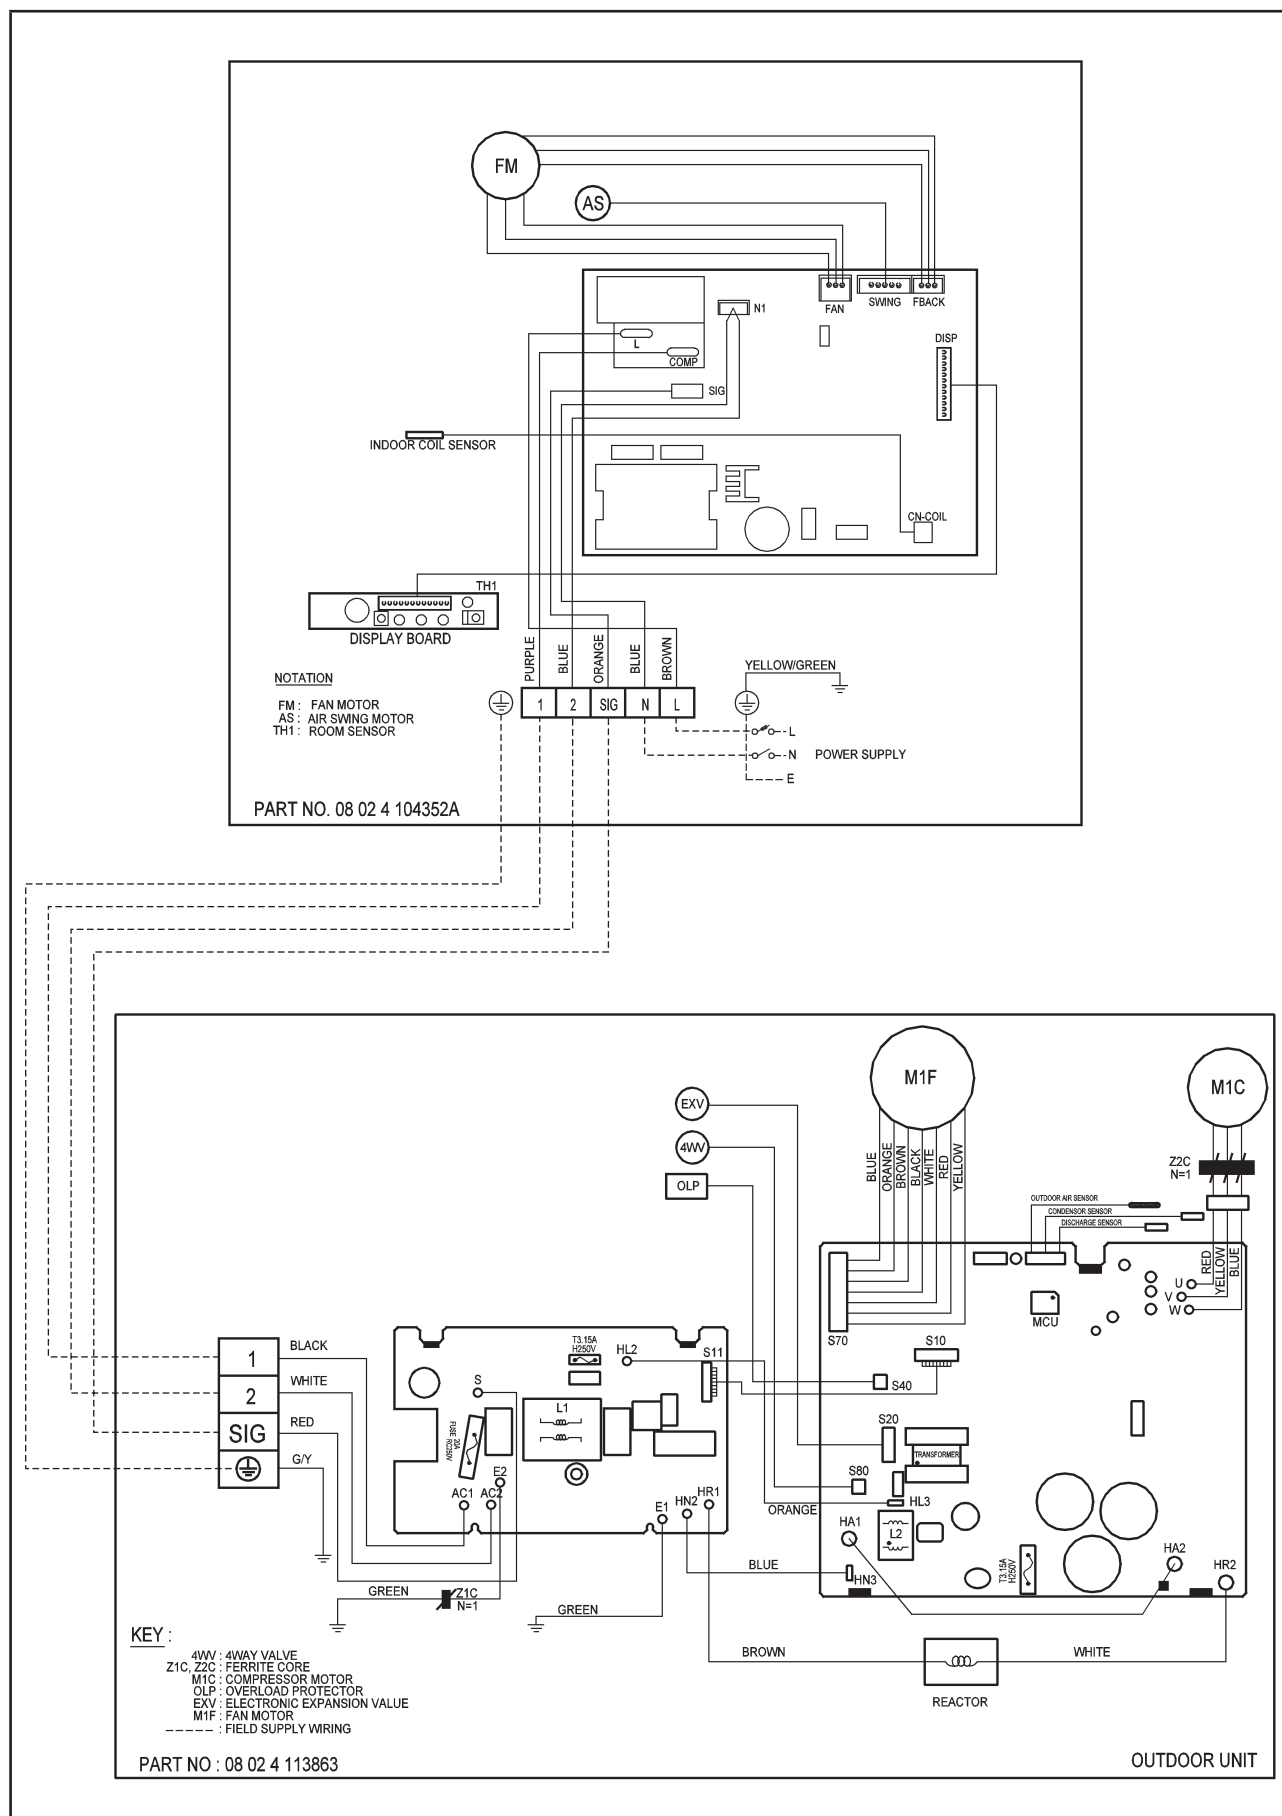

Model: ATXN/FTXN 50/60L / ARXN/RXN 50/60L

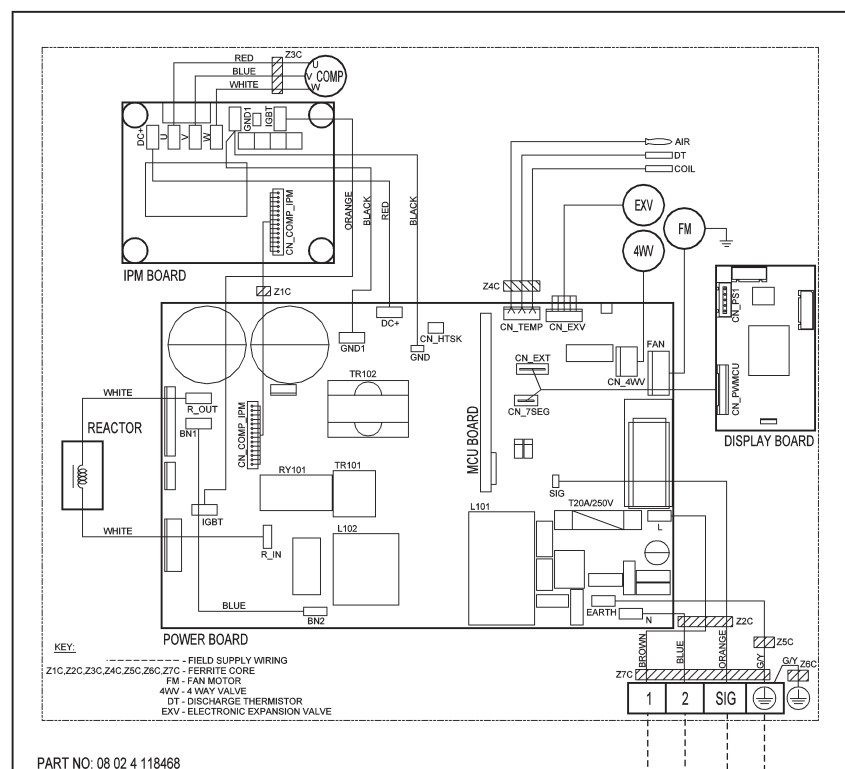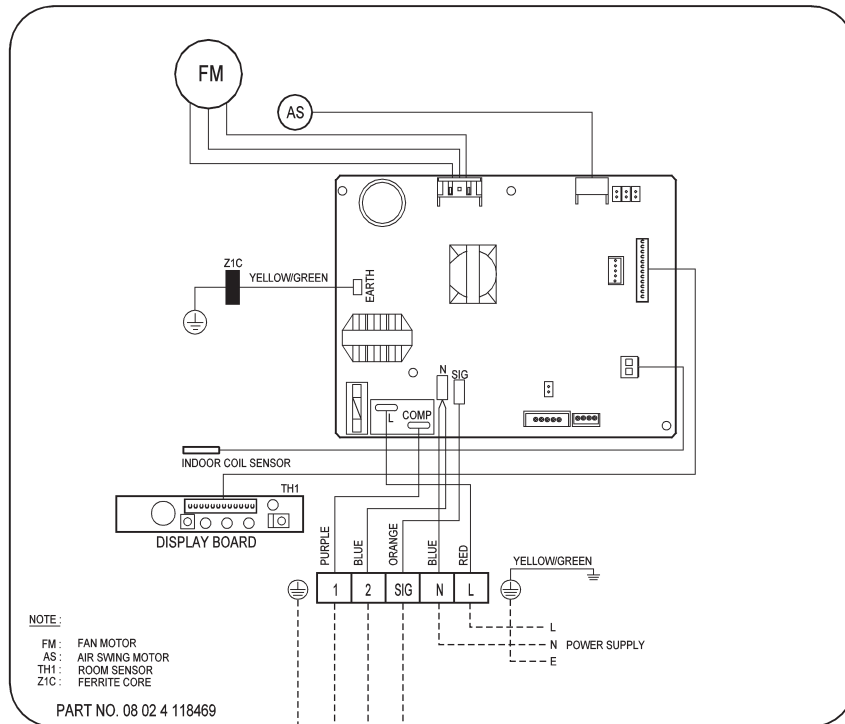


Model: ATXN/FTXN 50/60M / ARXN/RXN 50/60M

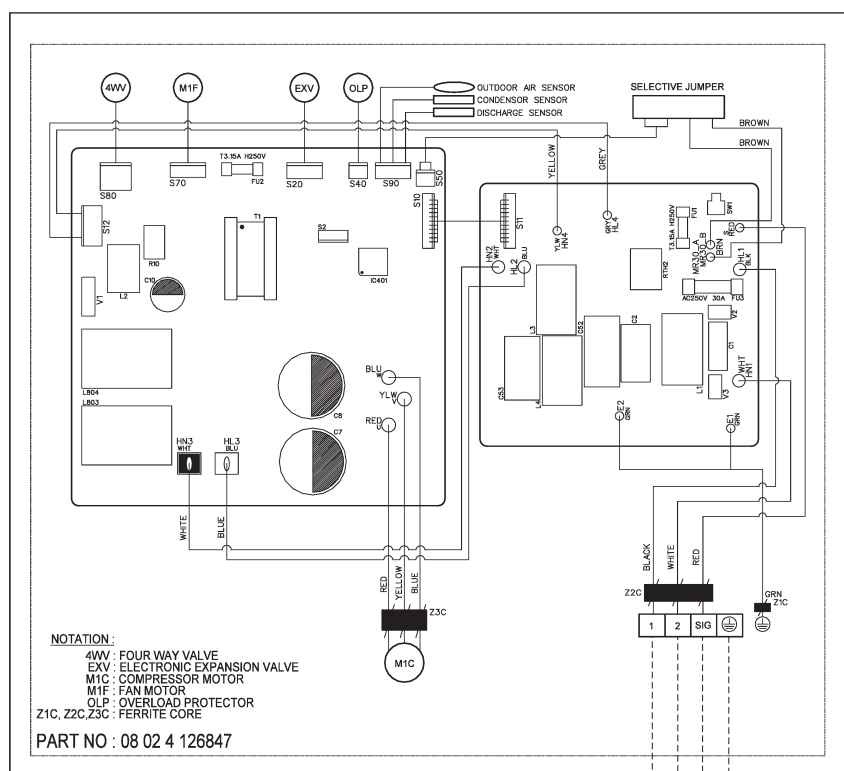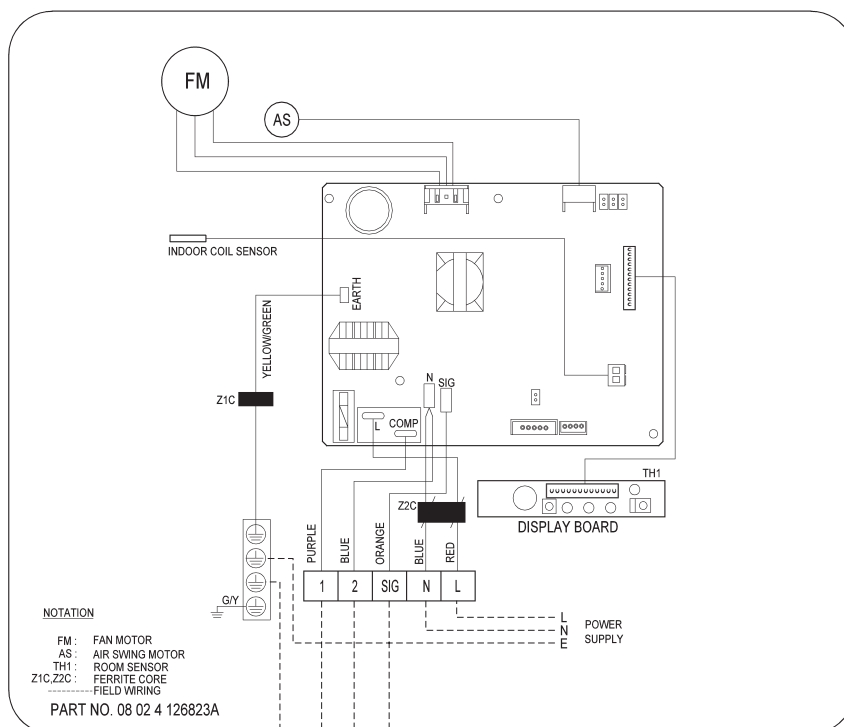

5.0 Refrigerant Diagram


Model: ATXN/FTXN_L/M / FTXB_B / ARXN/RXN_L/M / RXB_B

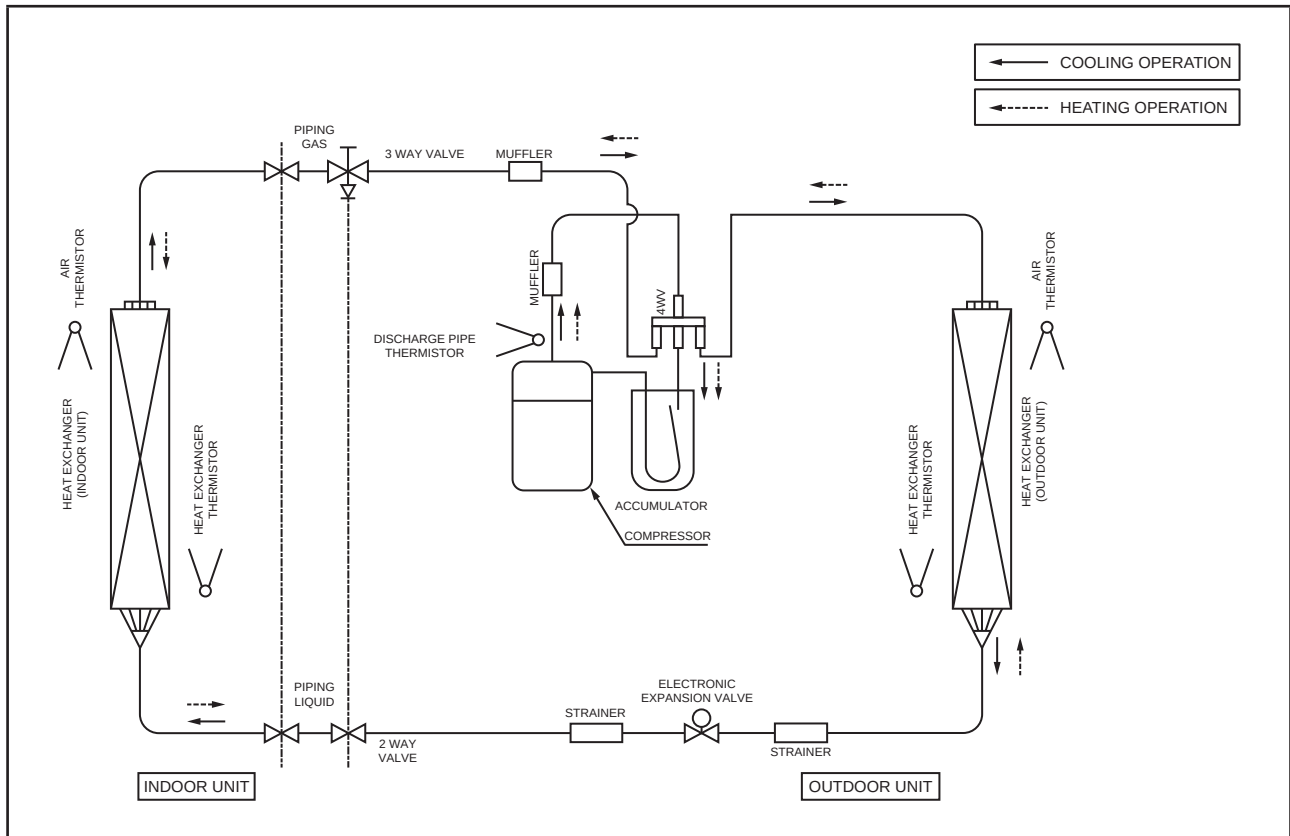

6.0 Appendix A:

6.1 Thermistor resistance checking procedures

Remove the connectors of thermistors at PCB and measure resistance of each thermistor using tester as shown below.

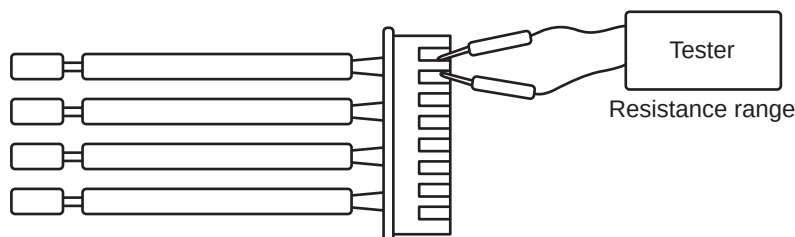

Resistance value refer to Resistance table below.

		ARXN/RXN50/60L,RX50CG	ARXN/RXN25/35L/M, ARXN/RXN50/60M
Indoor	Wall Mounted	10K Ω (Table 2)	10K Ω (Table 2)
Outdoor	Outdoor split	10K Ω (Table 2)	20K Ω (Table 1)

Table 1: Resistance R25 = 20K ohm

Temperature (°C)	Resistance value (k Ω)
-20	211.0
-15	150.0
-10	116.5
-5	88.0
0	67.2
5	51.9
10	40.0
15	31.8
20	25.0
25	20.0
30	16.0
35	13.0
40	10.6
45	8.7
50	7.2



Table 2: Resistance R25 = 10K ohm

t°C	Rmin (k Ω)	Rnom (k Ω)	Rmax (k Ω)	t°C	Rmin (k Ω)	Rnom (k Ω)	Rmax (k Ω)
-10	4.42E+01	4.53E+01	4.65E+01	41	5.47E+00	5.56E+00	5.64E+00
-9	4.21E+01	4.32E+01	4.43E+01	42	5.28E+00	5.37E+00	5.45E+00
-8	4.02E+01	4.12E+01	4.22E+01	43	5.10E+00	5.18E+00	5.27E+00
-7	3.83E+01	3.92E+01	4.02E+01	44	4.92E+00	5.01E+00	5.09E+00
-6	3.66E+01	3.74E+01	3.83E+01	45	4.75E+00	4.84E+00	4.92E+00
-5	3.49E+01	3.57E+01	3.65E+01	46	4.59E+00	4.67E+00	4.76E+00
-4	3.33E+01	3.41E+01	3.49E+01	47	4.44E+00	4.52E+00	4.60E+00
-3	3.18E+01	3.26E+01	3.33E+01	48	4.29E+00	4.37E+00	4.42E+00
-2	3.04E+01	3.11E+01	3.18E+01	49	4.15E+00	4.22E+00	4.30E+00
-1	2.90E+01	2.97E+01	3.03E+01	50	4.01E+00	4.09E+00	4.16E+00
0	2.78E+01	2.84E+01	2.90E+01	51	3.88E+00	3.95E+00	4.03E+00
1	2.66E+01	2.71E+01	2.77E+01	52	3.75E+00	3.82E+00	3.90E+00
2	2.54E+01	2.59E+01	2.65E+01	53	3.63E+00	3.70E+00	3.77E+00
3	2.43E+01	2.48E+01	2.53E+01	54	3.51E+00	3.58E+00	3.65E+00
4	2.33E+01	2.37E+01	2.42E+01	55	3.40E+00	3.47E+00	3.54E+00
5	2.23E+01	2.27E+01	2.31E+01	56	3.29E+00	3.36E+00	3.43E+00
6	2.14E+01	2.18E+01	2.21E+01	57	3.18E+00	3.25E+00	3.32E+00
7	2.05E+01	2.08E+01	2.12E+01	58	3.08E+00	3.15E+00	3.22E+00
8	1.96E+01	2.00E+01	2.03E+01	59	2.98E+00	3.05E+00	3.12E+00
9	1.88E+01	1.91E+01	1.94E+01	60	2.89E+00	2.96E+00	3.01E+00
10	1.80E+01	1.83E+01	1.86E+01	61	2.80E+00	2.86E+00	2.93E+00
11	1.73E+01	1.76E+01	1.78E+01	62	2.71E+00	2.78E+00	2.84E+00
12	1.66E+01	1.69E+01	1.71E+01	63	2.63E+00	2.69E+00	2.75E+00
13	1.59E+01	1.62E+01	1.64E+01	64	2.55E+00	2.61E+00	2.67E+00
14	1.53E+01	1.55E+01	1.57E+01	65	2.47E+00	2.53E+00	2.59E+00
15	1.47E+01	1.49E+01	1.51E+01	66	2.40E+00	2.45E+00	2.51E+00
16	1.41E+01	1.43E+01	1.45E+01	67	2.32E+00	2.38E+00	2.44E+00
17	1.35E+01	1.37E+01	1.39E+01				

t°C	Rmin (kΩ)	Rnom (kΩ)	Rmax (kΩ)	t°C	Rmin (kΩ)	Rnom (kΩ)	Rmax (kΩ)
18	1.30E+01	1.32E+01	1.33E+01	68	2.25E+00	2.31E+00	2.37E+00
19	1.25E+01	1.27E+01	1.28E+01	69	2.19E+00	2.24E+00	2.30E+00
20	1.20E+01	1.22E+01	1.23E+01	70	2.12E+00	2.17E+00	2.23E+00
21	1.16E+01	1.17E+01	1.18E+01	71	2.06E+00	2.11E+00	2.17E+00
22	1.11E+01	1.12E+01	1.14E+01	72	2.00E+00	2.05E+00	2.10E+00
23	1.07E+01	1.08E+01	1.09E+01	73	1.94E+00	1.99E+00	2.04E+00
24	1.03E+01	1.04E+01	1.05E+01	74	1.88E+00	1.93E+00	1.98E+00
25	9.90E+00	1.00E+01	1.01E+01	75	1.83E+00	1.88E+00	1.93E+00
26	9.52E+00	9.62E+00	9.72E+00	76	1.77E+00	1.82E+00	1.87E+00
27	9.16E+00	9.26E+00	9.36E+00	77	1.72E+00	1.77E+00	1.82E+00
28	8.82E+00	8.92E+00	9.02E+00	78	1.67E+00	1.72E+00	1.77E+00
29	8.49E+00	8.59E+00	8.69E+00	79	1.63E+00	1.67E+00	1.72E+00
30	8.17E+00	8.27E+00	8.37E+00	80	1.58E+00	1.62E+00	1.67E+00
31	7.87E+00	7.97E+00	8.07E+00	81	1.53E+00	1.58E+00	1.62E+00
32	7.58E+00	7.68E+00	7.78E+00	82	1.49E+00	1.53E+00	1.58E+00
33	7.31E+00	7.40E+00	7.50E+00	83	1.45E+00	1.49E+00	1.54E+00
34	7.04E+00	7.14E+00	7.23E+00	84	1.41E+00	1.45E+00	1.49E+00
35	6.79E+00	6.88E+00	6.98E+00	85	1.37E+00	1.41E+00	1.45E+00
36	6.54E+00	6.64E+00	6.73E+00	86	1.33E+00	1.37E+00	1.41E+00
37	6.31E+00	6.40E+00	6.50E+00	87	1.30E+00	1.33E+00	1.38E+00
38	6.09E+00	6.18E+00	6.27E+00	88	1.26E+00	1.30E+00	1.34E+00
39	5.87E+00	5.96E+00	6.05E+00	89	1.23E+00	1.26E+00	1.30E+00
40	5.67E+00	5.75E+00	5.84E+00	90	1.19E+00	1.23E+00	1.27E+00


6.2 Electronic Expansion Valve (EXV) checking procedures

- Check if the EXV connector is correctly connected to PCB.
- Turn power off and on again, and check if EXV generates a latching sound.
- If the EXV does not generate a latching sound in above step b., disconnect connector and check continuity using a multimeter.
- Check the continuity between pins [1-6, 3-6, 2-5, 4-5 (between pins 1-6, 2-6, 3-6, 4-6 for harness 5P models)]. If there is no continuity between the pins, EXV coil is faulty.
- If the continuity is confirmed in step d., outdoor PCB is faulty.

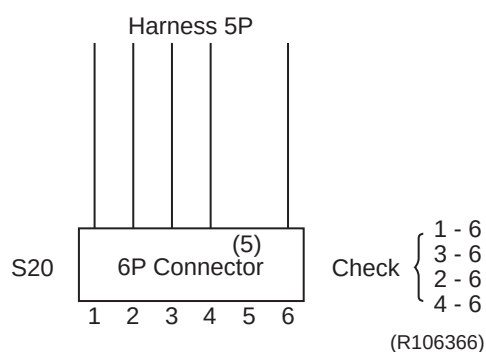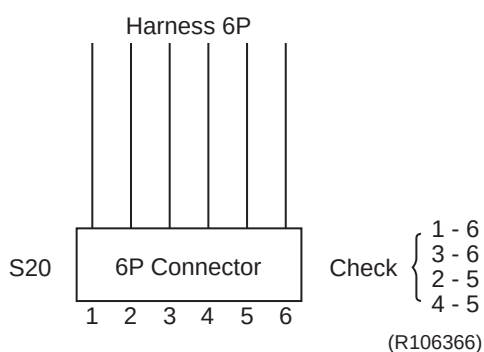


6.3 Four way valve performance checking procedures


6.3.1 ARXN/RXN25/35L/M

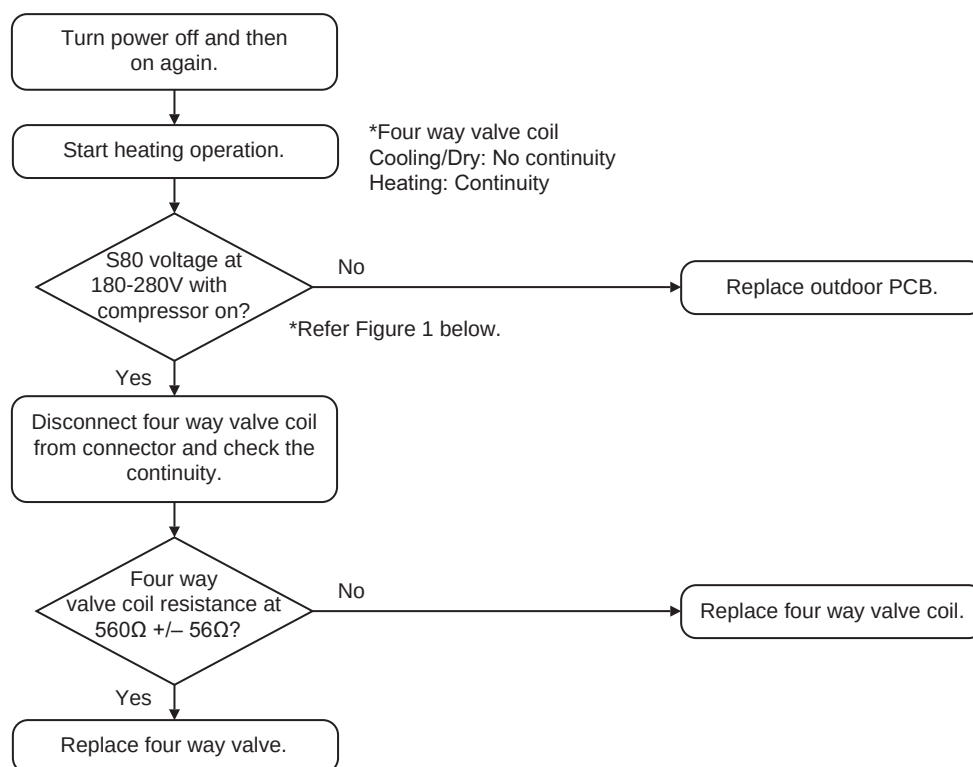


(Fig. 1)

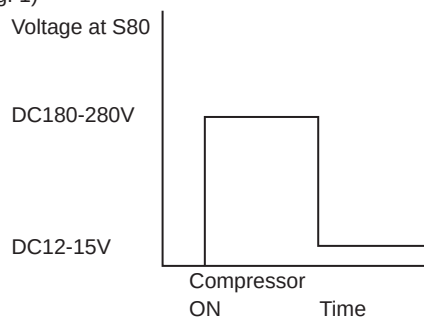


6.3.2 RXN50/60M, RXB5060B

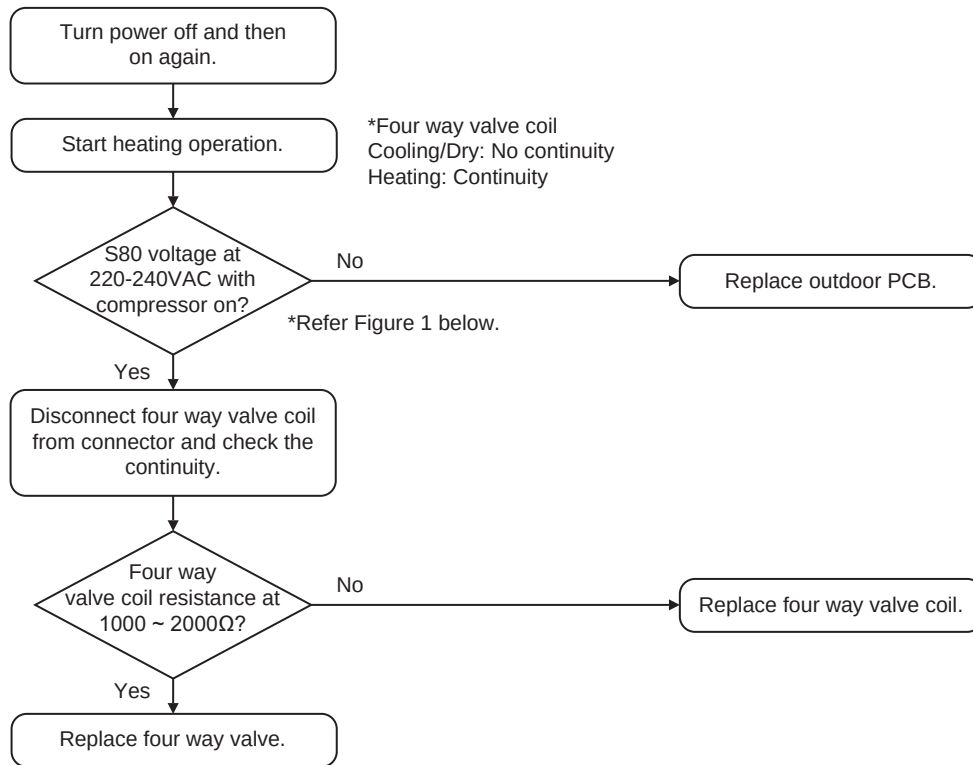

(Fig. 1)

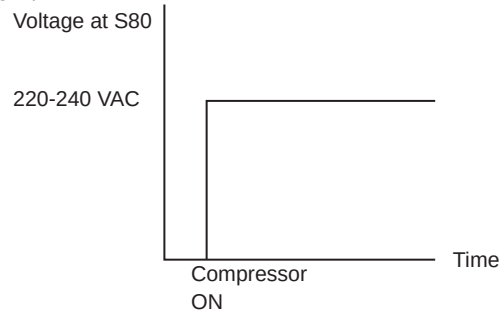

6.4 Inverter unit refrigerant check procedures

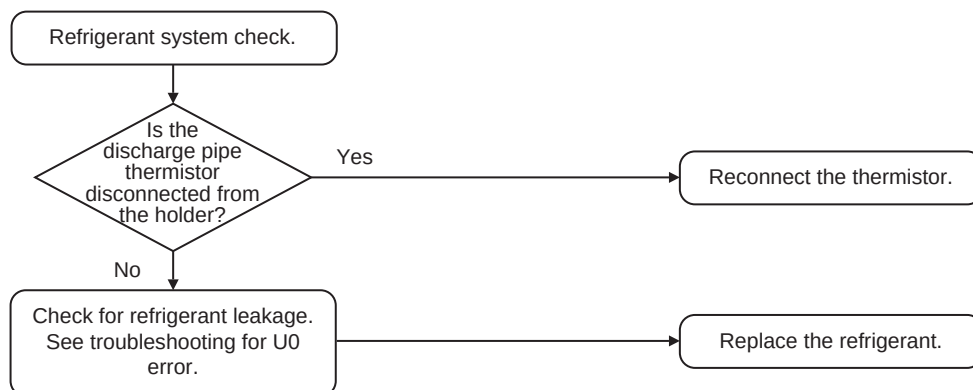


6.5 Inverter analyzer check

If an abnormal stop occurs due to compressor start up failure or over current output when using an Inverter unit, it is difficult to judge whether the stop is caused by compressor failure or some other failure (main PCB, power module and etc.). The inverter analyzer makes it possible to judge the cause of trouble easily and securely. (Connect an inverter analyzer as quasi-compressor instead of compressor and check the output of the inverter)

Operation Guide

- Turn off the power
- Install Inverter analyzer instead of compressor
- Press cooling operation ON/OFF button for 5 seconds

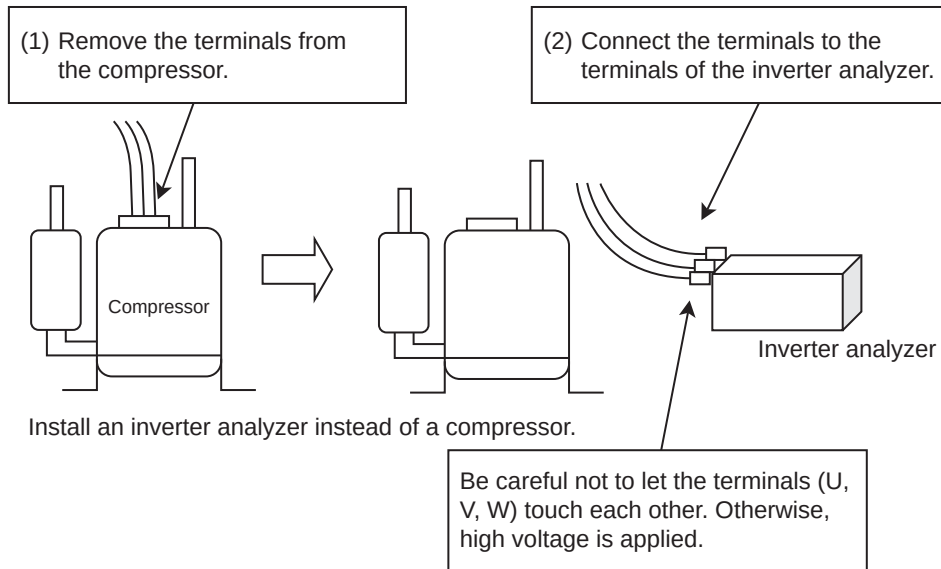

Diagnosis Guide (according to 6 LEDs lighting status)

- If all LEDs are lit uniformly, compressor is defective and need to replace.
- If the LEDs are not lit uniformly, check the power module as below.
 - Disconnect compressor harness connector from outdoor PCB.
 - Follow table below to measure resistance between (+) or (-) power module terminal or diode bridge and the U, V, or W terminal of compressor with a multimeter. Evaluate the measurement results referring to following table.

Negative (-) terminal of multimeter	Power module (+) or Diode bridge (+)	UVW	Power module (-) or Diode bridge (-)	UVW
Positive (+) terminal of multimeter	UVW	Power module (+) or Diode bridge (+)	UVW	Power module (-) or Diode bridge (-)
Resistance is OK	Several kΩ ~ several MΩ			
Resistance is NG	0Ω or ∞			


*Remark:

- Make sure voltage between (+) and (-) of power module or the diode bridge is approximately 0V before checking
- Use opposite sign of terminal for digital multimeter for measurement.

- If NG in power module check, replace the main PCB.
- If OK in power module check, observe any solder cracking on PCB. If there is any solder cracking found, replace PCB or repair the soldered section. If there is no solder cracking, replace PCB.

Caution


- When the output frequency is low, the LEDs blink slowly. As the output frequency increases, the LEDs blink quicker. (The LEDs look like they are lit)
- Upon completion of the inverter analyzer diagnosis, be sure to re-crimp the FASTON terminals. Otherwise, terminals may be burned due to loosening.

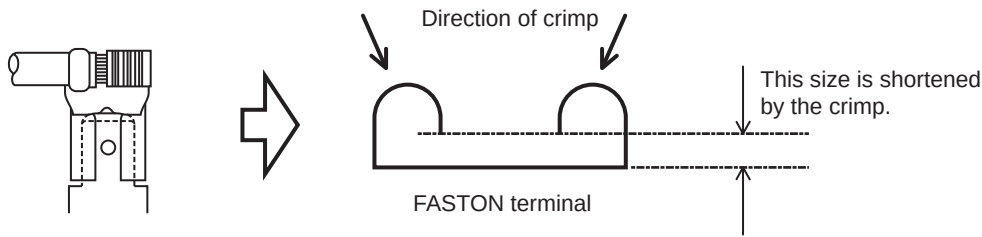

6.6 Rotation pulse check on outdoor unit PCB

6.6.1 Turning speed pulse input on outdoor unit PCB check for ARXN/RXN25/35MV1B9

- Make sure control voltage of DC15V is being applied.
- Make a turn of the fan motor with hand and make sure the pulse (0-15V) appears 4 times at pins 10 and 13.

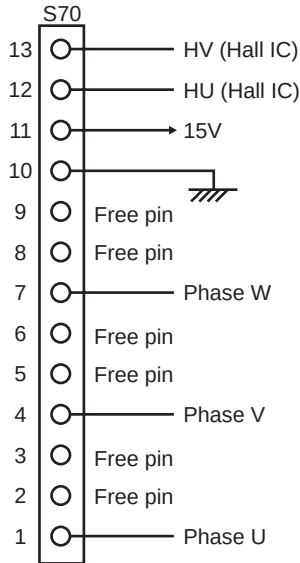

6.6.2 Rotation pulse check on outdoor unit PCB for ARXN/RXN50/60M,RXB50/60B.RX60CG

Make sure that the voltage of 320 ± 30 V is applied.


- Set operation off and power off. Disconnect the connector S70.
- Check that the voltage between the pins 4 & 7 is 320 VDC.
- Check that the control voltage between the pins 3 & 4 is 15 VDC.
- Check that the rotation command voltage between the pins 2 & 4 is 0 - 6.5 VDC.
- Keep operation off and power off. Connect the connector S70.
- Check whether 4 pulses (0 ~ 15 VDC) are output at the pins 1 - 4 when the fan motor is rotated 1 turn by hand.

When the fuse is melted, check the outdoor fan motor for proper function.


If NG in step 2 : Defective PCB and replace the outdoor unit PCB.

If NG in step 4 : Defective Hall IC and replace the outdoor fan motor.

If OK in both steps 2 and 4, replace the outdoor unit PCB.

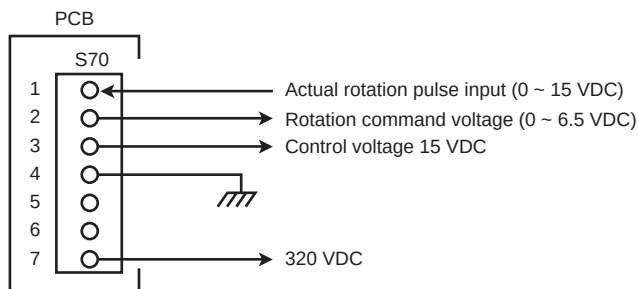


6.7 Installation condition check

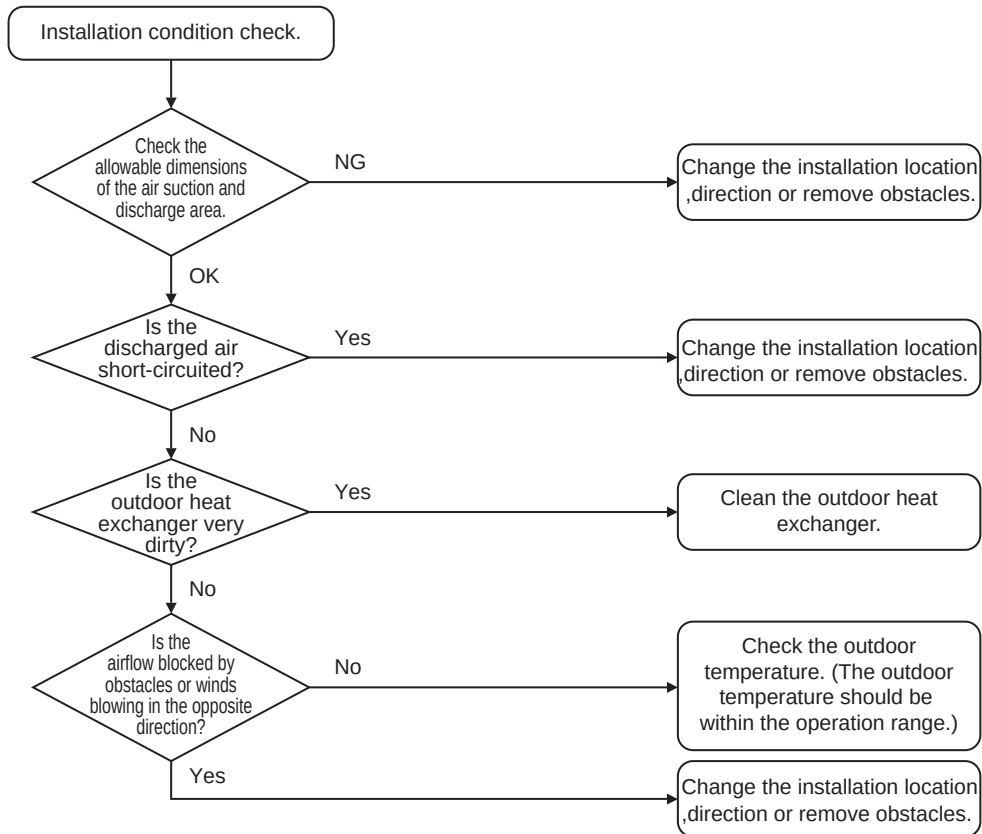

6.8 Outdoor fan system check

DC motor

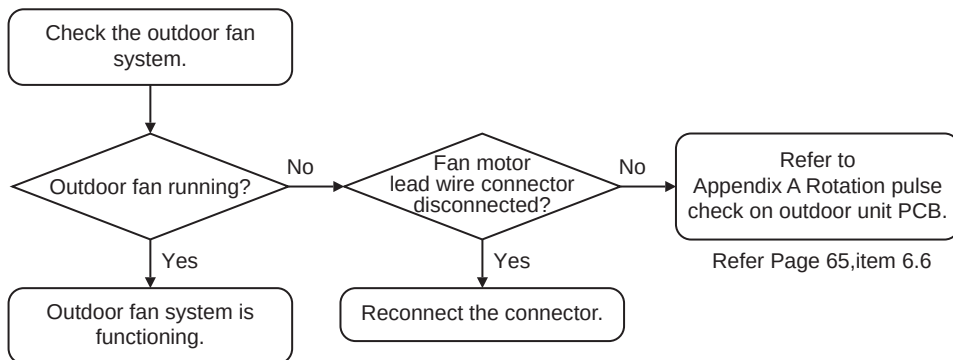

6.9 Diode bridge short circuit check procedures

6.9.1 Power transistor check for ARXN/RXN25/35L/M

Check to make sure that the voltage between the terminal of Power transistor (+) and (-) is approx. 0 volt before checking power transistor.

<Measuring method>

Disconnect the compressor harness connector from the outdoor unit PCB. To disengage the connector, press the protrusion on the connector.

Then, follow the procedure below to measure resistance between power transistor (+) and (-) and the U, V and W terminals of the compressor connector with a multi-tester. Evaluate the measurement results for a pass/fail judgment.

<Power transistor check>

Negative (-) terminal of tester (positive terminal (+) for digital tester)	Power transistor (+)	UVW	Power transistor (-)	UVW
Positive (+) terminal of tester (negative terminal (-) for digital tester)	UVW	Power transistor (+)	UVW	Power transistor (-)
Normal resistance	Several k Ω to several M Ω (*)			
Unacceptable resistance	Short (0 Ω) or open			

6.9.2 Main circuit short check for RXN50/60M


Check to make sure that the voltage between (+) and (-) of the diode bridge (DB1) is approximately 0 V before checking.

- Measure the resistance between the pins of the DB1 referring to the table below.
- If the resistance is ∞ or less than 1 kW, short circuit occurs on the main circuit.

Negative (-) terminal of multimeter	- (2, 3)	+ (4)	- (2, 3)	- (1)
Positive (+) terminal of multimeter	+ (4)	- (2, 3)	- (1)	- (2, 3)
Resistance is OK	Several k Ω ~ several M Ω	∞	∞	Several k Ω ~ several M Ω
Resistance is NG	0 Ω or ∞	0	0	0 Ω or ∞

*Remark:

1. Use opposite sign of terminal for digital multimeter for measurement.

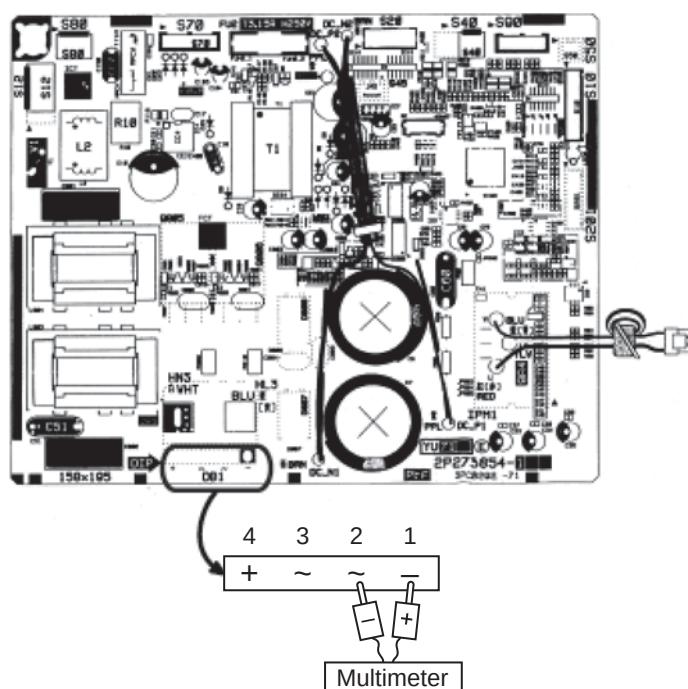


6.10 Power supply waveforms check procedures

Measure the power supply waveform between No. 1(Live) and No. 2(Neutral) on the terminal board, and check the waveform disturbance with oscilloscope.


- Check if the power supply waveform is a sine wave (Fig. 1).
- Check if there is waveform disturbance near the zero cross (sections circled in Fig. 2).

Fig. 1

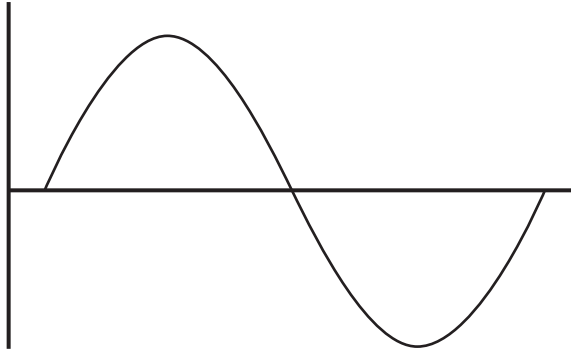

(R1726)

Fig. 2

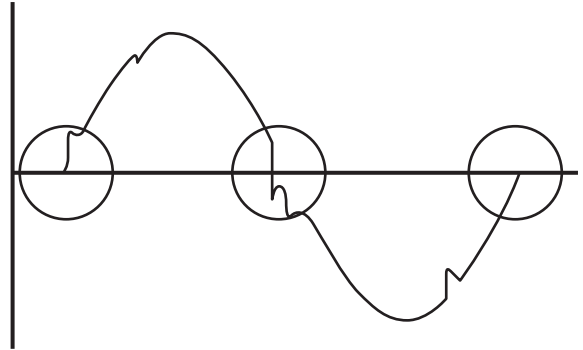


(R1444)

6.11 Retrived parameter using D-checker cable and software

Only applicable for ARXN/RXN25/35/50/60M, RXB50/60B

D-checker cable and software needed to enable connection to outdoor unit. Malfunction code and other operation data are display as shown below.

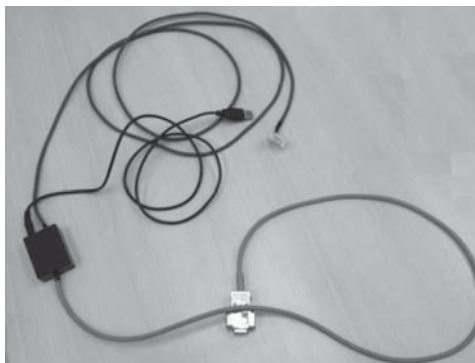

D-Checker cable



D-Checker software

Operation Data Display							
Op.DataDisp.(All)		Op.DataDisp.(Select)		Graph Display			
No.	Data Item	Data	No.	Data Item	Data	No.	Data Item
1	Operation Mode	Fan Only2	A 21	Fin Temp.(C)	23.00	A 44	Port C EV (pls)
2	Defrost Operation	OFF	A 23	Operation Current(A)	0.00	A 54	Target Discharge Temp.(C)
3	Malfunction Code	H9	A 24	Power Source Voltage(V)	200.0	A 55	Max Hz by Freeze Protecti
A 4	Outdoor Air Temp.(C)	-32.00	D 31	Compressor	OFF	A 56	Max Hz by Peak Cut ctrl(rp
* A 5	Outdoor Heat Exchanger Tr	24.00	* A 32	Compressor Frequency(rps	0	A 57	Max Hz by Discharge Temj
* A 6	Discharge pipe temp.(C)	24.50	A 33	Target Comp. Frequency(rp	0	A 58	Max Hz by Input Current ct
A 7	Room A Gas Pipe Temp.(C)	25.00	A 34	Target Out Fan1 Frequency	0	A 59	Maximum Comp. Frequency
A 8	Room B Gas Pipe Temp.(C)	25.00	* A 35	Out Fan 1 Frequency(rpm)	0	A 61	Minimum Comp. Frequency
A 9	Room C Gas Pipe Temp.(C)	25.00	D 40	4 Way Valve ON/OFF	OFF	62	Comp. Step Timer (sec)
A 14	Room A Liquid Pipe Temp.	24.00	D 41	4 Way Valve Op. Mode	Cooling	63	Outdoor Fan Delay Timer(s
A 15	Room B Liquid Pipe Temp.	24.50	* A 42	Port A EV (pls)	150		
A 16	Room C Liquid Pipe Temp.	24.00	A 43	Port B EV (pls)	150		

Product manufactured in an ISO certified facility.
This document contains the most current information as of this orienting.
For the most up to date product information, please go to www.daikin-oyl.com.my
