# Daikin Air Conditioner

## Wiring adaptor for electrical appendices (2) (Group control adaptor) installation manual KRP4A51 • 52 • 53 • 54 KRP4AA51 • 52 • 53

**Accessories** Check if the following accessories are included in the kit.

| Adaptor | Relay harness |
|---|---|
| × 1 | × 1 each (1), (2) |

| | |
|---|---|
| PCB support | × 4 |
| Clamp | × 3 |
| Installation manual | × 8 |

FFQ, FXZQ, FXD(Q) ..... KRP1B(A)101
FH(Y)C, FCQ~B ..... KRP1B98
FHYCP, FCQ~D • P, FXF(Q)~L • M ..... KRP1D(A)98
FCQ(N)~K, FXFQ, FCQ(H)G ..... KRP1H98
FHQ~B, FXH(Q)~L • M, FH(Y)(P) ..... KRP1C(A)93
FHQG, FHQ, FXHQ ..... KRP1D93A
FH(Y)C~B ..... KRP1C(A)98
FXC(Q)~L • M ..... KRP1B96
FXCQ ..... KRP1C96
FV(Y), FVQ ..... KRP4A(A)95
FBQ~D(A), FXMQ~P ..... KRP4A96
FBQ~E, FXSQ~P ..... KRP4B96
FXA(Q), FAQ, FAY~L ..... KRP4AA93
FUY, FXUQ, FUQ ..... KRP1B(A)97

**NOTES**
- Kits vary according to applicable models.
- A special adaptor fixing plate and box are required for the following models.


## 1 SYSTEM OUTLINE

This kit enables remote control (ON/OFF control, temperature setting, operation display, error display) and can be used with the following systems though it cannot be used in conjunction with other optional controllers for centralized control.

1. Individual control (Each indoor unit is controlled individually.)


This system requires the following parts.
- Adaptor ..... KRP4A(A)51 • 52 • 53 • 54 — Any one kit
- Remote controller (For operation control) ..... BRC1B* or BRC1C* or BRC1E* or BRC2C51 or BRC3A61 — Any one kit

(Ex.) When individually controlling 8 FXFQ71* units
KRP4AA53 × 8 kits
BRC1E62 × 8 kits

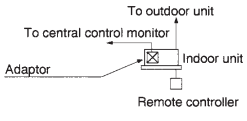



2. Group control (Multiple indoor units are controlled as a group.)

This system requires the following parts.
- Adaptor ..... KRP4A(A)51•52•53•54 — Any one kit
- Remote controller (For operation control) ..... BRC1B* or BRC1C* or BRC1E* or BRC2C51 or BRC3A61 — Any one kit





## 2 NAMES OF PARTS AND FUNCTION

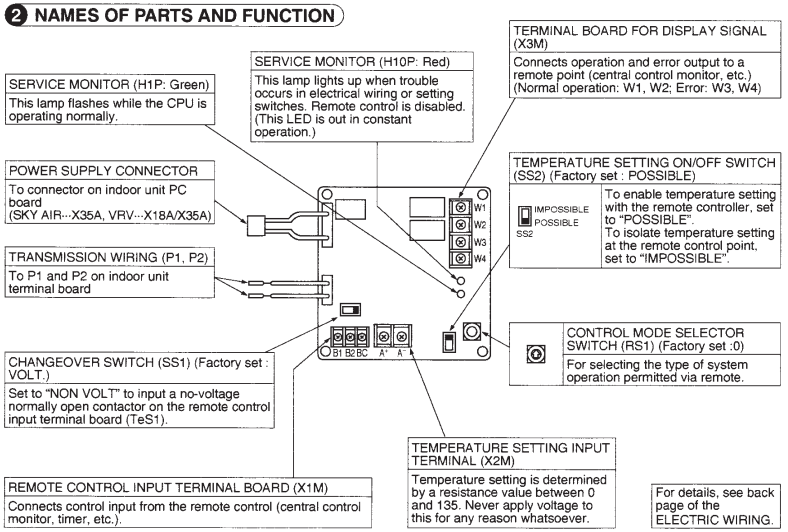


## 3 INSTALLATION


**«Ceiling-mounted cassette type» «Ceiling-mounted duct type»**

FFQ (600×600 Multiflow model)
FXZQ
FXD(Q) (Ceiling-mounted duct type)
Lid of installation box
KRP1B(A)101 (Optional accessory)

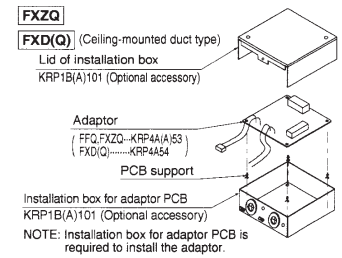



NOTE: Installation box for adaptor PCB is required to install the adaptor.

FH(Y)C
FCQ~B
(Fit the edge of the adaptor PCB into the grooves on the adaptor box.)

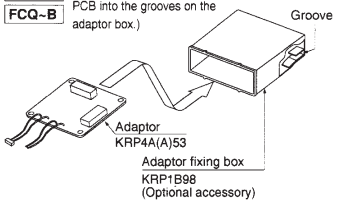



**«Ceiling-mounted cassette type»**

FH(Y)K(P) (Corner model)
FXK(Q)

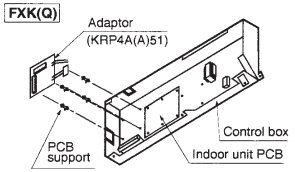



FH(Y)C~B (Multiflow model)

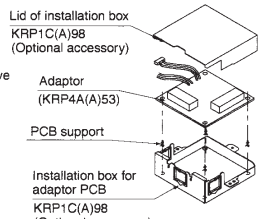


NOTE: Installation box for adaptor PCB is required to install the adaptor.


**«Floor-standing type»**

FXL(Q)
FXN(Q)

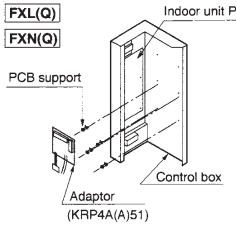


**«Ceiling mounted low silhouette duct type»**


FXYD-KA

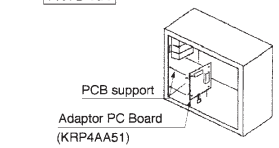


NOTE: Installation box is necessary for second adaptor.


**«Floor-standing type»**

FV(Y)
FVQ

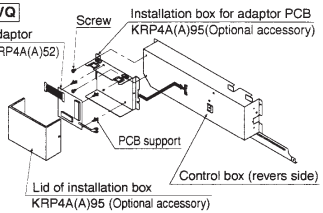


NOTE: Installation box for adaptor PCB is required to install the adaptor.


FHYCP
FCQ~D•P
FCQ(N)~K(A)
FXF(Q)
FCQ(H)G

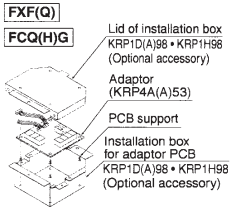


NOTE: Installation box for adaptor PCB is required to install the adaptor.


**«Ceiling-mounted cassette type»**

FXC(Q)~L•M

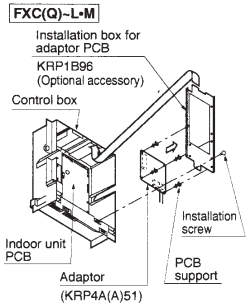


NOTE: A separate plate is needed to install the adaptor PCB.


FXCQ

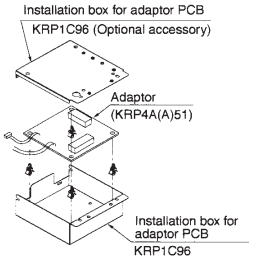


NOTE: Installation box for adaptor PCB is required to install the adaptor.


**«Wall mounted type»**

FA(Y)(P)
FAQ100BV
FA(Y)-F(A)

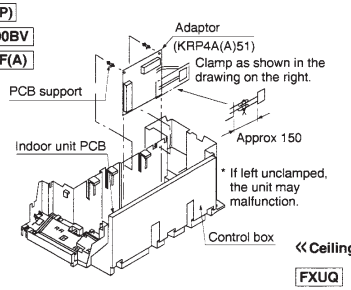



**«Wall mounted type»**

FXA(Q)
FAQ
FAY-L

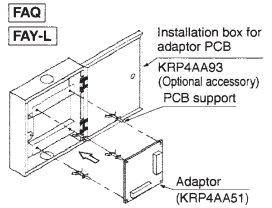



**«Ceiling mounted built-in type»**

FH(Y)B
FD(Y)M(G)

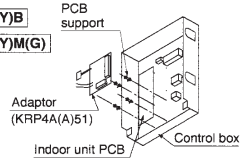


**«Ceiling mounted built-in type»**


FXS(Q)
FXYB

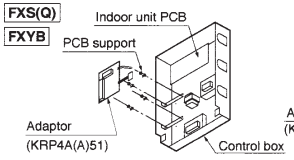


NOTE: Installation box is necessary for second adaptor (FXS).

**«Ceiling mounted Built-in type»**

FBQ-B

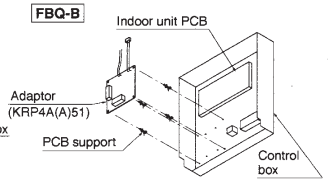



**«Ceiling Suspended cassette type»**

FXUQ
FUY
FUQ

*This is rear-mounting work with the bell mouth removed from the indoor unit.


Open a hole in the recess and tighten the parts with a screw. (2 locations)

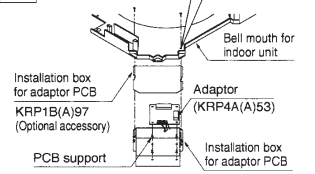


NOTE: Installation box for adaptor PCB is required to install the adaptor.

**«Ceiling Suspended type»**


FX(Y)(P)
FHQ~B
FXH(Q)~L•M

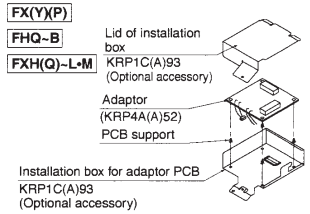


NOTE: Installation box for adaptor PCB is required to install the adaptor.

**«Ceiling Suspended type»**


FHQG FHQ FXHQ

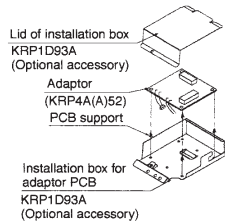


**«Ceiling mounted duct-type»**

FXMQ20~140P
FBQ-D(A)
See installation manual of KRP4A96 (Optional accessory).
FXSQ20~140P
FBQ~E
See installation manual of KRP4A98 (Optional accessory).

FXM-40~125

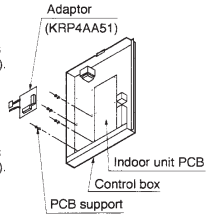


**«Ceiling mounted duct-type»**

FXM(Q)200•250

