



REV	00
Data	January 2022
Supersedes	N/A

Service Manual

Startup Guide – EWWD/H/S - DZ



Contents

1 Technician Qualifications	3
2 Required Tools and Supplies.....	3
3 Collaboration and Responsibilities	4
4 Before Arriving at Jobsite	4
5 Upon Arrival at Jobsite.....	4
6 Pre-Power on Checks	5
6.1 Visual Inspection.....	5
6.2 Leak Test	5
6.3 Water Piping System Check	5
6.4 Water Flow.....	5
6.5 Electric Connections Check	6
6.5.1 Phase rotation Check.....	7
7 Pre-Startup Checks.....	8
7.1 Voltage Check.....	8
7.2 Flow Switches	8
7.3 Control Settings	8
7.3.1 Unit Configuration	8
7.4 Software Options	10
7.5 Twin evaporator pump setting.....	11
7.6 Alarm Limits	11
7.7 Energy Meter	12
7.8 Pre-Running Adjustments	14
7.8.1 Check and calibration of unit water side temperature sensors.....	14
7.8.2 Check and calibration of unit refrigerant side sensors	15
7.9 Dry Tests	16
7.9.1 Unit Alarm	16
7.9.2 Compressor Alarm	16
7.9.3 Evap Pump #1/#2	16
7.9.4 Cond Pump #1/#2	16
7.9.5 Tower Fan Step	16
7.9.6 Tower VFD.....	16
7.9.7 3 Way Valve.....	16
7.9.8 Expansion Valve	16
7.10 Service Valves check	17
8 Start-Up.....	17
8.1 Running Adjustments.....	17
8.1.1 Check and calibration of pressure transducers.....	17
8.1.2 Evaporator Pressure check.....	17
8.1.3 Condenser Pressure check.....	18
9 Running Safeties Test	18
9.1.1 Flow Switches	18
9.2 Data acquisition	18
10 TABLES	20

LIST OF TABLES

Table A - Pump inverter settings	20
Table B - Pre-Commissioning Sheet	21
Table C - Commissioning Sheet.....	22
Table D - Leak test result sheet	23

1 Technician Qualifications

Initial startup on Daikin chillers must be performed only by Daikin Service Technicians or Authorized Service Providers. The contents of this manual are not intended as a substitute for professional skills training, or knowledge and practice of industry standards. Additional literature will be required that is product and component specific, including: product Installation Manuals, Service Bulletins, selection data, system control and piping specifications, etc. (see List of References on *Paragraph 2* for a list of some supplemental items).



The following information is intended only as a guide for authorized personnel with a sound basic knowledge of HVAC equipment, mechanical systems, electrical wiring, controls, & microprocessors. Attempts by untrained or unauthorized persons to start, operate and service this equipment can result in equipment failure, personal injury, or death, as well as invalidation of product warranty. It is the responsibility of the technician to ensure that proper safety equipment safe practices are used.

Be sure that before beginning any work, the Startup Service Technician has reviewed and is thoroughly familiar with all Daikin Factory Service Safety Policies and Procedures and has reviewed any Service Bulletins or Rapid News regarding this product.

2 Required Tools and Supplies

In addition to standard tools needed on most service jobs, be sure to bring the following items to the jobsite for Startup:

- ☒ Personal Protective Equipment (Safety)
- ☒ Commissioning Sheet
- ☒ Chiller Technical Data, Selection Sheet, and Certified Submittal Drawings
- ☒ Manuals:
 - Note: Be sure that all manuals are the current revision appropriate for this unit.*
 - This Manual: Startup Guide – EWWD/H/S-DZ.
 - Installation, Operation and Maintenance WATER COOLED OIL FREE CENTRIFUGAL CHILLERS (D-EIMWC01405-18_03EN)
 - Control Manual: WATER COOLED CENTRIFUGAL OIL FREE CHILLERS (D-EOMWC01405-19_02EN)
 - EWWD/H/S-DZ (last revision)
 - Wiring Diagram
- ☒ Other technical reference material as necessary
- ☒ Current operating software version downloaded and ready to install if needed:
 - Last VORTEX version available on official repository
- ☒ Miscellaneous gauges and hand tools, including:
 - Electronic Leak Detector
 - Differential Pressure Gauge (*adequate for system pressures*)
 - Phase Rotation Meter
 - Refrigeration Gauge Manifold (*Range: 50bar, Accuracy: ±0.5% of Final Value, Resolution: 0.01bar/0.1psi/1kPa*)
 - Digital thermometer (*Range: -50°C/+150°C, Accuracy: ±0.1°C, Resolution: 0.1°C*)
 - Amp probe
 - Voltmeters
 - Recover refrigerant cylinder (*for eventual charge adjustments*)
 - Full refrigerant cylinder (*for eventual charge adjustments*)
 - Recovery pump (*for eventual charge adjustments*)

3 Collaboration and Responsibilities

Throughout the installation and startup process, members of the Daikin Service Department (Supervisor / Coordinator / Technician) must establish contact and meet regularly with the following persons and/or their designated representatives:

- Mechanical, Electrical, and Controls Contractors
- Installing Contractor
- Daikin Sales Department
- Customer/Owner
- Personnel to be trained in unit operation

It is the responsibility of the Daikin Service Representative to ensure that all items on the *Pre-Power On Checklist* are complete and the system is ready for start-up. Upon arrival at the jobsite, the DAIKIN Service technician will verify that all items on the *Pre-Power On Checklist* are complete.

The Chiller Start-up Technician must confirm that the unit installation conforms to Daikin specifications and requirements. This includes mounting and support, piping, electrical and control installations related to the unit. These items must, as a minimum, meet acceptable industry standards and Daikin published requirements. All factory supplied controls and valves must be set and, where required, calibrated. Electrical power and control wiring must be selected and sized as specified by Daikin and the applicable electrical code.

The various contractors associated with the installation have the responsibility to provide the following items (as noted on the Pre-Start Checklist), in accordance with the product IOM, applicable codes and acceptable practices for the trade involved. Note any discrepancies on Commissioning Sheet and notify Supervisor as appropriate. Ensure that access to appropriate systems is available for startup operations.

4 Before Arriving at Jobsite

- Review and Verify Pre-Commissioning Sheet received from the Installer/Customer (*Table B*) Company/Contractor.
- Review Required Materials List on (refer to paragraph 2) and gather necessary items.
- Review Unit Design Specifications.
- Review Unit Selection Sheet.
- Review Startup Guide and Commissioning Form.
- Review IOM.
- Review Control Manual.
- Establish estimated timeline and milestones for Startup.

5 Upon Arrival at Jobsite

Meet with Mechanical, Electrical, and Control Contractors to discuss Startup Process and identify any potential issues that may interfere with a successful startup.

Be sure to meet with the Controls Contractor to discuss and clarify the chiller control sequence and settings for the chiller, towers, pumps, BAS integration, etc...

6 Pre-Power on Checks

Initial Chiller Inspection has to be performed according to the **Pre-Power On Checklist** of the Commissioning Sheet by following the instruction below shown.



Verify that all the items are correct. If the system is not ready and/or items on the Pre-Power On Checklist are incomplete, the technician should immediately notify his supervisor and request direction on how to proceed. A separate work order authorization may be required.

6.1 Visual Inspection

- Inspect the chiller for shipping/installation damage including fans and internal parts of condenser.
- Verify that chiller is adequately located, and level mounted as per the IOM according to the minimum space requirements (**Paragraph 2.4**)
- Verify that appropriate anti-vibration pads are installed.
- Visually inspect for refrigerant leaks.
- Record component model and serial numbers as appropriate on Commissioning Form.
- Clean the chiller from any foreign debris and surrounding area.

Note any issues in the Commissioning Form (**Pre-Startup Comments**)

6.2 Leak Test

Before to start with Leak Test, verify that during stock period (from Delivery Date), leak tests have been performed periodically as per local FGas Regulation. Collect all leak test reports for recording purpose.

Connect service gauges. Confirm pressure in the condenser and evaporator, to verify that charge was not leaked during storage/shipping. Using Electronic Leak Detector, leak check entire unit. Be sure to note any leaks found and repairs performed on the Commissioning Sheet. Follow all applicable industry and regulatory authority standards. If refrigerant loss is catastrophic, startup may need to be postponed until appropriate warranty leak repairs are completed.

Note any issues in the Commissioning Form (**Pre-Startup Comments**)

6.3 Water Piping System Check

- Verify water piping as per IOM (**Paragraph 2.7**). The water filter must be installed as close as possible to the chiller. If the water filter is installed in another part of the water system, the Installer has to guarantee the cleaning of the water pipes between the water filter and the evaporator. Missing filter results withdraw of heat-exchangers warranty.
- Verify if proper glycol percentage for the application in accordance with Daikin specifications.
- Walk length of piping system (in equipment area). Ensure that connections are correctly installed, and piping is properly supported (i.e., not supported by the chiller). Flanges must not be stressed.
- Check evaporator piping for proper flow direction through vessels by consulting Dimensional Drawing. If flow is incorrect, notify Mechanical Contractor, Service Supervisor, and Sales Rep.
- Verify that water pressure gauges are installed at proper locations
- Confirm that all piping specialties (expansion tank, make-up, relief, vents, etc), water pumps are properly installed.

Note any issues in the Commissioning Form (**Pre-Startup Comments**)

6.4 Water Flow

Use Differential Pressure Gauge at the inlet/outlet nozzles of the unit connections to measure the pressure drop across the exchanger/exchangers.

Compare actual flow with Pressure Drop specified on the Unit Selection Sheet. Verify that actual flow is in line with the selection data.




If the measured flow isn't in line with the selection data, then refer to the CSS (Chiller Selection Software) for the verification of allowability of the measured water flow.

If flow is outside of acceptable margins, corrective action is required. If flow is too high, valves may be adjusted to trim flow. If flow is too low, notify Installing Contractor, and note on the Commissioning Form. If flow is different from the selection data, notify Service Supervisor and Sales Rep. Correction may be required prior to startup.

Note any issues in the Commissioning Form (**Pre-Startup Comments**)

6.5 Electric Connections Check

- Check Fuse and/or Circuit Breaker Sizing at the source. Circuit breaker maximum settings will vary with the type of breaker and the type of starter being used.
- Clean all construction dirt, debris, and metal filings out of the starter cabinet.
- Tighten all electrical connections, which may have loosened during shipment/installation. Check continuity of power leads for proper termination and mark for proper phasing/connection, if necessary.
- Check Unit Control Box connections. Ensure all external wiring is properly terminated.
- Check power conductors size, number, and type to the starter disconnect switch. Check conduit size and number.
- Check wire size, conduit size and number (all 3 phases in each conduit) and proper termination of wiring to motor terminals (i.e. L1 to T1, L2 to T2, etc.). Do not connect until after starter verifications.

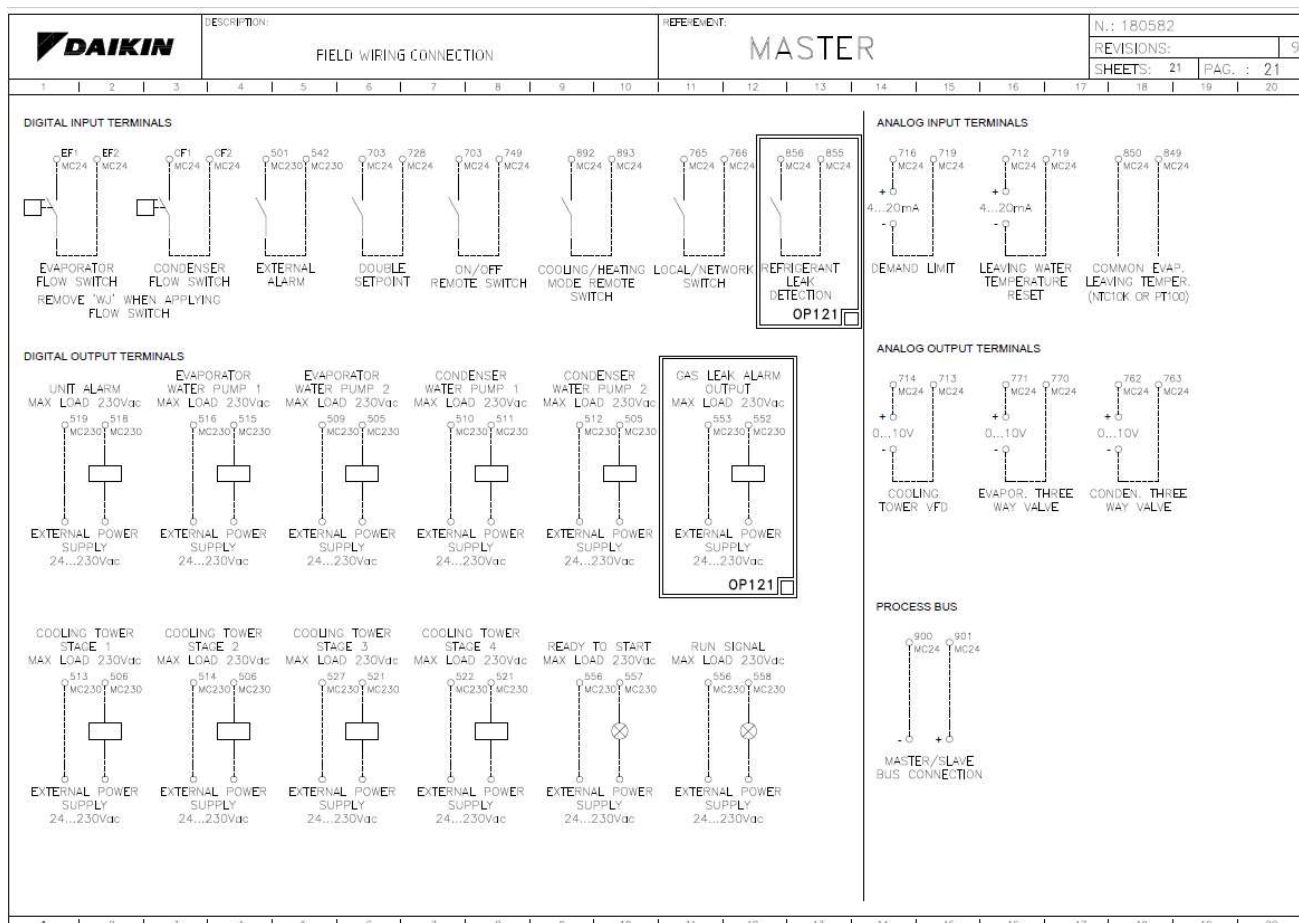

External power supply needed for Digital output terminals
Analog Inputs must be generated through external auxiliary voltage

Note any issues in the Commissioning Form (***Pre-Startup Comments***)

6.5.1 Phase rotation Check

- Disconnect the conductors at the motor (remote starters only) and check continuity on each conductor for proper motor terminations before checking the phase rotation.
- Make sure the starter disconnect is open. Close the disconnect switch at the source supplying power to starter.
- Using proper PPE, check the power at the conductors from the main power source in the motor starter at the incoming terminals of the starter/drive disconnect.

7 Pre-Startup Checks

Once the “*Pre-Power On Checks*” are completed, the technician can proceed with the Pre-Startup Checks by turning on the unit main switch.

Pre-Startup checks must be performed according to the ***Pre-Startup Checklist*** of the Commissioning Sheet by following the instruction below shown.



Make sure that unit switch (Q0) is set in OFF state before turning on the unit main switch



Verify that all the items are correct. If the system is not ready and/or items on the Pre-Startup Checklist are incomplete, the technician should immediately notify his supervisor and request direction on how to proceed. A separate work order authorization may be required.

7.1 Voltage Check

- Verify the electric Main voltage and frequency.
- Verify all on-board auxiliary transformer voltages.
- Verify that the emergency stop contact is closed.

Note any issues in the Commissioning Form (***Pre-Startup Comments***)



If the emergency stop contact is open all the low voltage contact are not energized.

7.2 Flow Switches

- Check the water flow safety switches: verify that field-installed flow switches are installed as per the manufacturer’s instructions and IOM.
- Any differential pressure switch connections must be made across the vessel they protect.
- Field-installed Flow switches should not be located close to any source of turbulence and should be located in inlet or outlet piping of the vessel away from any shutoff valves or isolation devices.
- Verify flow switches operation, by throttling the flow and verify that switch opens when flow rate falls below 50% of nominal operating flow rate.

Note any issues in the Commissioning Form (***Pre-Startup Comments***)

7.3 Control Settings

- Check all MicroTech 4 controller settings to verify they are optimized for application conditions.
- Download and/or install updated software as needed.
- Verify settings of all safety and operating controls.

7.3.1 Unit Configuration

On the unit controller, enter the “Technician Password” and go into

Main Menu → Commission Unit → Configuration → Unit

Setpoint	Default	Range	Description
Apply Changes=	No	No Yes	Use this command to reset the controller to confirm the configuration made
Apply / Save	No	No Yes	Use this command to save the configuration made

Unit Model	Not Selected	Not Selected	Use this command to select the unit type by copying the first 13 digits chiller code from the label.  The image shows a DAIKIN label for a chiller unit. The label includes the DAIKIN logo, the company name DAIKIN APPLIED EUROPE S.p.A., the address Via Piani di Santa Maria, 72, 00072 Ariccia (Roma) - Italia, and the unit model EVWD320DZXA1901. Other specifications listed include R134a refrigerant, 140 kg weight, GWP 1430, tCO2 eq 200,2, and a serial number SN CH-20H01904-KKKKXX. The label also features a barcode, CE and EAC certification marks, and a warning about fluorinated greenhouse gases.
Mfg Place	Not Selected	Not Selected Europe USA	Define the chiller location.
HGBP Enable	Disable	Disable Enable	Select Enable to Enable the Hot gas bypass. In DZ chiller the HGBP is present only if opt 175 has been purchased.
Staging Valve	Not Selected	ETS250 ETS400 SEHI	This parameter is auto selected after inserted the Unit Model string
Nom Power In	Not Selected	kW	This parameter is auto selected after inserted the Unit Model string. It represents the compressor nominal power.
Refrigerant	R1234a	R134a R513a R1234ze	This parameter is auto selected after inserted the Unit Model string.
Comp Type	Not Selected	TT300 TT350 TT400 TT700	This parameter is auto selected after inserted the Unit Model string.
Number Of Cmps	Not Selected	1 2 3	This parameter is auto selected after inserted the Unit Model string.
Main Exv Model	Not Selected	ETS SEHI	This parameter is auto selected after inserted the Unit Model string.
Main Valve	Not Selected	Single Double	This parameter is auto selected after inserted the Unit Model string.
Modbus Res	Active	Active Passive	Select passive if Turbocor is not the last element in the bus line.
Economizer	Disable	Disable PHE Flash	Select the economizer type.
Power Supply	400 V	380 V 400 V 460 V	Select the actual power supply for the unit after checking it with a mustimeter
Limit Type	None	None Current Demand Flexible	Select Curent, Demand or Flexible depending on the option available. If no option is available leave default value None.
Energy Mtr =	None	None Nemo	Select Nemo in case energy meter is present
Leak Detektor	Disable	Disable Enable	Select enable in case this option is available on the unit
Rapid Restart	Disable	Disable Enable	Select enable in case this option is available on the unit
Alm Out Type	Solid	Solid Blinking	Status of the General Alarm relay Solid= the alarm output will be continuous Blinking= the alarm output will blink
Ext Fault Cfg	None	None Event Alarm	Definition of the unit behaviour after switching of external alarm contact Event= the ext alarm will trigger an event on the unit Alarm= the ext alarm will trigger an alarm on the unit
Water Dp Inpt	None	Evap Cond Both	Used to regulate the unit in variable flow condition.
Water Dp Signal	4 - 20 mA	4 - 20 mA 0 - 10V DI	Select the right value based on the application

Modem Type	None	None MachineLink Teltonika	Select modem type.
Comm Module 1=	None	None IP LON MSTP Modbus AWM	Select whether a connected communication module is present on the left side of the controller. IP → POL908 LON → POL906 MSTP → POL904 Modbus → POL902 AWM → POL909
Comm Module 2=	None	None IP LON MSTP Modbus AWM	Select whether a second communication module is present on the left side of the controller. IP → POL908 LON → POL906 MSTP → POL904 Modbus → POL902 AWM → POL909
Comm Module 3=	None	None IP LON MSTP Modbus AWM	Select whether a third communication module is present on the left side of the controller. IP → POL908 LON → POL906 MSTP → POL904 Modbus → POL902 AWM → POL909
M/S Address =	None	None Master Slave 1 Slave 2 Slave 3	Defines if the unit is Master or Slave in the M/S system or leave to none in case of standalone unit.
M/S Num Of Units =	2	2 3 4	Defines the number of units in the M/S system
M/S Sns Type	NTC10K	None NTC10K PT1000	Select the type of common LWT temperature sensor used in the M/S system
Display Units	Metric	Metric English	Select the display unit system (metric or imperial)



After termination of the Unit configuration, it's necessary to restart the controller to activate the settings made through the "Apply changes" command.

The control part of EWWD/H/S - DZ is composed of the controller POL688 + 1 module POL985 and POL94U. Once the **unit** has been **configured**, after the controller has been restarted, a part of the program will automatically be transferred on the POL965U module. Be careful not to remove the power supply if the BSP and BUS LEDs of both POL94U modules have become green.

7.4 Software Options

Software Options (Only for Microtech 4). The possibility to employ a set of software options has been added to the functionality of the chiller, in according with the new Microtech 4 installed on the Unit. The Software Options do not require any additional hardware and regard communication channels and the new energy functionalities.

During the commissioning the machine is delivered with the Option Set chosen by the customer; the Password inserted is permanent and depends on the Serial Machine Number and the Option Set selected.

The available options are:

1. Modbus Slave MSTP for settings refer to BAS integration guide Doc. Name: D-EIGOC00201-22EN_DWSC
2. BACNet MSTP for settings refer to BAS integration guide Doc. Name: D-EIGOC00101-22EN_DWSC
3. BACNet IP for settings refer to BAS integration guide Doc. Name: D-EIGOC00101-22EN_DWSC
4. Performance Monitoring. The Energy Monitoring is a software option not requiring any additional hardware. It can be activated to achieve an estimation (5% accuracy) of the instantaneous performances of the chiller in terms of:

- Cooling Capacity

- Power Input
- Efficiency-COP

An integrated estimation of these quantities is provided:

1. iCM Standard for settings and configuration contact servicesupport@daikinapplied.eu
2. iCM Advanced for settings and configuration contact servicesupport@daikinapplied.eu



After termination of the Software Options configuration, it's necessary to restart the controller to activate the settings made through the "Apply changes" command.

7.5 Twin evaporator pump setting

In the case of twin evaporator pumps, set the automatic start-up management pumps.

1. Enter technician password in the controller
2. Open the menu:

Main Menu → View / Set Unit → Pumps → Evp Pmp Ctrl → Auto

7.6 Alarm Limits

On the unit controller, enter the "Technician password" and set the alarm limits in the following menu:

Main Menu → Commission Unit → Alarm Limits




At the end of the Alarm Limits setting a restart of the controller ("Apply Changes") is required BEFORE to proceed with the startup of the unit.

7.7 Energy Meter


If the unit is provided with Opt.16/16a, proceed with the energy meter settings check.

Function of the buttons:

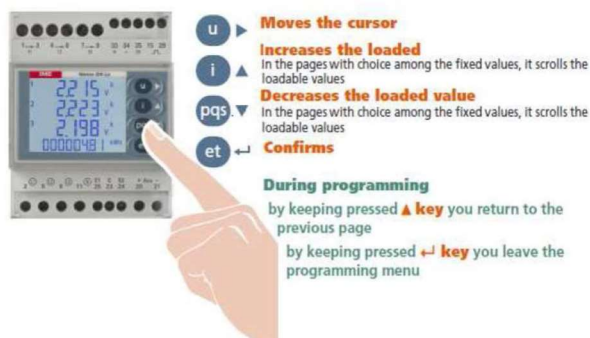

Access the setup menu


- 1) press "et " repeatedly until the page is displayed: "nEMo D4L "
- 2) Press and hold the "et " button until you see the page: "PASS "
- 3) Enter the password "1000" and confirm with the "et " key.

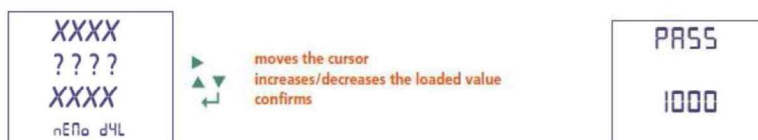

The "arrow" ▶ is used to move between the various digits, while ▲ ▼ is used to increment or decrement the numerical value of each digit. The ENTER key is used to confirm the password.


Depending on the wiring configuration, the respective programming scheme must be selected

- 1) log in with the password "1000 "
- 2) press the "et " button repeatedly until the page is displayed: "SYS "
- 3) Select the desired configuration: **3-2e** if the number of current transformers is 2, which is the standard configuration.

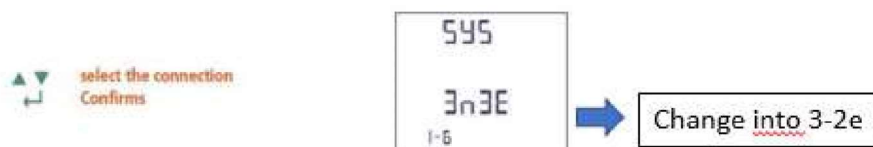


In case the energy meter is integrated in the modbus communication network of the POL687 controller of the chiller unit , the modbus parameters of the Nemo energy meter needs to be updated. It will be necessary to configure the address, transmission speed and parity bit on the energy meter corresponding to those on the chiller controller (POL 687).

- 1) log in with the password "1000 "
- 2) press "et " repeatedly until the page is displayed: "MDB Addr "
- 3) Select Address **20**
- 4) press "et " repeatedly until the page is displayed: "MDB BAud "
- 5) Select the baud rate **19200**
- 6) press "et " repeatedly until the page is displayed: "MDB par "
- 7) Select **None** Parity bit

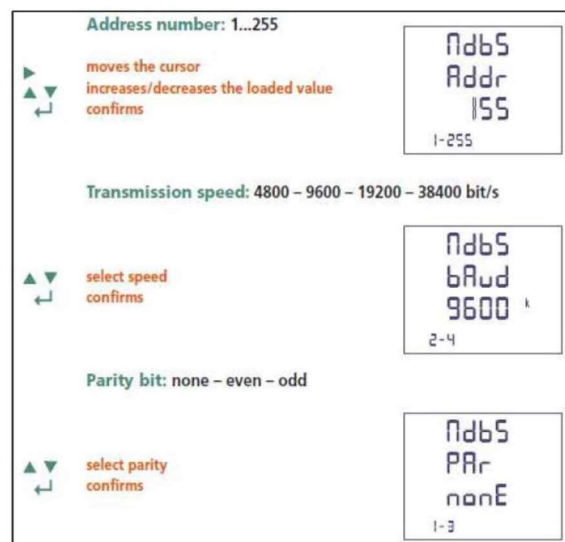

Set the transformation ratio of the current transformers (CT ratio)

On the label of the CT it's indicated what the maximum primary and secondary currents are. For example max primary current 1250A / max secondary current 5A gives an CT ratio of 250 (1250/5)

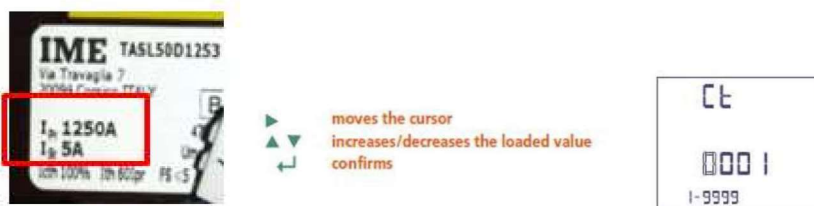

Warning: the nominal current value at the Ime Nemo Energy meter input terminals should be between 1A~5A. Do not use CT's exceed this range in order to avoid damage to the energy meter!

7.8 Pre-Running Adjustments



It is highly recommended to use a double sample sensor for the calibration of temperature sensors

7.8.1 Check and calibration of unit water side temperature sensors

Calibration of unit temperature sensors is a fundamental step for the correct operation of the unit.

There are three temperature sensors to be calibrated:

- Evaporator LWT
- Evaporator EWT
- Condenser LWT
- Condenser EWT

7.8.1.1 Evaporator Leaving Water Temperature

- Place the sample and Evap LWT sensors in a container with ice
- Enter in *Commission Unit* → *Sensors Calibration* → *Unit* menu and then compare the Evap LWT value with that detected by the sample sensor
- If the temperature value measured by the unit sensor is different from the sample one, set the difference in the *Offset* parameter.



Make sure to have a good water/ice mix and wait for the water/ice system temperature to stabilize before to proceed with the calibration.

Place both sensors (sample and unit) in the middle of the container in order to not affect the readings.

7.8.1.2 Evaporator Entering Water Temperature

- Place the sample and Evap EWT sensors in a container with ice
- Enter in *Commission Unit* → *Calibrate Sensors* → *Unit* menu and then compare the Evap EWT value with that detected by the sample sensor
- If the temperature value measured by the unit sensor is different from the sample one, set the difference in the *Offset* parameter.



Make sure to have a good water/ice mix and wait for the water/ice system temperature to stabilize before to proceed with the calibration.

Place both sensors (sample and unit) in the middle of the container in order to not affect the readings.

7.8.1.3 Condenser Leaving Water Temperature

- Place the sample and Cond LWT sensors in a container with ice
- Enter in *Commission Unit* → *Sensors Calibration* → *Unit* menu and then compare the Cond LWT value with that detected by the sample sensor
- If the temperature value measured by the unit sensor is different from the sample one, set the difference in the *Offset* parameter.



Make sure to have a good water/ice mix and wait for the water/ice system temperature to stabilize before to proceed with the calibration.

Place both sensors (sample and unit) in the middle of the container in order to not affect the readings.

7.8.1.4 Condenser Entering Water Temperature

- Place the sample and Cond EWT sensors in a container with ice
- Enter in *Commission Unit* → *Sensors Calibration* → *Unit* menu and then compare the Cond EWT value with that detected by the sample sensor
- If the temperature value measured by the unit sensor is different from the sample one, set the difference in the *Offset* parameter.



Make sure to have a good water/ice mix and wait for the water/ice system temperature to stabilize before to proceed with the calibration.

Place both sensors (sample and unit) in the middle of the container in order to not affect the readings.

7.8.2 Check and calibration of unit refrigerant side sensors

Calibration of circuit temperature sensors is a fundamental step for the correct operation of the unit.

There are three temperature sensors to be calibrated (for each circuit):

- The Evap pressure.
- The Cond pressure.
- The Liquid temperature sensor.

7.8.2.1 Suction Temperature sensor

- Place the sample and suction temperature sensors in a container with ice
- Enter in *Commission Unit* → *Sensors Calibration* → *Compressor 1* menu and then compare the *Suction Tmp* value with that detected by the sample sensor
- If the temperature value measured by the unit sensor is different from the sample one, set the difference in the *Suction Offset* parameter.



Make sure to have a good water/ice mix and wait for the water/ice system temperature to stabilize before to proceed with the calibration.

Place both sensors (sample and unit) in the middle of the container in order to not affect the readings.



Suction temperature sensor is the most crucial of chiller's sensors as will guarantee the correct working of the EXV and consequent safe compressor running

7.8.2.2 Economizer temperature sensor

- Place the sample and discharge temperature sensors in ambient temperature
- Enter in *Commission Unit* → *Sensors Calibration* → *Compressor 1* menu and then compare the *Discharge Tmp* value with that detected by the sample sensor
- If the temperature value measured by the unit sensor is different from the sample one, set the difference in the *Disch Offset* parameter.



Make sure to have a stable air conditions and wait until read unit and sample temperatures are stabilized respect to air ambient temperature before to proceed with the calibration.

7.8.2.3 Discharge temperature sensor

- Place the sample and discharge temperature sensors in ambient temperature
- Enter in *Commission Unit* → *Sensors Calibration* → *Compressor 1* menu and then compare the *Discharge Tmp* value with that detected by the sample sensor
- If the temperature value measured by the unit sensor is different from the sample one, set the difference in the *Disch Offset* parameter.



Make sure to have a stable air conditions and wait until read unit and sample temperatures are stabilized respect to air ambient temperature before to proceed with the calibration.

7.8.2.4 Liquid temperature

- Place the sample and Subcooling temperature sensors in ambient temperature
- Enter in *Commission Unit* → *Calibrate Sensors* → *Compressor 1* menu and then compare the *Liquid Temp* value with that detected by the sample sensor
- If the temperature value measured by the unit sensor is different from the sample one, set the difference in the *Liquid Offset* parameter.

Refer to **IOM pages 4-6** for the complete overview of the components positioning.

7.9 Dry Tests

Perform the Dry Tests by setting the unit in "test mode":

1. Enter the "Technician Password" on the controller
2. Go in *Main Menu* → *Unit Mode* → *Mode*
3. Set *Test*

All the dry tests are performable through the following menu:

Main Menu → *Commission Unit* → *Manual Control*

7.9.1 Unit Alarm

Check the correct activation of the software general alarm:

Main Menu → *Commission Unit* → *Manual Control* → *Unit* → *Unit Alarm*

7.9.2 Compressor Alarm

Check the correct activation of the software general alarm:

Main Menu → *Commission Unit* → *Manual Control* → *Unit* → *Compressor Alarm*

7.9.3 Evap Pump #1/#2

Check the correct activation of the water pump (if it is controlled by the unit):

Main Menu → *Commission Unit* → *Manual Control* → *Unit* → *Pump #1/#2* → set *Pump Speed* in %.

7.9.4 Cond Pump #1/#2

Check the correct activation of the water pump (if it is controlled by the unit):

Main Menu → *Commission Unit* → *Manual Control* → *Unit* → *Pump #1/#2* → set *Pump Speed* in %.

7.9.5 Tower Fan Step

Check the correct activation of the cooling tower fan steps (if it is controlled by the unit):

Main Menu → *Commission Unit* → *Manual Control* → *Unit* → *Tower Step X*

7.9.6 Tower VFD

Check the correct modulation of the cooling tower fan VFD (if it is controlled by the unit):

Main Menu → *Commission Unit* → *Manual Control* → *Unit* → *Tower VFD* → set *Fan Speed* in %.

7.9.7 3 Way Valve

Check the correct modulation of the 3 Way Valve (if it is controlled by the unit):

Main Menu → *Commission Unit* → *Manual Control* → *Unit* → *3 Way Valve* → set % opening.

7.9.8 Expansion Valve

Verify the correct operation of the EXV valves:

Main Menu → Commission Unit → Manual Control → Compressor → EXV Position

And set the opening percentage, it is possible to verify the movement of the piston inside the expansion valve through the glass port on it.

7.10 Service Valves check

As follows a list of all the service valves that need to be opened:

1. Liquid line
2. Motor cooling line
3. Hot Gas Bypass line (if option)

8 Start-Up

The first data acquisition must be performed in "Cooling mode", in order to also check the correctness of the refrigerant charge by measuring the subcooling.

To do that, follow these steps:

1. Enter the "Technician Password" on the controller
2. Go in Main Menu → Unit Mode → Mode and set Cool
3. Go in *Main Menu → Unit Enable*
4. Set *Compressor 1 → Enable*
5. Set *Unit → Enable*
6. Set on Local the switch Q0

8.1 Running Adjustments

Running Adjustments must be performed while the unit is running near the rating conditions.



Make sure that the Unit is working in cooling mode in stable conditions in order to don't affect the following operations result



Make sure that the unit status is "Run: Normal" before to proceed with the Running Adjustments

8.1.1 Check and calibration of pressure transducers

Calibration of pressure transducers is a fundamental step for the correct operation of the unit. There are three pressure sensors to be calibrated:

- The suction pressure transducers
- The discharge pressure transducers
- Economizer Pressure

8.1.2 Evaporator Pressure check

Double check the evaporator pressure transducer:

- Connect the sample transducer to the "T shape" pressure port on which the suction pressure transducer is installed.

- With the unit on, with the *Suction Temperature* of $7^{\circ}\text{C} \pm 1^{\circ}\text{C}$ and before making gas charge adjustments, enter the *Commission Unit* → *Calibrate Sensors* → *Compressor 1* menu and then compare the *Evap Pressure* value with that detected by sample transducer
- If the pressure value measured by the unit transducer is different from the sample one, set the difference in the *Evap Pr Offset* parameter.



Sample transducer is the measuring device has been calibrated and it must be very accurate.



If this difference is greater than ± 100 kPa replace the transducer and repeat the operation.



Evaporator pressure transducer is the most crucial of chiller's transducer as will guarantee the correct working of the EXV with consequent safe compressor running and since all low-pressure safeties are based on its readings.

8.1.3 Condenser Pressure check

Double check the condenser pressure transducer:

- Connect the transducer to the "T shape" pressure port on which the discharge pressure transducer is installed.
- With the unit on, enter in *Commission Unit* → *Calibrate Sensors* → *Compressor 1* menu and then compare the *Cond Pressure* value with the one detected by the sample transducer. If the value of the pressure measured by the unit transducer is different from the sample one, set the difference in the *Cond Pr Offset* parameter.



If this difference is greater than ± 100 kPa replace the transducer and repeat the operation.

8.1.4 Condenser Pressure check

Double check the economizer pressure transducer:

- Connect the transducer to the "T shape" pressure port on which the economizer pressure transducer is installed.

With the unit on, enter in *Commission Unit* → *Calibrate Sensors* → *Compressor 1* menu and then compare the *ECO Pressure* value with the one detected by the sample transducer. If the value of the pressure measured by the unit transducer is different from the sample one, set the difference in the *Cond Pr Offset* parameter.

9 Running Safeties Test

9.1.1 Flow Switches

With the running unit, disable the water pumps and check if "Water Flow Loss" alarm appears after 30sec. If not, check proceed with the check of correct flow switch installation and calibration.

9.2 Data acquisition



Make sure that the unit is working in stable conditions to don't affect the Data Acquisition

- Data acquisition must be performed according to the **Data Acquisition** section of the Commissioning Sheet.
- Data acquisition must perform in Chiller and Heat Pump mode.

To select the circuit working mode refer to the following setting:

Start in Cool Mode:

Main Menu → Unit Mode → Cool

Enable this setpoint for testing the unit in Mechanical mode:

- It is recommended to let the compressor reach the 100% of capacity before to proceed with the data acquisition (according to the plant load conditions).

To evaluate the stable operation of the unit check, following conditions must be satisfied:

- Compressor Status equal to "Run=Normal"
- ELWT and/or CLWT is as near as possible to the relative setpoint
- EXV is working in Superheat mode:
 - Main Menu → View/Set Circuit → EXV Cool/Heat → State = SSH
- SSH is equal to the SSH target for 5 minutes continuously:
 - Main Menu → View/Set Circuit → EXV Cool/Heat → SSH Target



CLIMATIX Scope Light data recording during commissioning is strongly suggested.
For all material required for the recording get in contact with servicesupport@daikinapplied.eu

Impostazioni Parametri Inverter Danfoss per Pompe				
Start-up Wizard for Open Loop Applications				
Parametro	Descrizione	Settings	Default	NOTE
0-03	Regional Settings	default	[0] International	
0-06	Grid Type	[12] 380-440V/50Hz	[12] 380-440V/50Hz	Verificare Tensione di alimentazione su R.M.
1-10	Motor Construction	default	[0] Asynchron	
1-20	Motor Power	default	Size related	Verificare Targa Motore
1-22	Motor Voltage	400 V	Size related	Verificare Targa Motore
1-23	Motor Frequency	50 Hz	Size related	Verificare Targa Motore
1-24	Motor Nominal Current	default	Size related	Verificare Targa Motore
1-25	Motor Nominal Speed	See Pump Motor Label	Size related	Verificare Targa Motore
1-73	Flying Start	default	[0] Disabled	
3-02	Minimum Reference	-	0	Con velocità comandata dal cliente, impostare a 40Hz.
3-03	Maximum Reference	50	50	Come 1-23 a meno che non sia riportata su R.M. una velocità inferiore
3-41	Ramp-Up Time	10 s	Size related	Tempo per arrivare a 1-23 frequency
3-42	Ramp-Down Time	10 s	Size related	Tempo per fermarsi da 1-23 frequency
4-12	Motor Speed Low Limit [Hz]	default	0	
4-14	Motor Speed High Limit [Hz]	default	65	
4-19	Max Output Frequency	default	Size related	
5-40	Function Relay [0]	default	Alarm	
5-40	Function Relay [1]	default	Drive running	
6-10	Terminal 53 Low Voltage	default	0.07 V	
6-11	Terminal 53 High Voltage	default	10 V	
6-12	Terminal 53 Low Current	default	4 mA	
6-13	Terminal 53 Low Voltage	default	20 mA	
6-19	Terminal 53 mode	default	1	Voltage input - [0] commuta all'ingresso in corrente

Table A - Pump inverter settings

Pre-Start Checklist – Centrifugal Chillers

Must be completed, signed and provided to Daikin Applied Europe Service Dept. at least 2 weeks prior to requested start date.

Job Name					
Installation Location					
Customer Order Number					
Model Number(s)					
E.O./G.O. Number(s)					
Chilled Water	Yes	No	N/A	Initials	
Piping Complete					
Water Quality in compliance with Daikin Specifications					
Water System- flushed, filled, and vented; Water treatment in place					
Strainer installed on the water pipe connected to the heat exchanger inlet					
Pumps installed and operational (rotation checked, strainers installed and cleaned)					
Controls operational (3-way valves, face/bypass dampers, bypass valves, etc.)					
Water system operated and tested; flow meets unit design requirements					
Condenser Water	Yes	No	N/A	Initials	
Piping Complete					
Water Quality in compliance with Daikin Specifications					
Cooling tower flushed, filled, and vented; Water treatment in place					
Strainer installed on the water pipe connected to the heat exchanger inlet					
Pumps installed and operational (rotation checked, strainers installed and cleaned)					
Controls (3-way valves, bypass valves, etc.) operable per IM or IOM					
Water system operated and flow balance to meet unit design requirements					
Electrical	Yes	No	N/A	Initials	
115 volt service completed, but not connected to control panel (when applicable)					
Unit correctly power supplied as per Daikin Specification (phase sequence checked)					
Line Power leads(a) cable length correct (same length) and connected to starter *					
Load leads(b) cable length correct (same length) and connected to compressor *					
All interlock wiring complete and compliant with Daikin specifications					
Starter complies with Daikin specifications (if not supplied by Daikin)					
Oil cooler solenoid wired to control panel as shown on wiring diagram					
Pump starters and interlocks wired					
Cooling tower fans and controls wired					
Wiring complies with International Electrical Code and local codes					
Unit's control side powered on (Note 1)					
Miscellaneous	Yes	No	N/A	Initials	
Oil cooled water piping complete and strainer installed on plate's inlet					
Relief valve piping complete					
Thermometers, wells, gauges, control, etc., installed					
Minimum system load of 80% capacity available for continuous 4 hours for testing/adjusting					
Document Attached: Selection Sheet from Daikin Tools					

Notes:

- Unit's control side must be powered on for at least for 48 hours before commissioning visit to enable the oil heaters and guarantee the required oil temperature for the starting of the unit.

* Does not apply to on-board VFD units

Contractor Representative

Signed: _____
 Name: _____
 Company: _____
 Date: _____
 Phone/Email: _____

Daikin Representative

Signed: _____
 Name: _____
 Company: _____
 Date: _____
 Phone/Email: _____

© Daikin Applied Europe

Table B - Pre-Commissioning Sheet

Commissioning Sheet (Fourth form)											
Client:		CERN		Address :		CERN, CH-1211 Geneva 23		Date :		23/07/2020	
Responsible:		Mr. Anders Andersen		Telephone no. :		0041754113339		Chiller ID :		UHAA-0401	
Chiller Model :		DWSC087LF017		Serial no. :		CH-19H01913-KKKKXX		Cooling power :		1400KW	
Refrigerant:		R513A		Oil :		Mobil - EAL Arctic 46					
Commissioned :		23/07/2020		Location :		SU4					
Service Technician:				Giuseppe Liotra - Marco Lo Presti							
A PRE START UP CHECK LIST (INSTALLATION)				C START UP CHECK LIST FOR CENTRIFUGALS							
Any shipping damage				☐ YES	☐ NO	REFRIGERANT CIRCUIT					
Compressor model C1 / Serial No.				☐ YES	☐ NO	Water pressure drop on the oil cooler				C1	C2
Anti vibration pads installed				☐ YES	☐ NO	Oil pressure before filter					
Check electrical connections				☐ YES	☐ NO	Oil pressure after filter					
Oil Heaters were on before start up				☐ YES	☐ NO	Entering oil temperature in oil cooler				54	
Fully leak tested system				☐ YES	☐ NO	Leaving oil temperature in oil cooler				55.9	
Compressor model C2 / Serial No.				☐ YES	☐ NO	Entering water temperature in oil cooler				10	
Compressor model C3 / Serial No.						D RUNNING DATA					
Compressor model C4 / Serial No.						REFRIGERANT CIRCUIT				C1	C2
Compressor model C5 / Serial No.						Percentage load for measurements (%)				95%	C3
Compressor model C6 / Serial No.						Comp running amps L1 [A]				55.7	C4
Compressor model C7 / Serial No.						Comp running amps L2 [A]				55.8	X00%
Compressor model C8 / Serial No.						Comp running amps L3 [A]				53.5	X00%
						Phases Unbalance (%)				1%	X00%
EVAPORATOR				Evap1	Evap2	Full liquid sight glass				☐	☐
Evaporator water type				Glycol	Glycol	Suction pressure [kPa]				263.4	
Glycol In system (TYPE)						Suction temperature [°C]				4.5	
Glycol In system (%)						Suction superheat [°C]				1.2	
Pressure drop evaporator [kPa]				11	11.2	Discharge pressure [kPa]				846	
Design pressure drop [kPa]				23.8	23.8	Discharge temperature [°C]				40.9	
Evaporator water flow rate [m³/h]				240	240	Discharge line temperature [°C]				5.5	
Design flow rate [m³/h]				240	240	Subcooling [°C]				4.5	
Check flow switch				☐	☐	EXV Position steps (%)				65%	
Freeze stat set point common				☐	☐	Oil pressure [kPa]				668net	
CONDENSER (WATER COOLED)				Cond1	Cond2	Oil filter pressure drop [Max = 250kPa]				NA	
Pressure drop evaporator [kPa]				25	25	Oil level checked on the compressor				☐	☐
Design pressure drop [kPa]				25.8	25.8	EVAPORATOR				Evap1	Evap2
Evaporator water flow rate [m³/h]				181.5	181.5	Inlet water temperature [°C]				9.6	
Design flow rate [m³/h]				181.5	181.5	Outlet water temperature [°C]				9.5	
Check flow switch				☐	☐	Evaporator approach [°C]				2.2	
Condenser water source:				☐ Waterworks	☐ Other	Check operation of LWT sensor				☐	☐
B PRE START UP CHECK LIST (ELECTRICAL)				CONDENSER (AIR COOLED)				Cond1	Cond2		
Software version				WCFU300DIA				Inlet water temperature [°C]	24.3		
Unit water temp set point				5.0				Outlet water temperature [°C]	35.5		
Mains voltage L1-L2 [V]				112.4				Condenser approach	1.9		
Mains voltage L2-L3 [V]								CONDENSER (AIR COOLED)	C1	C2	
Control voltage 220V circuit [V]								Fan steps	Yes	No	
Control voltage 24V circuit [V]				T3: 23.7 T2:24.9 V1R:12				Fans running	☐	☐	
Control voltage 110V [V]				112.4				Fans 1 Current [A]			
Main power supply frequency [Hz]				50				Fans 2 Current [A]			
Check oil heaters (measure current) [A]				C1	C2	C3	C4	Fans 3 Current [A]			
Check default parameter				2.5	2.5	1.5	1.5	Fans 4 Current [A]			
Optimize parameters for site conditions				☐	☐	☐	☐	Fans 5 Current [A]			
Comp overload setting				☐	☐	☐	☐	Fans 6 Current [A]			
Start stat fitted				☐	☐	☐	☐	Fans 7 Current [A]			
				☐	☐	☐	☐	Fans 8 Current [A]			
				☐	☐	☐	☐	Fans 9 Current [A]			
				☐	☐	☐	☐	Fans 10 Current [A]			
Commissioning performed at 95% of nominal capacity due to wrong settings on CERN Starter device. The unit will be limited to 80% till CERN will fix the starter configuration. The condenser water pump should switching off with some delay respect the unit in order to avoid any alarm on											

